

ALPHABETICAL INDEX

A

<p>ACCUMULATOR ASSY., FUEL PUMP TO CARBURETOR PULSE REDUCER. 3.910</p> <p>ACTIVATOR, TRANSMISSION PARKING BRAKE 4.290</p> <p>ACTUATOR ASSY., HEADLAMP OR GRILLE . . 2.760</p> <p>ACTUATOR ASSY., TRANSMISSION PARKING BRAKE 4.290</p> <p>ACTUATOR, BRAKE ADJUSTING 5.103</p> <p>ACTUATOR, CRUISE CONTROL REGULATOR . 3.885</p> <p>ACTUATOR, IGNITION SWITCH WARNING OR LOCK 2.195</p> <p>ACTUATOR, PARKING BRAKE SIGNAL 4.589</p> <p>ACTUATOR, THROTTLE RETURN OR SLOW IDLE 3.440</p> <p>ACTUATOR, TILT WHEEL 6.514</p> <p>ACTUATOR, TURN SIGNAL 2.895</p> <p>ADAPTER ASSY., SUPERLIFT SHOCK ABSORBER COMPRESSOR (ON REGULATOR) 7.465</p> <p>ADAPTER ASSY., TRANSMISSION SPEEDOMETER DRIVE GEAR RATIO 4.329</p> <p>ADAPTER, BRAKE BACKING PLATE 5.001</p> <p>ADAPTER, BRAKE HOSE 4.681</p> <p>ADAPTER, CARBURETOR AIR CLEANER 3.410</p> <p>ADAPTER, CLIMATIC COMBUSTION CONTROL 3.417</p> <p>ADAPTER, COLD AIR DISTRIBUTOR 9.263</p> <p>ADAPTER, COLD AIR DISTRIBUTION 9.257</p> <p>ADAPTER, CRUISE CONTROL REGULATOR . . 3.885</p> <p>ADAPTER, CRUISE CONTROL SELECTOR . . . 3.883</p> <p>ADAPTER, ENGINE OIL FILTER 1.837</p> <p>ADAPTER, ENGINE OIL LEVEL INDICATOR . . 1.516</p> <p>ADAPTER, EVAPORATOR BLOWER 9.215</p> <p>ADAPTER, FLUID METERING VALVE 3.364</p> <p>ADAPTER, FUEL TANK 3.003</p> <p>ADAPTER, HEATER BLOWER MOTOR 8.857</p> <p>ADAPTER, HEATER 8.858</p> <p>ADAPTER, OUTSIDE AIR 9.789</p> <p>ADAPTER PKG., AUTOMATIC THROTTLE . . . 3.880</p> <p>ADAPTER PKG., CARBURETOR OUTSIDE AIR INDUCTION 3.417</p> <p>ADAPTER PKG., COMPRESSOR 3.342</p> <p>ADAPTER PKG., COMPRESSOR MOUNTING . . 9.171</p> <p>ADAPTER PKG., HEADLAMP MOUNTING . . . 2.726</p> <p>ADAPTER PKG., POWER STEERING 6.508</p> <p>ADAPTER PKG., SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL (AUTOMATIC FILL) 7.475</p> <p>ADAPTER, STEERING SHAFT 6.521</p> <p>ADAPTER, TRANSMISSION SPEEDOMETER DRIVEN 4.337</p> <p>ADAPTER, TURBO CARBURETOR BOOST PRESSURE OR LIMIT 3.374</p> <p>ADAPTER, TURBO FLUID & WATER 3.372</p> <p>ADAPTER, WINDSHIELD DEFROSTER 9.779</p> <p>ADHESIVE, BODY MAINTENANCE 8.800</p> <p>ADHESIVE, ENGINE VALVE ROCKER COVER . 0.423</p> <p>ADHESIVE, TRANSMISSION 4.103</p> <p>ADJUSTER ASSY., STEERING GEAR WORM THRUST BEARING 6.830</p> <p>ADJUSTER, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING 3.887</p> <p>ADJUSTER KIT, STEERING SHAFT 6.521</p> <p>ADJUSTER PKG., BRAKE ADJUSTING 5.103</p> <p>ADJUSTER, STEERING GEAR PITMAN SHAFT LASH 6.822</p> <p>ALBUM, STEREO TAPE PLAYER 9.670</p> <p>AMMETER ASSY., IGNITION 2.515</p> <p>AMPLIFIER, AIR CONDITIONING CONTROL . . 9.275</p> <p>AMPLIFIER, HEADLAMP OFF-DELAY CONTROL (NIGHT-WATCH) 2.485</p> <p>AMPLIFIER, IGNITION DISTRIBUTOR (ULTRA</p>	<p>HIGH VOLTAGE) 2.383</p> <p>ANTENNA ASSY., CAR RADII 9.645</p> <p>ANTENNA PKG., CAR RADIO 9.645</p> <p>ANTI FOAM, SERVICE MAINTENANCE 8.800</p> <p>APPLIQUE, AIR CONDITIONING CONTROL . . 9.279</p> <p>APPLIQUE, AIR CONDITIONING TEMPERATURE & FAN (AT DASH) 9.273</p> <p>APPLIQUE, COLD AIR 9.264</p> <p>APPLIQUE, HEADLAMP DIMMER 2.459</p> <p>APPLIQUE, HEATER CONTROL 8.852</p> <p>APPLIQUE, RADIATOR GRILLE 1.268</p> <p>APPLIQUE, REAR BUMPER BAR 7.832</p> <p>APPLIQUE, STEREO TAPE PLAYER 9.670</p> <p>APPLIQUE, TRANSMISSION 4.020</p> <p>ARM, AIR CONDITIONING CONTROL 9.275</p> <p>ARM ASSY., FRONT WHEEL LOWER CONTROL 6.168</p> <p>ARM ASSY., FRONT WHEEL UPPER CONTROL ARM 6.168</p> <p>ARM ASSY., REAR SUSPENSION CONTROL . . 5.382</p> <p>ARM ASSY., STEERING IDLER ARM 6.895</p> <p>ARM ASSY., STEERING PITMAN 6.859</p> <p>ARMATURE, GENERATOR 2.279</p> <p>ARMATURE, STARTING MOTOR 2.043</p> <p>ARM, CARBURETOR METERING ROD OR THROTTLE SHAFT 3.807</p> <p>ARM, CARBURETOR PUMP 3.845</p> <p>ARM, CRUISE CONTROL REGULATOR 3.885</p> <p>ARM, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING 3.887</p> <p>ARM, DELCOTRON BRUSH HOLDER 2.291</p> <p>ARM, ENGINE INTAKE & EXHAUST VALVE ROCKER 0.333</p> <p>ARM KIT, STEERING IDLER ARM 6.895</p> <p>ARM PKG., REAR SUSPENSION CONTROL . . . 5.382</p> <p>ARM PKG., SUPERLIFT SHOCK ABSORBER COMPRESSOR ASSY. 7.460</p> <p>ARM, STEERING IDLER (WITH SEAL AND BUSHING) 6.231</p> <p>ARM, STEERING KNUCKLE 6.103</p> <p>ARM, TORSION BAR 7.105</p> <p>ARRESTER, CRANKCASE VENTILATION 1.745</p> <p>ASPIRATOR, AIR CONDITIONING CONTROL . . 9.275</p> <p>ASPIRATOR, HEATER 8.858</p> <p>AUXILIARY PKG., TRANSMISSION VACUUM MODULATOR 4.205</p> <p>AXLE ASSY., FINAL DRIVE ASSY. (WITH GEARS-LESS SHAFTS) 5.504</p> <p>AXLE ASSY., REAR AXLE 5.387</p>
---	--

B

<p>BACK PLATE, AIR CONDITIONING CONTROL . 9.275</p> <p>BACK PLATE, HEATER (AT DASH) 8.849</p> <p>BAFFLE, AIR INJECTION REACTOR 3.675</p> <p>BAFFLE ASSY., CRANKCASE VENTILATOR . . 1.780</p> <p>BAFFLE, CARBURETOR FLOAT BOWL 3.734</p> <p>BAFFLE, CARBURETOR FUEL INLET 3.740</p> <p>BAFFLE, CARBURETOR MAIN METERING (HI-ALTITUDE) 3.792</p> <p>BAFFLE, CAR HEATER 8.845</p> <p>BAFFLE, ENGINE CRANKCASE OIL FILLER PASSAGE 1.750</p> <p>BAFFLE, ENGINE CRANKCASE OIL 1.430</p> <p>BAFFLE, ENGINE VALVE ROCKER ARM OIL . . 0.354</p> <p>BAFFLE, EXHAUST MUFFLER 3.704</p> <p>BAFFLE, FRONT BUMPER BAR ATTACHING . . 7.836</p> <p>BAFFLE, FRONT END PANEL 1.263</p> <p>BAFFLE, FRONT FENDER FILLER 8.160</p> <p>BAFFLE, FRONT PARKING & SIGNAL LAMP . . 2.587</p> <p>BAFFLE, FRONT PRIMARY BUMPER BAR . . . 7.831</p> <p>BAFFLE, HEATER CORE 8.854</p>

BAFFLE, HEATER	8.858	BASE, MANUAL ANTENNA	9.647
BAFFLE, INTAKE MANIFOLD	3.270	BASE PLATE, AIR CONDITIONING CONTROL	9.275
BAFFLE, POWER BRAKE AIR CLEANER	4.913	BASE PLATE, HEATER (AT DASH)	8.849
BAFFLE, PROPELLER SHAFT CENTER BEARING	5.601	BEARING, ACCELERATOR PEDAL	3.454
BAFFLE, RADIATOR CORE SUPPORT	1.272	BEARING, AIR INJECTION REACTOR PUMP	3.665
BAFFLE, REAR PRIMARY BUMPER BAR	7.831	BEARING ASSEMBLY, STEERING GEAR HOUSING END COVER	6.826
BAFFLE, RECIRCULATED AIR INTAKE	9.266	BEARING ASSY., DIFFERENTIAL OR FINAL DRIVE SIDE	5.536
BAFFLE, STOP & TAIL LAMP	2.681	BEARING ASSY., DIFFERENTIAL OR FINAL DRIVE PINION REAR	5.484
BAFFLE, STOP & TAIL LAMP	2.680	BEARING ASSY., FRONT WHEEL HUB (OUTER)	6.313
BAFFLE, TRANSMISSION SHIFT CONTROL LEVER	4.067	BEARING ASSY., PROPELLER SHAFT	5.436
BAIL, MASTER BRAKE CYL. FILLER	4.651	BEARING ASSY., REAR WHEEL	5.855
BALANCER, ENGINE CRANKSHAFT	0.659	BEARING ASSY., TRANSMISSION REAR OUTPUT SHAFT	4.408
BALL BRG., AIR CONDITIONING CONTROL	9.275	BEARING, CLUTCH RELEASE BEARING	0.799
BALL, CARBURETOR PUMP DISCHARGE CHECK	3.825	BEARING, CLUTCH RELEASE	0.852
BALL, CARBURETOR PUMP INTAKE CHECK	3.826	BEARING, COMPRESSOR PULLEY	9.181
BALL, COMPRESSOR CLUTCH	9.188	BEARING, COMPRESSOR	9.172
BALL, COMPRESSOR	9.172	BEARING, CRUISE CONTROL REGULATOR	3.885
BALL, CRUISE CONTROL REGULATOR	3.885	BEARING, DELCOTRON DRIVE END	2.306
BALL, FLUID METERING VALVE	3.366	BEARING, DELCOTRON STATOR END	2.298
BALL, IGNITION DISTRIBUTOR BREAKER	2.385	BEARING, DIFFERENTIAL OR FINAL DRIVE PINION FRONT	5.447
BALL JOINT, FRONT WHEEL LOWER CONTROL ARM	6.174	BEARING, ENGINE CAMSHAFT (FRONT INTERMEDIATE & CENTER)	0.543
BALL JOINT, HEADLAMP OR GRILLE	2.760	BEARING, ENGINE CAMSHAFT (REAR)	0.549
BALL JOINT PKG., UPPER CONTROL ARM SHAFT	6.164	BEARING, ENGINE CAMSHAFT (REAR INTERMEDIATE)	0.546
BALL KIT, STEERING GEAR WORM	6.844	BEARING, ENGINE CAMSHAFT (FRONT)	0.539
BALL & RETAINER, TRANSMISSION REVERSE OIL LINE CHECK VALVE (IN CASE)	4.106	BEARING, ENGINE CRANKSHAFT CLUTCH GEAR PILOT	0.649
BALL, STEEL	8.899	BEARING, FINAL DRIVE	5.515
BALL, STEERING GEAR WORM	6.844	BEARING, FRONT DRIVE AXLE SHAFT	6.056
BALL, TRANSMISSION CLUTCH	4.169	BEARING, FRONT WHEEL HUB (INNER)	6.311
BALL, TRANSMISSION DETENT OR INTERLOCK	4.311	BEARING, HEADLAMP HOUSING OR GRILLE	2.765
BALL, TRANSMISSION HAND SHIFT LEVER	4.008	BEARING, IGNITION DISTRIBUTOR SHAFT PILOT	2.375
BALL, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216	BEARING PKG., CRANKSHAFT REAR (UPPER & LOWER HALVES)	0.106
BALL, TRANSMISSION OIL CONTROL VALVE BODY	4.265	BEARING PKG., CRANKSHAFT REAR INTERMEDIATE (UPPER & LOWER HALVES)	0.103
BALL, TRANSMISSION OIL PUMP	4.226	BEARING PKG., CRANKSHAFT CENTER (UPPER & LOWER HALVES)	0.101
BALL, TRANSMISSION REVERSE OIL LINE CHECK VALVE (IN CASE)	4.106	BEARING PKG., CRANKSHAFT FRONT INTERMEDIATE (UPPER & LOWER HALVES)	0.099
BALL, TRANSMISSION SPEEDOMETER DRIVE GEAR	4.345	BEARING PKG., CRANKSHAFT FRONT (UPPER & LOWER HALVES)	0.096
BALL, TURN SIGNAL	2.895	BEARING PKG., CRANKSHAFT (COMPLETE)	0.094
BALL, VALVE PUSH ROD ADJUSTING (ON ROCKER ARM)	0.429	BEARING PKG., ENGINE CAMSHAFT THRUST	0.533
BAND, INSTRUMENT PANEL	9.735	BEARING PKG., ENGINE CONNECTING ROD (UPPER & LOWER HALVES)	0.616
BAND, POWER BRAKE VACUUM LINE	4.931	BEARING PKG., TRANSMISSION SUN	4.159
BAND, TRANSMISSION CLUTCH BRAKE BAND	4.251	BEARING PKG., TRANSMISSION FRONT UNIT TORUS	4.156
BAND, TRANSMISSION VACUUM MODULATOR	4.205	BEARING PKG., TRANSMISSION REAR INTERNAL	4.187
BAND, WHEEL LOCK CONTROL SENSOR	4.710	BEARING, POWER BRAKE POWER PISTON	4.924
BAR, FRAME SIDE RAIL FRONT (FRAME HORN)	7.009	BEARING, PROPELLER SHAFT CENTER	5.600
BAR, FRONT BUMPER BAR ATTACHING	7.836	BEARING, STEERING GEAR PITMAN SHAFT	6.786
BAR, FRONT FENDER	8.141	BEARING, STEERING GEAR THRUST	6.835
BAR, FRONT PRIMARY BUMPER BAR	7.831	BEARING, STEERING SHAFT CONNECTING	6.525
BAR, FRONT SUSPENSION MOUNTING CROSS	7.010	BEARING, STEERING SHAFT	6.521
BAR, FRONT TORSION BAR	7.412	BEARING, THROTTLE CONTROL	3.463
BAR, INSTRUMENT CLUSTER	9.745	BEARING, TRANSMISSION COUNTERSHAFT CLUSTER GEAR	4.422
BAR, PROPELLER SHAFT CENTER BEARING	5.598	BEARING, TRANSMISSION CLUTCH	4.164
BAR, RADIATOR CORE SUPPORT TIE BAR	1.271	BEARING, TRANSMISSION CASE FRONT	4.123
BAR, RADIATOR GRILLE	1.268	BEARING, TRANSMISSION DRIVE & DRIVEN	4.131
BAR, REAR PRIMARY BUMPER BAR	7.831	BEARING, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012
BAR, STOP & TAIL LAMP	2.680	BEARING, TRANSMISSION INPUT RING	4.158
BASE, CAR BUMPER JACK	8.820	BEARING, TRANSMISSION MAIN DRIVE GEAR	4.355
BASE, ENGINE OIL FILTER	1.837	BEARING, TRANSMISSION MAIN SHAFT	
BASE, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750		
BASE, ENGINE VACUUM	9.755		
BASE, HEADLAMP DIMMER	2.459		
BASE, IGNITION DISTRIBUTOR (ULTRA HIGH VOLTAGE)	2.383		

PILOT	4.352	BOLT, BATTERY	2.333
BEARING, TRANSMISSION PLANETARY CARRIER	4.176	BOLT, BATTERY HOLD-DOWN	2.334
BEARING, TRANSMISSION REAR UNIT SUN GEAR	4.172	BOLT, BODY TO FRAME MOUNTING	9.008
BEARING, TRANSMISSION SECOND SPEED GEAR THRUST	4.431	BOLT, BRAKE BALANCING & METERING VALVE	4.690
BEARING, TRANSMISSION SHIFT TUBE OR SHAFT	4.398	BOLT, BRAKE HOSE	4.681
BEARING & WASHER, TRANSMISSION REVERSE IDLER GEAR THRUST	4.027	BOLT, BRAKE HOSE TO WHEEL CYLINDER	4.671
BELLCRANK, CLUTCH RELEASE	4.437	BOLT, BRAKE PIPE REAR JUNCTION TO HOUSING	4.687
BELLCRANK, CRUISE CONTROL ACTUATING	0.852	BOLT, BUMPER TO FRAME BRACKET ATTACHING	7.874
BELLCRANK, HAND THROTTLE CONTROL	3.885	BOLT & BUSHING, SPEEDOMETER	9.761
BELLCRANK, HOOD RELEASE	3.483	BOLT, CAMSHAFT GEAR ATTACHING	0.738
BELLCRANK, THROTTLE CONTROL	8.080	BOLT, CAR BUMPER JACK	8.820
BELLCRANK, TRANSMISSION SHIFT CONTROL RELAY	3.463	BOLT, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
BELLOWS, CLUTCH PEDAL OR ROD	4.040	BOLT, CARBURETOR PUMP	3.842
BELLOWS, POWER BRAKE POWER CYLINDER	0.829	BOLT, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
BELT, AIR INJECTION REACTOR PUMP	4.922	BOLT, CARBURETOR TO MANIFOLD	3.726
BELT, AIR RIDE COMPRESSOR	1.066	BOLT, CHOKE AIR OR HEATER	3.603
BELTS, C.A.C., COMPRESSOR DRIVE	1.066	BOLT, CLUTCH COVER TO FLYWHEEL	0.862
BELTS, FAN & DELCOTRON DRIVE	1.066	BOLT, CLUTCH PEDAL ATTACHING	0.837
BELTS, POWER STEERING PUMP DRIVE	1.066	BOLT, CLUTCH PRESSURE PLATE RETRACTING SPRING	0.864
BELT, STEERING OIL PUMP	6.660	BOLT, CLUTCH RELEASE	0.852
BEZEL, BACK-UP LAMP	2.697	BOLT, CLUTCH RELEASE UPPER	5.158
BEZEL, CLOCK	9.772	BOLT, COMPRESSOR DISCHARGE HOSE	9.226
BEZEL, COLD AIR	9.264	BOLT, COMPRESSOR MOUNTING	9.171
BEZEL, CORNERING LAMP	2.585	BOLT, CONVERTER OR FLYWHEEL HOUSING (LOWER)	0.679
BEZEL, CRUISE CONTROL SELECTOR	3.883	BOLT, CRUISE CONTROL MOUNTING	3.885
BEZEL, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	BOLT, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
BEZEL, FRONT PARKING & SIGNAL LAMP	2.589	BOLT, CRUISE CONTROL REGULATOR MOUNTING	3.880
BEZEL, FUEL TANK (INST. PANEL UNIT)	3.108	BOLT, CRUISE CONTROL SELECTOR	3.883
BEZEL, INSTRUMENT CLUSTER	9.743	BOLT, CYLINDER HEAD ATTACH.	0.293
BEZEL NUT, HEATER CONTROL	8.852	BOLT, DELCOTRON ADJUSTING	2.317
BEZEL PKG., HAZARD WARNING OR MARKER LAMP	2.575	BOLT, DELCOTRON MOUNTING	2.277
BEZEL, REAR BUMPER BAR	7.832	BOLT, DELCOTRON THROUGH	2.316
BEZEL, STEERING COLUMN	6.518	BOLT, DIFFERENTIAL (CASE WITH GEARS)	5.510
BEZEL, STOP & TAIL LAMP	2.681	BOLT, DIFFERENTIAL (CASE ONLY WITH BOLTS)	5.510
BEZEL, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012	BOLT, DIFFERENTIAL OR FINAL DRIVE RING GEAR TO CASE	5.531
BEZEL, WHEEL DISC (COMPONENT PARTS)	5.871	BOLT, DIFFERENTIAL OR FINAL DRIVE ASSY.	5.506
BLOCK ASSY., ENGINE BLOCK (INCLUDES PISTONS, RINGS & BEARINGS)	0.033	BOLT, DIFFERENTIAL OR FINAL DRIVE PINION SHAFT LOCK	5.518
BLOCK ASSY., HORN RELAY & BATTERY CABLE JUNCTION	2.815	BOLT, ENGINE CONNECTING ROD BEARING CAP	0.623
BLOCK, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	BOLT, ENGINE CRANKSHAFT FLYWHEEL	0.666
BLOCK, CRUISE CONTROL REGULATOR	3.885	BOLT, ENGINE CRANKSHAFT	0.659
BLOCK, MAIN WIRING HARNESS FUSE	2.483	BOLT, ENGINE CRANKSHAFT BALANCER OR PULLEY	0.662
BLOCK, MASTER BRAKE CYL.	4.658	BOLT, ENGINE CRANKSHAFT BEARING CAP	0.056
BLOWER, FORCED AIR VENTILATION	9.790	BOLT, ENGINE FAN & WATER PUMP	1.062
BLOWER, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778	BOLT, ENGINE FLYWHEEL ATTACHING	0.669
BOARD, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	BOLT, ENGINE FRONT COVER	0.206
BODY ASSY., CARBURETOR THROTTLE	3.758	BOLT, ENGINE FRONT SUPPORT	0.004
BODY ASSY., CARBURETOR THROTTLE	3.729	BOLT, ENGINE MOUNT ATTACHING	0.002
BODY, ENGINE OIL PUMP	1.653	BOLT, ENGINE MOUNT ATTACHING	0.029
BODY, FLUID METERING VALVE	3.364	BOLT, ENGINE OIL FILTER	1.835
BODY, OUTSIDE AIR	9.789	BOLT, ENGINE OIL FILTER	1.837
BODY, STEERING OIL PUMP	6.608	BOLT, ENGINE OIL PAN ATTACHING	1.428
BODY, TRANSMISSION FRONT SERVO	4.226	BOLT, ENGINE OIL PUMP	1.653
BODY, TRANSMISSION OIL CONTROL VALVE BODY	4.265	BOLT, ENGINE OIL PUMP	1.723
BODY, TRANSMISSION OIL PUMP	4.224	BOLT, ENGINE STARTING MOTOR (INC. SOLENOID SWITCH)	2.041
BODY, TRANSMISSION STATOR CONTROL	4.235	BOLT, ENGINE TIMING CHAIN	0.724
BODY, TRANSMISSION STATOR CONTROL	4.122	BOLT, ENGINE VALVE PUSH ROD COVER TO BLOCK	0.446
BODY & WIRE, BACK-UP LAMP	2.697	BOLT, ENGINE VALVE ROCKER COVER	0.413
BODY & WIRE, PARKING LAMP	2.586	BOLT, ENGINE VALVE ROCKER SHAFT	0.349
BOLT, ACCELERATOR PEDAL	3.454	BOLT, ENGINE WATER (ON ENGINE)	1.153
BOLT, ACCELERATOR RETURN	3.459	BOLT, EVAPORATIVE EMISSION SYSTEM	3.130
BOLT, AIR INJECTION REACTOR PUMP	3.655	BOLT, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
BOLT, BATTERY CABLE OR STRAP	2.343		

BOLT, EXHAUST PIPE TO MANIFOLD	3.613	BOLT, REAR SUSPENSION LEAF SPRING . . .	7.518
BOLT, EXHAUST PIPE	3.609	BOLT, REAR WHEEL & BRAKE DRUM TO	
BOLT, FILLISTER HEAD SLOTTED	8.907	AXLE SHAFT FLANGE	5.812
BOLT, FINAL DRIVE	5.510	BOLT, REFRIGERANT COMPRESSOR	
BOLT, FINAL DRIVE MOUNTING	5.500	MOUNTING BRACKET	9.173
BOLT, FINAL DRIVE REAR PINION BEARING .	5.489	BOLT, RIDE STABILIZER SHAFT	7.242
BOLT, FLAT HEAD SLOTTED	8.908	BOLT, ROCKER PANEL MOLDING ATTACHING	8.309
BOLT, FLYWHEEL HOUSING	0.683	BOLT, ROUND HEAD CARRIAGE	8.903
BOLT, FRAME SECOND CROSS (TRANS.		BOLT, ROUND HEAD SLOTTED	8.906
MOUNTING)	7.011	BOLT, SHOCK ABSORBER ATTACHING	7.347
BOLT, FRONT BRAKE BACKING PLATE TO		BOLT, SPARE WHEEL	7.632
STRG. KNUCKLE	5.002	BOLT, STARTING MOTOR ATTACHING	2.077
BOLT, FRONT BUMPER BAR ATTACHING	7.836	BOLT, STEERING ARM & BACKING PLATE TO	
BOLT, FRONT DRIVE AXLE SHAFT	6.056	KNUCKLE	6.104
BOLT, FRONT DRIVE	6.055	BOLT, STEERING COLUMN ATTACHING	6.760
BOLT, FRONT FENDER	8.143	BOLT, STEERING GEAR HOUSING SIDE	
BOLT, FRONT FENDER TRIM	8.147	COVER	6.809
BOLT, FRONT PRIMARY BUMPER BAR	7.831	BOLT, STEERING GEAR HOUSING SIDE	6.807
BOLT, FRONT SUSPENSION MOUNTING		BOLT, STEERING GEAR MOUNTING	6.509
CROSS	7.010	BOLT, STEERING GEAR WORM BALL RETURN	
BOLT, FRONT TORSION BAR ADJUSTER	7.428	GUIDE	6.843
BOLT, FRONT WHEEL HUB	6.307	BOLT, STEERING IDLER ARM	6.896
BOLT, FRONT WHEEL LOWER CONTROL ARM		BOLT, STEERING LINKAGE SHOCK	
SHAFT TO FRAME	6.172	ABSORBER	6.865
BOLT, FRONT WHEEL LOWER CONTROL ARM		BOLT, STEERING OIL PUMP HOSE	6.672
& SHAFT	6.169	BOLT, STEERING OIL PUMP	6.635
BOLT, FRONT WHEEL TO HUB ATTACHING	6.335	BOLT, STEERING OIL PUMP MOUNTING	6.606
BOLT, FRONT WHEEL UPPER CONTROL ARM	6.178	BOLT, STEERING OIL PUMP	6.609
BOLT, FUEL LINE	3.163	BOLT, STEERING SHAFT	6.521
BOLT, FUEL PUMP MOUNTING	3.901	BOLT, STEERING SHAFT ANTI-THEFT	6.500
BOLT, FUEL TANK MOUNTING	3.023	BOLT, STEERING SHAFT CONNECTING	6.525
BOLT, HEADLAMP CONCEALING GRILLE OR		BOLT, STEERING TIE ROD END ADJUSTER . . .	6.234
HOUSING	2.775	BOLT, STEERING WHEEL	6.515
BOLT, HEADLAMP HOUSING OR GRILLE	2.765	BOLT, STEERING WHEEL SPOKE	6.512
BOLT, HEXAGON HEAD	8.900	BOLT, STEP	8.902
BOLT, HEX HEAD WASHER FACE	8.900	BOLT, STOP LAMP SWITCH	2.447
BOLT, HOOD HINGE ATTACHING	8.016	BOLT, SUCTION THROTTLING (P.O.A.)	9.198
BOLT, HOOD PANEL	8.024	BOLT, SUPERLIFT SHOCK ABSORBER	
BOLT, HOOD RELEASE	8.080	COMPRESSOR MOUNTING (AUTOMATIC	
BOLT, HORN RELAY & BATTERY CABLE		FILL)	7.452
JUNCTION	2.815	BOLT, THROTTLE CONTROL	3.430
BOLT, IGNITION COIL MOUNTING	2.183	BOLT, TORSION BAR	7.105
BOLT, IGNITION DISTRIBUTOR MOUNTING	2.363	BOLT, TRANSMISSION AUXILIARY COOLER	4.128
BOLT, IGNITION DISTRIBUTOR BREAKER		BOLT, TRANSMISSION CASE FRONT	4.123
LEVER OR CONTACT	2.387	BOLT, TRANSMISSION CASE AND OR	
BOLT, INTAKE & EXHAUST MANIFOLD	3.275	SPROCKET	4.105
BOLT, INTAKE MANIFOLD	3.270	BOLT, TRANSMISSION CASE	4.162
BOLT, MASTER BRAKE CYLINDER	4.648	BOLT, TRANSMISSION CASE EXTENSION	4.319
BOLT, MASTER BRAKE CYLINDER	4.653	BOLT, TRANSMISSION FLOOR SHIFT	4.047
BOLT, MASTER BRAKE CYLINDER	4.661	BOLT, TRANSMISSION FRONT UNIT TORUS	4.155
BOLT, MASTER BRAKE CYL. PISTON	4.656	BOLT, TRANSMISSION GOVERNOR	4.256
BOLT, MASTER BRAKE PEDAL	4.625	BOLT, TRANSMISSION HAND SHIFT LOWER	
BOLT, MASTER BRAKE PEDAL MOUNTING	4.634	(FLOOR SHIFT TYPE TRANS.)	4.004
BOLT, NEUTRAL STARTING SWITCH	4.054	BOLT, TRANSMISSION HAND SHIFT LEVER	4.010
BOLT, OVAL HEAD CHROME (CROSS		BOLT, TRANSMISSION MAIN TORUS	4.118
RECESS)	8.909	BOLT, TRANSMISSION MAIN DRIVE GEAR	4.356
BOLT, OVAL HEAD (CROSS RECESS)	8.909	BOLT, TRANSMISSION MOUNTING	4.085
BOLT, PAN HEAD	8.913	BOLT, TRANSMISSION	4.081
BOLT, PARKING BRAKE LEVER	4.595	BOLT, TRANSMISSION	4.115
BOLT, PARKING LAMP	2.585	BOLT, TRANSMISSION OIL CONTROL VALVE	
BOLT, POWER BRAKE AIR VALVE	4.918	BODY	4.265
BOLT, POWER STEERING PUMP ATTACHING	6.665	BOLT, TRANSMISSION OIL PUMP	4.226
BOLT, PROPELLER SHAFT UNIVERSAL JOINT		BOLT, TRANSMISSION OIL PAN	4.197
COMPANION (AXLE END)	5.545	BOLT, TRANSMISSION OIL PAN	4.196
BOLT, RADIATOR CORE SUPPORT	1.270	BOLT, TRANSMISSION PLANETARY CARRIER	4.176
BOLT, RADIATOR FAN ATTACHING	1.064	BOLT, TRANSMISSION REAR EXTENSION	4.318
BOLT, RADIATOR GRILLE	1.266	BOLT, TRANSMISSION REAR BEARING	
BOLT, REAR AXLE	5.387	RETAINING	4.412
BOLT, REAR AXLE HOUSING OR FINAL DRIVE	5.398	BOLT, TRANSMISSION REAR	4.317
BOLT, REAR AXLE	5.418	BOLT, TRANSMISSION SHIFT SELECTOR	
BOLT, REAR BRAKE BACKING PLATE TO		(INNER)	4.302
AXLE	5.002	BOLT, TRANSMISSION SHIFT LEVER	4.046
BOLT, REAR BUMPER ATTACHING	7.836	BOLT, TRANSMISSION SHIFT CONTROL	
BOLT, REAR BUMPER BAR	7.832	RELAY	4.040
BOLT, REAR COIL SPRING CLAMP	7.529	BOLT, TRANSMISSION	4.103
BOLT, REAR LEAF SPRING	7.504	BOLT, TRANSMISSION SPEEDOMETER	
BOLT, REAR PRIMARY BUMPER BAR	7.831	DRIVEN GEAR	4.338
BOLT, REAR SUSPENSION ARM	5.383	BOLT, TRUSS HEAD	8.913

BOLT, UNIVERSAL JOINT BEARING & FLANGE	5.586
BOLT, UNIVERSAL JOINT COMPANION (TRANS. END)	4.344
BOLT, VALVE PUSH ROD ADJUSTING (ON ROCKER ARM)	0.429
BOLT, WATER PUMP TO TIMING CHAIN COVER	1.073
BOLT, WHEEL CYLINDER OR CALIPER ATTACHING	4.665
BOLT, WHEEL DISC (COMPONENT PARTS)	5.871
BOLT, WHEEL LOCK CONTROL	4.740
BOLT, WHEEL LOCK CONTROL MODULATOR	4.730
BOOT, ALTERNATOR WIRE COVER	2.530
BOOT, CARBURETOR FUEL	3.838
BOOT, CLUTCH PEDAL OR ROD	0.829
BOOT, CLUTCH RELEASE FORK	0.797
BOOT, MASTER BRAKE CYL. PUSH ROD	4.659
BOOT, STARTING MOTOR DRIVE SHIFT LEVER	2.108
BOOT, TRANSMISSION CONTROL SWITCH	4.060
BOOT, TRANSMISSION FLOOR SHIFT	4.015
BOOT, TRANSMISSION HAND SHIFT LEVER	4.008
BOOT, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
BOOT, TURBO COMPRESSOR OIL DRAIN	3.358
BOOT, WHEEL BRAKE CYL. OR CALIPER PISTON	4.670
BOOT, WHEEL LOCK CONTROL SENSOR	4.710
BOWL ASSY., CARBURETOR FLOAT	3.734
BOWL, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
BOWL, FUEL STRAINER	3.890
BOWL PKG., FUEL PUMP	3.910
BOWL, STEERING COLUMN	6.518
BOWL, TRANSMISSION HAND SHIFT LEVER	4.010
BRACE, AIR INJECTION REACTOR PUMP	3.655
BRACE, BATTERY	2.335
BRACE, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
BRACE, COMPRESSOR MOUNTING	9.171
BRACE, CRUISE CONTROL MOUNTING	3.885
BRACE, CRUISE CONTROL REGULATOR MOUNTING	3.880
BRACE, DELCOTRON ADJUSTING	2.317
BRACE, DELCOTRON MOUNTING	2.277
BRACE, FRONT BUMPER BAR ATTACHING	7.836
BRACE, FRONT DRIVE AXLE SHAFT	6.056
BRACE, FRONT FENDER	8.141
BRACE, FRONT PARKING & SIGNAL LAMP	2.587
BRACE, FRONT SUSPENSION MOUNTING CROSS	7.010
BRACE, HOOD REINFORCING	8.022
BRACE, PARKING BRAKE LEVER	4.595
BRACE, RADIATOR CORE SUPPORT	1.270
BRACE, RADIATOR CORE SUPPORT TIE BAR	1.271
BRACE, RADIATOR FAN SHROUD	1.277
BRACE, REAR BUMPER ATTACHING	7.836
BRACE, STARTING MOTOR ATTACHING	2.077
BRACE, STEERING COLUMN ATTACHING	6.760
BRACE, STEERING OIL PUMP MOUNTING	6.606
BRACE, STEREO TAPE PLAYER	9.670
BRACE, TRANSMISSION AUXILIARY COOLER	4.128
BRACKET, ACCELERATOR PEDAL	3.454
BRACKET, ACCELERATOR RETURN	3.459
BRACKET, AIR CONDITIONING CONTROL	9.275
BRACKET, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
BRACKET, AIR INJECTION REACTOR PUMP	3.655
BRACKET, AIR INJECTION REACTOR	3.680
BRACKET, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
BRACKET, BACK-UP LAMP ACTUATING	2.698
BRACKET, BACK-UP LAMP	2.697
BRACKET, BATTERY CABLE OR STRAP	2.343
BRACKET, BATTERY	2.333
BRACKET, BODY BOLT	7.330
BRACKET, BRAKE BACKING PLATE	5.001

BRACKET, BRAKE BALANCING & METERING VALVE	4.690
BRACKET, BRAKE HOSE	4.681
BRACKET, CAR BUMPER JACK	8.820
BRACKET, CARBURETOR AIR CLEANER	3.405
BRACKET, CARBURETOR AIR HORN	3.730
BRACKET, CARBURETOR BOOST LIMIT	3.374
BRACKET, CARBURETOR CHOKE	3.752
BRACKET, CARBURETOR IDLE SPEED-UP	3.820
BRACKET, CARBURETOR OUTSIDE AIR INDUCTION	3.417
BRACKET, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
BRACKET, CARBURETOR VACUUM BREAK CONTROL	3.765
BRACKET, CLUTCH PEDAL OR ROD	0.829
BRACKET, CLUTCH PEDAL RETURN SPRING	0.846
BRACKET, CLUTCH RELEASE	0.852
BRACKET, COLD AIR	9.264
BRACKET, COMPRESSOR DISCHARGE HOSE	9.226
BRACKET, COMPRESSOR MOUNTING	9.171
BRACKET, CONTROL ARM FRAME	6.177
BRACKET, CORNERING LAMP	2.585
BRACKET, CRUISE CONTROL REGULATOR MOUNTING	3.880
BRACKET, CRUISE CONTROL SELECTOR	3.883
BRACKET, CRUISE CONTROL MOUNTING	3.885
BRACKET, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
BRACKET, CRUISE CONTROL ACTUATING	3.885
BRACKET, CRUISE CONTROL REGULATOR	3.885
BRACKET, DELCOTRON ADJUSTING	2.317
BRACKET, DELCOTRON	2.319
BRACKET, DELCOTRON MOUNTING	2.277
BRACKET, DELCOTRON WARNING LIGHT	2.515
BRACKET, ENGINE CRANKCASE VENTILATION	1.762
BRACKET, ENGINE MOUNT ATTACHING	0.029
BRACKET, ENGINE OIL COOLER	1.540
BRACKET, ENGINE OIL LEVEL INDICATOR	1.516
BRACKET, ENGINE OIL PRESSURE GAUGE	1.800
BRACKET, ENGINE VALVE ROCKER SHAFT	0.349
BRACKET, EVAPORATIVE EMISSION SYSTEM	3.130
BRACKET, EVAPORATOR EXPANSION VALVE	9.214
BRACKET, EVAPORATOR	9.211
BRACKET, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
BRACKET, EXHAUST MUFFLER	3.704
BRACKET, EXHAUST PIPE TO MANIFOLD	3.610
BRACKET, FINAL DRIVE MOUNTING	5.500
BRACKET, FLUID METERING VALVE	3.364
BRACKET, FRONT BUMPER BAR ATTACHING	7.836
BRACKET, FRONT BUMPER GUARD	7.828
BRACKET, FRONT END PANEL	1.263
BRACKET, FRONT FENDER FILLER	8.160
BRACKET, FRONT FENDER	8.141
BRACKET, FRONT PARKING & SIGNAL LAMP	2.587
BRACKET, FUEL STRAINER	3.890
BRACKET, FUEL TANK FILLER DOOR	8.209
BRACKET, HAND THROTTLE CONTROL	3.483
BRACKET, HAZARD WARNING OR MARKER LAMP	2.575
BRACKET, HEADLAMP DIMMER	2.459
BRACKET, HEADLAMP DOOR RETAINING	2.729
BRACKET, HEADLAMP HOUSING OR GRILLE	2.765
BRACKET, HEADLAMP OFF-DELAY CONTROL (NIGHT-WATCH)	2.485
BRACKET, HEADLAMP OR GRILLE	2.760
BRACKET, HEADLAMP SEALED BEAM UNIT ADJUSTING	2.737
BRACKET, HEATER (AT DASH)	8.849
BRACKET, HEATER	8.858
BRACKET, HEATER HOT WATER	8.846
BRACKET, HEATER VACUUM	8.850
BRACKET, HEATER WATER TEMP. CONTROL	8.848
BRACKET, HOOD RELEASE	8.080
BRACKET, IGNITION COIL MOUNTING	2.183
BRACKET, IGNITION DISTRIBUTOR	2.393

BRACKET, IGNITION DISTRIBUTOR VACUUM	2.420	BRACKET, TRANSMISSION PARKING BRAKE.	4.290
BRACKET, IGNITION SWITCH	2.198	BRACKET, TRANSMISSION RANGE SELECTOR	
BRACKET, INSTRUMENT CLUSTER	9.743	OR SHIFT.	4.275
BRACKET, LICENSE PLATE MOUNTING	7.800	BRACKET, TRANSMISSION SUPPORT	4.083
BRACKET, MANUAL ANTENNA	9.647	BRACKET, TRANSMISSION SHIFT CONTROL	
BRACKET, MASTER BRAKE PEDAL	4.625	TUBE OR SHAFT	4.030
BRACKET, MASTER BRAKE PEDAL		BRACKET, TRANSMISSION SHIFT CONTROL	
MOUNTING	4.634	RELAY.	4.040
BRACKET, NEUTRAL STARTING SWITCH	4.054	BRACKET, TRANSMISSION SHIFT LEVER	4.046
BRACKET, OUTSIDE AIR VENTILATING.	9.787	BRACKET, TRUNK COMPARTMENT	9.988
BRACKET, PARKING BRAKE CABLE	4.785	BRACKET, TURBO ROCKET	3.370
BRACKET, PARKING BRAKE SIGNAL	4.589	BRACKET, VOLTAGE CONTROL.	2.500
BRACKET, POWER ANTENNA	9.647	BRACKET, WHEEL LOCK CONTROL	4.740
BRACKET, POWER BRAKE VACUUM LINE.	4.931	BRACKET, WHEEL LOCK CONTROL	
BRACKET, PROPELLER SHAFT CENTER		MODULATOR	4.730
BEARING	5.598	BRACKET, WINDSHIELD DEFROSTER.	9.779
BRACKET, RADIATOR CORE SUPPORT	1.272	BREATHER ASSY., TRANSMISSION	4.104
BRACKET, RADIATOR CORE SUPPORT	1.270	BREATHER CAP, BRAKE PIPE REAR	
BRACKET, RADIATOR FAN SHROUD	1.277	JUNCTION TO HOUSING	4.687
BRACKET, RADIATOR FILLER CAP (PRESSURE		BREATHER, CARBURETOR AIR CLEANER	3.410
TYPE)	1.203	BREATHER, CRANKCASE VENTILATION	1.745
BRACKET, RADIATOR GRILLE	1.266	BREATHER, ENGINE CRANKCASE OIL FILLER	1.758
BRACKET, RADIATOR HOSE	1.166	BRUSH PKG., DELCOTRON BRUSH HOLDER	2.291
BRACKET, RADIATOR OVERFLOW	1.240	BRUSH PKG., DELCOTRON	2.285
BRACKET, RADIO MOUNTING.	9.655	BRUSH, STARTING MOTOR	2.051
BRACKET, REAR AXLE CONTROL ARM		BUCKLE, TRANSMISSION CASE AND OR	
FRAME	5.380	SPROCKET COVER	4.109
BRACKET, REAR AXLE HOUSING.	5.395	BULB, AIR CONDITIONING TEMPERATURE &	
BRACKET, REAR BUMPER ATTACHING.	7.836	FAN (AT DASH).	9.273
BRACKET, REAR QUARTER PANEL WHEEL		BULB, BACK-UP LAMP.	2.697
OPENING PANEL	8.179	BULB, CLOCK	9.772
BRACKET, REAR SPRING	7.545	BULB, CORNERING LAMP	2.585
BRACKET, REAR WINDOW DEFOGGER		BULB, CRUISE CONTROL REGULATOR	
(BLOWER TYPE)	9.778	ELECTRICAL ACTUATING	3.887
BRACKET, RECEIVER.	9.196	BULB, CRUISE CONTROL SELECTOR	3.883
BRACKET, REFRIGERANT CONDENSER.	9.190	BULB, ENGINE R.P.M. (INST. PANEL	
BRACKET, REFRIGERANT CONTROL MASTER		CLUSTER)	9.750
SWITCH	9.280	BULB, FLOOD LAMP	9.250
BRACKET, REFRIGERANT EXPANSION	9.213	BULB, HAZARD WARNING OR MARKER LAMP	2.575
BRACKET, REFRIGERANT RECEIVER	9.195	BULB, HEATER (AT DASH)	8.849
BRACKET, RIDE STABILIZER SHAFT.	7.242	BULB, IGNITION SWITCH.	2.198
BRACKET, SHOCK ABSORBER MOUNTING	7.395	BULB, INSTRUMENT CLUSTER	9.744
BRACKET, SPARK PLUG WIRE	2.251	BULB, LAMP	8.991
BRACKET, SPEEDOMETER	9.761	BULB, PARKING LAMP	2.585
BRACKET, STARTING MOTOR ATTACHING	2.077	BULB, RADIO MOUNTING	9.655
BRACKET, STEERING COLUMN ATTACHING	6.760	BULB, REAR LICENSE LAMP.	2.700
BRACKET, STEERING LINKAGE SHOCK		BULB, REAR WINDOW ELECTRIC DEFOGGER	
ABSORBER.	6.865	(ON GLASS)	9.778
BRACKET, STEERING OIL PUMP MOUNTING.	6.606	BULB, STOP & TAIL LAMP	2.694
BRACKET, STEERING OIL PUMP HOSE	6.672	BULB, TRANSMISSION SHIFT INDICATOR	4.022
BRACKET, STEERING TIE ROD	6.232	BUMPER, CLUTCH PEDAL OR ROD	0.829
BRACKET, STEREO TAPE PLAYER	9.670	BUMPER, COLD AIR DISTRIBUTOR	9.263
BRACKET, STOP LAMP SWITCH	2.447	BUMPER, FRONT BUMPER GRAVEL	7.833
BRACKET, SUCTION THROTTLING VALVE.	9.199	BUMPER, FRONT FENDER FILLER	8.160
BRACKET, SUPERLIFT SHOCK ABSORBER		BUMPER, FRONT PARKING & SIGNAL LAMP	2.587
(AUTOMATIC FILL)	7.346	BUMPER, FRONT PRIMARY BUMPER BAR.	7.831
BRACKET, SUPERLIFT SHOCK ABSORBER		BUMPER, FRONT WHEEL LOWER CONTROL	
COMPRESSOR MOUNTING (AUTOMATIC		ARM	6.176
FILL)	7.452	BUMPER, FRONT WHEEL UPPER CONTROL	
BRACKET, TAIL PIPE OR RESONATOR		ARM	6.176
MOUNTING	3.706	BUMPER, FUEL FILLER DOOR	8.210
BRACKET, THROTTLE CONTROL	3.463	BUMPER, HEADLAMP CONCEALING GRILLE	
BRACKET, THROTTLE CONTROL	3.430	OR HOUSING	2.775
BRACKET, TRANSMISSION AUXILIARY		BUMPER, HEATER	8.858
COOLER	4.128	BUMPER, HOOD PANEL	8.024
BRACKET, TRANSMISSION CONTROL OR		BUMPER, LICENSE PLATE MOUNTING	7.800
BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070	BUMPER, MASTER BRAKE PEDAL	4.625
BRACKET, TRANSMISSION CONTROL		BUMPER, POWER BRAKE AIR VALVE.	4.918
SWITCH	4.060	BUMPER, POWER BRAKE REACTION	4.934
BRACKET, TRANSMISSION FLOOR SHIFT	4.047	BUMPER, REAR AXLE HOUSING	5.395
BRACKET, TRANSMISSION HAND SHIFT		BUMPER, STEERING WHEEL.	6.515
LEVER.	4.008	BUMPER, TILT WHEEL.	6.514
BRACKET, TRANSMISSION HAND SHIFT		BUMPER, WIRING & PIPE.	9.775
LEVER.	4.010	BUSHING, ACCELERATOR PEDAL	3.453
BRACKET, TRANSMISSION OIL PRESSURE		BUSHING, ACCELERATOR PEDAL	3.454
SPARK CONTROL	4.075	BUSHING, ACCELERATOR RETURN	3.459
BRACKET, TRANSMISSION PARKING BRAKE		BUSHING ASSY., UPPER CONTROL ARM	
INSIDE DETENT	4.279	SHAFT	6.164

CAM, TRANSMISSION DETENT OR INTERLOCK	4.311	CASE, HEATER CORE (EXC. C.A.C.)	8.854
CAM, TRANSMISSION INTERMEDIATE CLUTCH	4.167	CASE, HEATER CORE	8.854
CAM, TURN SIGNAL SWITCH CANCELLING	2.896	CASE, HEATER CORE (WITH C.A.C.)	8.854
CANNISTER, EVAPORATIVE EMISSION SYSTEM	3.130	CASE, HEATER	9.786
CAN, TOUCH UP PAINT (6 OZ. PRESSURIZED CAN)	8.800	CASE, INSTRUMENT CLUSTER	9.743
CAPACITOR, DELCOTRON	2.319	CASE, OUTSIDE AIR	9.789
CAPACITOR, HEATER CONTROL	8.852	CASE, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
CAP, AIR INJECTION REACTOR PUMP	3.672	CASE, STEREO TAPE PLAYER	9.670
CAP ASSY., FUEL TANK FILLER	3.028	CEMENTS, SERVICE MAINTENANCE	8.800
CAP ASSY., IGNITION DISTRIBUTOR	2.367	CHAIN, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
CAP, BATTERY	2.345	CHAIN, ENGINE TIMING CHAIN	0.724
CAP, CARBURETOR DISTRIBUTOR VACUUM HOSE FITTING	3.764	CHECK BALL PKG., TRANSMISSION	4.115
CAP, CARBURETOR FLOAT BOWL	3.734	CHECK & FILTER PKG., THROTTLE RETURN OR SLOW IDLE	3.440
CAP, CAR HEATER HOSE INLET (RUBBER)	1.070	CHECK, THROTTLE RETURN OR SLOW IDLE	3.440
CAP, COMPRESSOR	9.177	CHECK VALVE, SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL VALVE (AUTOMATIC FILL)	7.476
CAP, CRUISE CONTROL REGULATOR	3.885	CHEVRON, FRONT FENDER FINISH TRIM	8.147
CAP & EMBLEM, HORN BLOWER	2.820	CIRCUIT BREAKER, AIR CONDITIONING	9.277
CAP, ENGINE CRANKCASE OIL FILLER	1.758	CIRCUIT, CLOCK	9.772
CAP, ENGINE INTAKE & EXHAUST VALVE SPRING	0.309	CIRCUIT, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
CAP, EVAPORATIVE EMISSION SYSTEM	3.130	CIRCUIT, INSTRUMENT CLUSTER PRINTED CIRCUIT	9.744
CAP, EXHAUST MANIFOLD HOT AIR	3.602	CLAMP, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
CAP, FRONT WHEEL HUB GREASE RETAINING	6.330	CLAMP, AIR INJECTION REACTOR PUMP	3.672
CAP, HEATER CONTROL	8.852	CLAMP, AIR INJECTION REACTOR	3.675
CAP, HORN BLOWER	2.820	CLAMP, AIR INJECTION REACTOR	3.680
CAP, MASTER BRAKE CYL. FILLER	4.651	CLAMP, BACK-UP LAMP	2.697
CAP, RADIATOR CORE SUPPORT	1.270	CLAMP, BATTERY CABLE OR STRAP	2.343
CAP, RADIATOR FILLER CAP (PRESSURE TYPE)	1.203	CLAMP, BATTERY	2.345
CAP, REAR AXLE	5.387	CLAMP, BATTERY	2.335
CAP, REAR WHEEL HUB GREASE	5.830	CLAMP, CAR BUMPER JACK	8.820
CAP, SPARE WHEEL	7.632	CLAMP, CARBURETOR ACTUATING	3.762
CAP, SPEEDOMETER CABLE	4.342	CLAMP, CARBURETOR AIR CLEANER	3.405
CAP, STEERING COLUMN ATTACHING	6.760	CLAMP, CARBURETOR AIR CLEANER	3.403
CAP, STEERING OIL PUMP	6.635	CLAMP, CARBURETOR HAND CHOKE	3.480
CAP, SUCTION THROTTLING (P.O.A.)	9.198	CLAMP, CARBURETOR OUTSIDE AIR INDUCTION	3.417
CAPSULE, HEADLAMP ASSEMBLY	2.725	CLAMP, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
CAP, SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL VALVE (AUTOMATIC FILL)	7.476	CLAMP, CHOKE AIR OR HEATER	3.603
CAP, TIRE VALVE	5.875	CLAMP, CLIMATIC COMBUSTION CONTROL	3.417
CAP, TRANSMISSION CLUTCH BRAKE BAND	4.253	CLAMP, COLD AIR	9.262
CAP, TRANSMISSION	4.104	CLAMP, COMPRESSOR DISCHARGE HOSE	9.226
CAP, TURBO ROCKET FLUID	3.360	CLAMP, COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
CAP, WHEEL HUB (CHROME)	5.858	CLAMP, CORNERING LAMP	2.585
CAP, WHEEL LOCK CONTROL SENSOR	4.710	CLAMP, CRANKCASE VENTILATION	1.745
CARBURETOR, ENGINE	3.725	CLAMP, CRUISE CONTROL ACTUATING	3.885
CARRIER ASSY., DIFFERENTIAL OR FINAL DRIVE ASSY.	5.505	CLAMP, CRUISE CONTROL SELECTOR	3.883
CARRIER ASSY., FINAL DRIVE	5.510	CLAMP, ENGINE COOLANT BY PASS HOSE	1.097
CARRIER ASSY., TRANSMISSION REVERSE PLANET	4.192	CLAMP, ENGINE CRANKCASE VENTILATION	1.762
CARRIER ASSY., TRANSMISSION PLANETARY	4.175	CLAMP, ENGINE OIL COOLER	1.540
CARRIER, CRUISE CONTROL REGULATOR	3.885	CLAMP, ENGINE VACUUM	9.755
CARRIER, HORN	2.819	CLAMP, ENGINE VALVE PUSH ROD COVER TO BLOCK	0.446
CARRIER, TRANSMISSION FRONT	4.161	CLAMP, EVAPORATIVE EMISSION SYSTEM	3.120
CARRIER, TURN SIGNAL SWITCH CANCELLING	2.896	CLAMP, EVAPORATIVE EMISSION SYSTEM	3.130
CARTRIDGE, HORN	2.819	CLAMP, EVAPORATOR EXPANSION VALVE	9.214
CASE ASSY., DIFFERENTIAL (CASE WITH GEARS)	5.510	CLAMP, EVAPORATOR	9.211
CASE ASSY., EVAPORATOR	9.211	CLAMP, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
CASE ASSY., TRANSMISSION	4.103	CLAMP, EXHAUST PIPE	3.616
CASE, CAR BUMPER JACK	8.820	CLAMP, EXHAUST PIPE TO MANIFOLD	3.611
CASE, CIGARETTE LIGHTER	9.709	CLAMP, FORCED AIR VENTILATION	9.790
CASE, CLOCK	9.772	CLAMP, FRONT DRIVE OUTER AXLE SHAFT	6.061
CASE & COVER, FINAL DRIVE	5.510	CLAMP, FRONT PARKING & SIGNAL LAMP	2.587
CASE, DIFFERENTIAL (CASE ONLY WITH BOLTS)	5.510	CLAMP, FUEL LINE	3.162
CASE, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	CLAMP, FUEL LINE	3.163
CASE, EVAPORATOR BLOWER	9.215	CLAMP, FUEL STRAINER	3.890
CASE, FORCED AIR VENTILATION	9.790	CLAMP, FUEL TANK FILLER PIPE	3.008
CASE, HEATER BLOWER MOTOR	8.857	CLAMP, FUEL TANK	3.003
		CLAMP, HEATER (AT DASH)	8.849

CLAMP, HEATER CORE	8.854	CLIP, CAR BUMPER JACK	8.820
CLAMP, HEATER HOSE TO ENGINE	8.866	CLIP, CARBURETOR ACTUATING	3.762
CLAMP, HEATER HOT WATER	8.846	CLIP, CARBURETOR AIR CLEANER	3.403
CLAMP, HEATER VACUUM	8.850	CLIP, CARBURETOR CHOKE	3.752
CLAMP, HOOD RELEASE	8.080	CLIP, CARBURETOR FUEL	3.838
CLAMP, IGNITION DISTRIBUTOR MOUNTING	2.363	CLIP, CARBURETOR	3.814
CLAMP, IGNITION DISTRIBUTOR VACUUM	2.420	CLIP, CARBURETOR PUMP	3.842
CLAMP, INTAKE & EXHAUST MANIFOLD	3.273	CLIP, CHOKE AIR OR HEATER	3.603
CLAMP, INTAKE MANIFOLD	3.270	CLIP, CHOKE HEATER	3.545
CLAMP, MAIN WIRING HARNESS	2.482	CLIP, CLOCK	9.772
CLAMP, OUTSIDE AIR VENTILATING	9.787	CLIP, CLUTCH RELEASE FORK	0.797
CLAMP, PARKING BRAKE CABLE	4.785	CLIP, CLUTCH RELEASE UPPER	5.158
CLAMP PKG., EXHAUST SYSTEM ATTACHING	3.708	CLIP, COLD AIR	9.264
CLAMP, POWER BRAKE VACUUM LINE	4.931	CLIP, COLD AIR DISTRIBUTOR	9.263
CLAMP, RADIATOR HOSE	1.166	CLIP, COMPRESSOR MOUNTING	9.171
CLAMP, RADIATOR HOSE	1.166	CLIP, CRUISE CONTROL ACTUATING	3.885
CLAMP, REAR SPRING	7.545	CLIP, CRUISE CONTROL REGULATOR	
CLAMP, REAR SUSPENSION LEAF SPRING	7.518	ELECTRICAL ACTUATING	3.887
CLAMP, REAR WINDOW DEFOGGER		CLIP, CRUISE CONTROL SELECTOR	3.883
(BLOWER TYPE)	9.778	CLIP, CYLINDER BLOCK HEATER	1.152
CLAMP, REFRIGERANT EXPANSION	9.213	CLIP, ELECTRICAL	2.530
CLAMP, REFRIGERANT PIPE	9.242	CLIP, ENGINE CRANKCASE VENTILATION	1.762
CLAMP, REFRIGERANT RECEIVER	9.195	CLIP, ENGINE OIL PRESSURE GAUGE	1.800
CLAMP, SPEEDOMETER CABLE	4.342	CLIP, EVAPORATIVE EMISSION SYSTEM	3.120
CLAMP, STEERING COLUMN ATTACHING	6.760	CLIP, EVAPORATIVE EMISSION SYSTEM	3.130
CLAMP, STEERING COLUMN	6.518	CLIP, FENDER SIDE MOLDING	8.204
CLAMP, STEERING GEAR WORM BALL		CLIP, FRONT BUMPER GRAVEL	7.833
RETURN GUIDE	6.843	CLIP, FRONT FENDER REAR MOLDING	8.133
CLAMP, STEERING OIL PUMP COOLER	6.602	CLIP, FRONT FENDER	8.154
CLAMP, STEERING OIL PUMP HOSE	6.672	CLIP, FRONT FENDER TRIM	8.147
CLAMP, STEERING OIL PUMP RETURN (GEAR		CLIP, FUEL LINE	3.162
TO PUMP OR COOLER)	6.671	CLIP, FUEL TANK GAUGE	3.115
CLAMP, STEERING SHAFT CONNECTING	6.525	CLIP, FUEL TANK	3.003
CLAMP, STEERING SHAFT	6.521	CLIP, HAZARD WARNING OR MARKER LAMP	2.575
CLAMP, STEERING TIE ROD END ADJUSTER	6.234	CLIP, HEADLAMP HOUSING OR GRILLE	2.765
CLAMP, SUCTION THROTTLE VALVE	9.199	CLIP, HEATER CONTROL	8.852
CLAMP, TAIL PIPE OR RESONATOR		CLIP, HEATER	8.858
MOUNTING	3.706	CLIP, HEATER HOT WATER	8.846
CLAMP, THROTTLE CONTROL	3.463	CLIP, HEATER	9.786
CLAMP, TRANSMISSION AUXILIARY COOLER	4.128	CLIP, HEATER VACUUM	8.850
CLAMP, TRANSMISSION	4.020	CLIP, HOOD RELEASE	8.080
CLAMP, TRANSMISSION OIL LEVEL & FILLER	4.133	CLIP, HORN RELAY & BATTERY CABLE	
CLAMP, TRANSMISSION OIL COOLING		JUNCTION	2.815
(STANDARD COOLING)	4.128	CLIP, HUB CAP RETAINING	5.864
CLAMP, TRANSMISSION SHIFT INDICATOR	4.022	CLIP, HYDRAULIC BRAKE LINE	4.686
CLAMP, TRANSMISSION SHIFT CONTROL		CLIP, IGNITION DISTRIBUTOR BREAKER	
ROD	4.037	LEVER OR CONTACT	2.387
CLAMP, TRANSMISSION THRUST	4.129	CLIP, IGNITION DISTRIBUTOR VACUUM	9.717
CLAMP, WATER HOSE	9.798	CLIP, IGNITION SWITCH WARNING OR LOCK	2.195
CLAMP, WHEEL LOCK CONTROL SENSOR	4.710	CLIP, INSTRUMENT CLUSTER	9.748
CLAMP, WIRING HARNESS	2.559	CLIP, INSTRUMENT PANEL	9.735
CLEANER ASSY., CARBURETOR AIR CLEANER	3.402	CLIP, MAIN WIRING HARNESS FUSE	2.483
CLEANER, EXTERIOR FINISH SERVICE		CLIP, OUTSIDE AIR	9.789
MAINTENANCE	8.800	CLIP, OUTSIDE AIR VENTILATING	9.787
CLEANER, INTERIOR SERVICE MAINTENANCE	8.800	CLIP, PARKING BRAKE CABLE	4.785
CLEANER KIT, EXTERIOR FINISH SERVICE		CLIP, PARKING BRAKE CABLE ANTI-RATTLE	4.784
MAINTENANCE	8.800	CLIP, PIPE AND WIRE	8.950
CLEANER, POWER BRAKE AIR CLEANER	4.913	CLIP, POWER ANTENNA	9.647
CLEANERS, SERVICE MAINTENANCE	8.800	CLIP, POWER BRAKE VACUUM LINE	4.931
CLEANER, TRANSMISSION OIL PAN	4.197	CLIP, RADIATOR CORE SUPPORT	1.270
CLEVIS, CLUTCH RELEASE UPPER ROD	0.854	CLIP, RADIATOR GRILLE	1.268
CLEVIS, MASTER BRAKE CYLINDER	4.662	CLIP, RADIATOR GRILLE	1.266
CLEVIS, ROD	8.946	CLIP, RADIATOR OVERFLOW	1.240
CLEVIS, THROTTLE ROD	3.425	CLIP, RADIO REAR SEAT SPEAKER	9.665
CLEVIS, TRANSMISSION HAND SHIFT LEVER	4.008	CLIP, REAR BUMPER ATTACHING	7.836
CLEVIS, TRANSMISSION SHIFT CONTROL		CLIP, REAR BUMPER BAR	7.832
ROD	4.037	CLIP, REAR WINDOW DEFOGGER (BLOWER	
CLEVIS, TRANSMISSION THROTTLE VALVE		TYPE)	9.778
CONTROL ROD OR LEVER	4.052	CLIP, REFRIGERANT PIPE	9.242
CLIP, AIR CONDITIONING CONTROL	9.275	CLIP, ROCKER PANEL MOLDING ATTACHING	8.309
CLIP, AIR CONDITIONING	9.276	CLIP, SPEEDOMETER CABLE	4.342
CLIP, AIR CONDITIONING VAC. & TEMP.		CLIP, STEERING COLUMN	6.518
CONTROL	9.281	CLIP, STEERING OIL PUMP COOLER	6.602
CLIP, AIR INJECTION REACTOR	3.675	CLIP, STEERING SHAFT	6.521
CLIP, AIR INJECTION REACTOR PUMP	3.672	CLIP, STOP LAMP SWITCH	2.447
CLIP, BACK-UP LAMP	2.697	CLIP, STOP & TAIL LAMP	2.681
CLIP, BATTERY CABLE OR STRAP	2.343	CLIP, THROTTLE RETURN CHECK OR	
CLIP, BRAKE HOSE	4.681	DASHPOT	3.440

CLIP, THROTTLE ROD	3.425	CONE, TRANSMISSION REVERSE CLUTCH . .	4.189
CLIP, TRANSMISSION AUXILIARY COOLER . .	4.128	CONNECTOR, AIR CONDITIONING VAC. &	
CLIP, TRANSMISSION CONTROL SWITCH . . .	4.060	TEMP. CONTROL	9.281
CLIP, TRANSMISSION CONTROL	4.057	CONNECTOR, AIR CONDITIONING CONTROL .	9.275
CLIP, TRANSMISSION	4.104	CONNECTOR, AIR CONDITIONING	9.276
CLIP, TRANSMISSION OIL CODLING		CONNECTOR, AIR INJECTION REACTOR	3.680
(STANDARD COOLING)	4.128	CONNECTOR, CARBURETOR IDLE SPEED-UP .	3.820
CLIP, TRANSMISSION OIL CONTROL VALVE		CONNECTOR, CARBURETOR IDLE	
BODY	4.265	COMPENSATOR	3.820
CLIP, TRANSMISSION OIL PAN	4.197	CONNECTOR, CARBURETOR VACUUM BREAK	
CLIP, TRANSMISSION OIL PRESSURE SPARK		CONTROL	3.765
CONTROL	4.075	CONNECTOR, CARBURETOR VACUUM BREAK	3.755
CLIP, TRANSMISSION PARKING BRAKE		CONNECTOR, CLIMATIC COMBUSTION	
INSIDE DETENT	4.279	CONTROL	3.417
CLIP, TRANSMISSION RANGE SELECTOR OR		CONNECTOR, COLD AIR DISTRIBUTOR	9.263
SHIFT	4.275	CONNECTOR, COLD AIR DISTRIBUTION	9.257
CLIP, TRANSMISSION SHIFT CONTROL ROD .	4.037	CONNECTOR, COLD AIR	9.264
CLIP, TRANSMISSION SHIFT INDICATOR . . .	4.022	CONNECTOR, CRANKCASE VENTILATION	1.745
CLIP, TRANSMISSION SPEEDOMETER DRIVE		CONNECTOR, CRUISE CONTROL REGULATOR	
GEAR	4.345	ELECTRICAL ACTUATING	3.887
CLIP, TRANSMISSION STATOR CONTROL . . .	4.122	CONNECTOR, DISTRIBUTOR VACUUM HOSE .	3.445
CLIP, TRANSMISSION THROTTLE VALVE		CONNECTOR, ENGINE OIL COOLER	1.540
CONTROL ROD OR LEVER	4.052	CONNECTOR, ENGINE OIL FILTER	1.855
CLIP, TRANSMISSION VACUUM MODULATOR	4.205	CONNECTOR, ENGINE VACUUM	9.755
CLIP, TURN SIGNAL	2.895	CONNECTOR, EVAPORATIVE EMISSION	
CLIP, TURN SIGNAL	2.892	SYSTEM	3.130
CLIP, TURN SIGNAL SWITCH ACTUATOR . . .	2.906	CONNECTOR, FUEL INTAKE MANIFOLD	3.265
CLIP, UNDER HOOD LAMP	8.890	CONNECTOR, FUEL LINE INVERTED FLARED .	8.963
CLIP, WHEEL LOCK CONTROL	4.720	CONNECTOR, FUEL LINE	3.163
CLIP, WHEEL LOCK CONTROL	4.740	CONNECTOR, FUEL STRAINER	3.890
CLIP, WINDSHIELD ANTENNA	9.647	CONNECTOR, HEATER BLOWER MOTOR	8.857
CLIP, WINDSHIELD DEFROSTER	9.779	CONNECTOR, HEATER	8.858
CLIP, WIRING HARNESS	2.559	CONNECTOR, HEATER VACUUM	8.850
CLOCK PKG., CLOCK	9.772	CONNECTOR, IGNITION DISTRIBUTOR	
CLOTH, INTERIOR SERVICE MAINTENANCE .	8.800	VACUUM	9.717
CLOTH, PLASTIC HOOD OR VALANCE PANEL		CONNECTOR, IGNITION DISTRIBUTOR	
REPAIR	8.800	VACUUM	2.420
CLUSTER ASSY., INSTRUMENT PANEL	9.735	CONNECTOR, INTAKE MANIFOLD VACUUM . .	3.278
CLUSTER ASSY., SPEEDOMETER	9.761	CONNECTOR & LEAD, TRANSMISSION OIL	
CLUTCH ASSY., FAN BLADE CLUTCH	1.050	PRESSURE SPARK CONTROL	4.075
CLUTCH ASSY., TRANSMISSION		CONNECTOR, PARKING BRAKE CABLE	4.765
SYNCHRONIZING	4.380	CONNECTOR, PARKING BRAKE CABLE	4.785
CLUTCH ASSY., TRANSMISSION LOW SPEED	4.180	CONNECTOR PKG., COMPRESSOR TO	
CLUTCH, COMPRESSOR CLUTCH	9.188	CONDENSER OR MUFFLER (HIGH	
CLUTCH, TRANSMISSION INTERMEDIATE		PRESSURE)	9.225
CLUTCH	4.167	CONNECTOR PKG., EVAPORATOR TO	
COIL ASSY., IGNITION COIL	2.170	COMPRESSOR (SUCTION LINE)	9.238
COIL ASSY., STARTING MOTOR FIELD	2.049	CONNECTOR PKG., RECEIVER TO	
COIL & HOUSING ASSY., COMPRESSOR		EVAPORATOR (LIQUID LINE)	9.231
CLUTCH COIL	9.186	CONNECTOR, POWER ANTENNA	9.647
COIL SET, DELCOTRON	2.310	CONNECTOR, POWER BRAKE VACUUM LINE	4.931
COLLAR, COLD AIR DISTRIBUTION	9.257	CONNECTOR, STEERING OIL HOSE	
COLLAR, CRUISE CONTROL REGULATOR . . .	3.885	COUPLING	6.673
COLLAR, DELCOTRON DRIVE END BEARING . .	2.307	CONNECTOR, SUCTION THROTTLING (P.O.A.)	9.198
COLLAR, STARTING MOTOR THRUST	2.063	CONNECTOR, SUPERLIFT SHOCK ABSORBER	
COLLAR, STEERING COLUMN ATTACHING . . .	6.760	(AUTOMATIC FILL)	7.346
COLLECTOR, RADIO STATIC SUPPRESSION . .	9.663	CONNECTOR, SUPERLIFT SHOCK ABSORBER	
COLUMN ASSY., STEERING COLUMN	6.518	COMPRESSOR	7.447
COMPASS, WINDSHIELD COMPASS	8.873	CONNECTOR, THROTTLE RETURN CHECK OR	
COMPOUND, SERVICE MAINTENANCE	8.800	DASHPOT	3.440
COMPRESSION INSULATOR, BODY TO		CONNECTOR, TRANSMISSION VACUUM	
FRAME MOUNTING	9.023	MODULATOR	4.205
COMPRESSOR ASSY., REFRIGERANT	9.170	CONNECTOR, TRANSMISSION OIL CONTROL	
COMPRESSOR ASSY., SUPERLIFT SHOCK		VALVE BODY	4.265
ABSORBER	7.455	CONNECTOR, TRANSMISSION OIL COOLING	
CONCENTRATE, SERVICE MAINTENANCE . . .	8.800	(STANDARD COOLING)	4.128
CONDENSER, ELECTRICAL GENERATING		CONNECTOR, TRANSMISSION AUXILIARY	
(COMPLETE)	2.275	COOLER	4.128
CONDENSER, HORN	2.819	CONNECTOR, TURBO EXHAUST BY-PASS	3.352
CONDENSER, IGNITION COIL	2.170	CONNECTOR, TURBO VACUUM CHECK	3.374
CONDENSER, IGNITION DISTRIBUTOR	2.393	CONNECTOR, WINDSHIELD DEFROSTER	9.779
CONDENSER, MAIN WIRING HARNESS FUSE	2.483	CONNECTOR, WIRING HARNESS (9 WIRE	
CONDENSER, RADIO STATIC SUPPRESSION . .	9.663	FEMALE)	2.530
CONDENSER, REFRIGERANT CONDENSER . . .	9.190	CONNECTOR, WIRING HARNESS (10 WIRE	
CONDENSER, TURN SIGNAL	2.895	FEMALE)	2.530
CONDENSER, VOLTAGE CONTROL	2.500	CONNECTOR, WIRING HARNESS (11 WIRE	
CONDITIONER, EXTERIOR FINISH SERVICE		FEMALE)	2.530
MAINTENANCE	8.800	CONNECTOR, WIRING HARNESS (12 WIRE	

FEMALE)	2.530	PUMP	4.224
CONNECTOR, WIRING HARNESS (20 WIRE FEMALE)	2.530	CONVERTER ASSY., TRANSMISSION	4.115
CONNECTOR, WIRING HARNESS (2 WIRE FEMALE)	2.530	COOLANT, SERVICE MAINTENANCE	8.800
CONNECTOR, WIRING HARNESS (1 WIRE FEMALE)	2.530	COOLER ASSY., ENGINE OIL COOLER	1.540
CONNECTOR, WIRING HARNESS (10 WIRE MALE)	2.530	COOLER PKG., TRANSMISSION AUXILIARY (FOR TRAILER HAULING)	4.128
CONNECTOR, WIRING HARNESS (14 WIRE MALE)	2.530	COOLER, TRANSMISSION AUXILIARY (FOR TRAILER HAULING)	4.128
CONNECTOR, WIRING HARNESS (4 WIRE FEMALE)	2.530	CORE, HEATER CORE	8.854
CONNECTOR, WIRING HARNESS (7 WIRE FEMALE)	2.530	CORE, HEATER	8.854
CONNECTOR, WIRING HARNESS (7 WIRE MALE)	2.530	CORE, REFRIGERANT EVAPORATOR	9.210
CONNECTOR, WIRING HARNESS (3 WIRE MALE)	2.530	CORE, SUCTION THROTTLING (P.O.A.)	9.198
CONNECTOR, WIRING HARNESS (8 WIRE FEMALE)	2.530	CORE, SUPERLIFT SHOCK ABSORBER (AUTOMATIC FILL)	7.346
CONNECTOR, WIRING HARNESS (3 WIRE FEMALE)	2.530	CORE, WINDSHIELD DEFROSTER	9.779
CONNECTOR, WIRING HARNESS (4 WIRE-MALE)	2.530	CORK, CRANKSHAFT REAR BEARING CAP OIL	0.137
CONNECTOR, WIRING HARNESS (28 WIRE MALE)	2.530	COUNTERSHAFT, CLUTCH RELEASE	0.852
CONNECTOR, WIRING HARNESS (6 WIRE FEMALE)	2.530	COUNTERSHAFT, TRANSMISSION	4.428
CONNECTOR, WIRING HARNESS (6 WIRE MALE)	2.530	COUPLING, AIR INJECTION REACTOR	3.680
CONNECTOR, WIRING HARNESS (5 WIRE FEMALE)	2.530	COUPLING, CRUISE CONTROL REGULATOR	3.885
CONNECTOR, WIRING HARNESS (2 WIRE MALE)	2.530	COUPLING, ENGINE CRANKCASE VENTILATION	1.762
CONNECTOR, WIRING HARNESS (8 WIRE MALE)	2.530	COUPLING, ENGINE OIL COOLER	1.540
CONTACT, HORN	2.819	COUPLING, IGNITION DISTRIBUTOR VACUUM	2.420
CONTROL ASSY., AIR CONDITIONING TEMPERATURE & FAN (AT DASH)	9.273	COUPLING, SPEEDOMETER CABLE	4.342
CONTROL ASSY., CARBURETOR HAND CHOKE	3.480	COUPLING, STEERING SHAFT CONNECTING	6.525
CONTROL ASSY., HAND THROTTLE	3.481	COVER, AIR CONDITIONING	9.277
CONTROL ASSY., HEADLAMP ACTUATOR VACUUM	2.755	COVER, AIR CONDITIONING CONTROL	9.275
CONTROL ASSY., HEATER (AT DASH)	8.849	COVER, AIR CONDITIONING CONTROL	9.275
CONTROL ASSY., IGNITION DISTRIBUTOR VACUUM	2.410	COVER, AIR CONDITIONING CONTROL	9.279
CONTROL ASSY., LIGHT SWITCH CONTROL	2.486	COVER, AIR INJECTION REACTOR	3.660
CONTROL ASSY., RADIO	9.649	COVER ASSY., REAR BUMPER STEP	7.875
CONTROL, CARBURETOR BOOST LIMIT	3.374	COVER ASSY., STEERING GEAR HOUSING SIDE	6.807
CONTROL, CARBURETOR IDLE SPEED-UP	3.820	COVER, BATTERY	2.335
CONTROL, CARBURETOR VACUUM BREAK CONTROL	3.765	COVER, BRAKE SHOE ADJUSTING SCREW HOLE	5.117
CONTROL, CARBURETOR VACUUM BREAK	3.755	COVER, CARBURETOR AIR CLEANER	3.410
CONTROLLER, TURBO COMPRESSOR	3.354	COVER, CARBURETOR CHOKE HOUSING	3.750
CONTROL, OUTSIDE AIR VENTILATING	9.787	COVER, CARBURETOR FLOAT BOWL	3.734
CONTROL PKG., DUAL HYDRAULIC BRAKE	4.650	COVER, CARBURETOR IDLE COMPENSATOR	3.820
CONTROL PKG., HEADLAMP DIMMER	2.459	COVER, CARBURETOR VACUUM BREAK CONTROL	3.765
CONTROL PKG., HEADLAMP OFF-DELAY CONTROL (NIGHT-WATCH)	2.485	COVER, CARBURETOR VACUUM BREAK	3.755
CONTROL, WHEEL LOCK CONTROL	4.720	COVER, CLOCK	9.772
CONTROL, WINDSHIELD DEFROSTER	9.779	COVER, CLUTCH & FLYWHEEL HOUSING ACCESS OR VENT	0.686
CONVECTOR, STEREO TAPE PLAYER	9.670	COVER, COLD AIR	9.264
CONVERSION PKG., COMPRESSOR	3.342	COVER, COMPRESSOR	9.172
CONVERSION PKG., ENGINE CYLINDER HEAD (LOW OCTANE FUEL)	0.289	COVER, CONTROLLER	3.356
CONVERSION PKG., ENGINE INTAKE & EXHAUST VALVE SPRING	0.309	COVER, CONVERTER OR FLYWHEEL HOUSING (LOWER)	0.679
CONVERSION PKG., GENERATOR COMMUTATOR	2.297	COVER, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
CONVERSION PKG., IGNITION DISTRIBUTOR (ULTRA HIGH VOLTAGE)	2.383	COVER, CRUISE CONTROL REGULATOR	3.885
CONVERSION PKG., POWER BRAKE (MANUAL TO POWER)	4.898	COVER, CRUISE CONTROL SELECTOR	3.883
CONVERSION PKG., POWER STEERING	6.508	COVER, DELCOTRON	2.313
CONVERSION PKGS., ENGINE CARBURETOR	3.725	COVER, ENGINE CRANKSHAFT	0.659
CONVERSION PKG., TRANSMISSION OIL		COVER, ENGINE EXHAUST EMISSION CONTROL	2.408
		COVER, ENGINE FRONT COVER	0.206
		COVER, ENGINE OIL FILTER	1.837
		COVER, ENGINE OIL PUMP	1.723
		COVER, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
		COVER, ENGINE VALVE PUSH ROD SIDE	0.439
		COVER, ENGINE VALVE ROCKER COVER	0.386
		COVER, ENGINE WATER (ON ENGINE)	1.153
		COVER, FLUID METERING VALVE	3.364
		COVER, FRONT BUMPER BAR ATTACHING	7.836
		COVER, FUEL INTAKE MANIFOLD	3.265
		COVER, FUEL PUMP PULSATOR	3.910
		COVER, HOOD RELEASE	8.080
		COVER, HORN RELAY & BATTERY CABLE JUNCTION	2.815
		COVER, HORN	2.819
		COVER, MAIN WIRING HARNESS FUSE	2.483

COVER, MASTER BRAKE CYL. FILLER	4.651
COVER, MASTER BRAKE CYLINDER	4.648
COVER ONLY, CLUTCH PRESSURE PLATE	0.861
COVER, OUTSIDE AIR	9.789
COVER, PARKING BRAKE CABLE	4.785
COVER PKG., REAR AXLE HOUSING OR FINAL DRIVE	5.398
COVER & PRESSURE PLATE, CLUTCH	0.859
COVER, REAR AXLE HOUSING OR FINAL DRIVE	5.398
COVER, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
COVER, STARTING MOTOR SWITCH	2.102
COVER, STEERING COLUMN ATTACHING	6.760
COVER, STEERING COLUMN FLOOR	6.758
COVER, STEERING COLUMN	6.518
COVER, STEERING GEAR HOUSING END	6.806
COVER, STEERING OIL PUMP	6.609
COVER, STEERING RELAY ROD BALL SEAT	6.883
COVER, STEERING SHAFT ANTI-THEFT	6.500
COVER, STEERING WHEEL SPOKE	6.512
COVER, SUCTION THROTTLING (P.O.A.)	9.198
COVER, TILT WHEEL	6.514
COVER, TRANSMISSION CASE AND OR SPROCKET	4.105
COVER, TRANSMISSION CASE FRONT	4.123
COVER, TRANSMISSION FRONT UNIT TORUS	4.155
COVER, TRANSMISSION FRONT SERVO	4.225
COVER, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228
COVER, TRANSMISSION GOVERNOR	4.256
COVER, TRANSMISSION	4.020
COVER, TRANSMISSION OIL PUMP	4.224
COVER, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241
COVER, TRANSMISSION REAR	4.317
COVER, TRANSMISSION SHIFT INDICATOR	4.022
COVER & TUBE, POWER BRAKE AIR CLEANER	4.913
COVER, TURBO EXHAUST BY-PASS	3.352
COVER, TURN SIGNAL SWITCH ACTUATOR	2.906
CRANKSHAFT, ENGINE	0.646
CREAM WAX, EXTERIOR FINISH SERVICE MAINTENANCE	8.800
CROSSOVER PIPE, EXHAUST	3.609
CRUISE CONTROL PKG., AUTOMATIC THROTTLE	3.880
CUP, BRAKE SHOE HOLD DOWN SPRING	5.042
CUP, CRUISE CONTROL REGULATOR	3.885
CUP, FRONT DRIVE OUTER AXLE SHAFT	6.061
CUP, HORN	2.819
CUP, MASTER BRAKE CYL.	4.657
CUP, MASTER BRAKE CYL. PISTON (RUBBER)	4.654
CUP, SUCTION THROTTLING (P.O.A.)	9.198
CUP, TURN SIGNAL SWITCH ACTUATOR	2.906
CUP, WHEEL BRAKE CYL. OR CALIPER PISTON	4.667
CUSHION, CLOCK	9.772
CUSHION, HORN EMBLEM CAP	2.816
CUSHION, REAR SPRING	7.545
CUSHION, TORSION BAR	7.105
CUSHION, TRANSMISSION CLUTCH	4.166
CUSHION, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216
CYLINDER ASSY., FRONT WHEEL BRAKE	4.665
CYLINDER ASSY., HYDRAULIC BRAKE MASTER (COMPLETE-MORaine)	4.650
CYLINDER ASSY., HYDRAULIC BRAKE MASTER (COMPLETE-BENDIX)	4.650
CYLINDER ASSY., POWER BRAKE POWER ASSIST	4.901
CYLINDER ASSY., POWER BRAKE MASTER & POWER (COMPLETE)	4.901
CYLINDER ASSY., REAR WHEEL BRAKE	4.665
CYLINDER ASSY., REFRIGERANT COMPRESSOR	9.170
CYLINDER ASSY., SPARE WHEEL LOCK	7.675

CYLINDER, HYDRAULIC BRAKE MASTER (CYL. ONLY)	4.650
CYLINDER, IGNITION LOCK	2.188
CYLINDER, TRANSMISSION REAR CLUTCH	4.184

D

DAMPER ASSY., ENGINE CRANKSHAFT FLYWHEEL	0.666
DAMPER, ENGINE TIMING CHAIN	0.724
DAMPER PKG., REAR AXLE VIBRATION	5.394
DAMPER, TRANSMISSION	4.081
DASHPOT ASSY., CARBURETOR AIR VALVE	3.757
DASHPOT, THROTTLE RETURN OR SLOW IDLE	3.440
DECAL, FRONT FENDER FINISH TRIM	8.147
DECAL, HOOD PANEL	8.055
DEFLECTOR, COLD AIR	9.264
DEFLECTOR, ENGINE CRANKCASE OIL	1.430
DEFLECTOR, ENGINE INTAKE & EXHAUST VALVE OIL	0.308
DEFLECTOR, FRONT BUMPER GRAVEL	7.833
DEFLECTOR, FUEL TANK FILLER PIPE	3.008
DEFLECTOR, HEATER BLOWER MOTOR	8.857
DEFLECTOR, OUTSIDE AIR	9.789
DEFLECTOR, PROPELLER SHAFT UNIVERSAL JOINT COMPANION (AXLE END)	5.545
DEFLECTOR, RADIATOR CORE SUPPORT	1.272
DEFLECTOR, RADIATOR GRILLE	1.266
DEFLECTOR, REAR LAMP STONE (INNER—RUBBER)	2.664
DEFOGGER PKG., REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
DEGREASER, SERVICE MAINTENANCE	8.800
DELCO TRON ASSY., ELECTRICAL GENERATING (COMPLETE-LESS FAN & PULLEY)	2.275
DETENT, TRANSMISSION OIL CONTROL VALVE BODY	4.265
DIAL, CRUISE CONTROL SELECTOR	3.883
DIAL, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
DIAL, INSTRUMENT CLUSTER	9.745
DIAL, INSTRUMENT CLUSTER	9.744
DIAL, TRANSMISSION	4.020
DIAPHRAGM, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
DIAPHRAGM, AIR CONDITIONING	9.277
DIAPHRAGM, CARBURETOR DEPRESSURE	3.372
DIAPHRAGM, CARBURETOR FUEL	3.838
DIAPHRAGM, CARBURETOR VACUUM BREAK CONTROL	3.765
DIAPHRAGM, CARBURETOR VACUUM BREAK	3.755
DIAPHRAGM, COLD AIR DISTRIBUTION	9.257
DIAPHRAGM, CONTROLLER	3.356
DIAPHRAGM, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
DIAPHRAGM, FLUID METERING VALVE	3.366
DIAPHRAGM, FUEL PUMP PULSATOR	3.910
DIAPHRAGM, HEATER VACUUM	8.850
DIAPHRAGM KIT, FUEL PUMP	3.925
DIAPHRAGM, MASTER BRAKE CYL. FILLER	4.651
DIAPHRAGM, OUTSIDE AIR	9.789
DIAPHRAGM PKG., SUPERLIFT SHOCK ABSORBER COMPRESSOR ASSY.	7.460
DIAPHRAGM, POWER BRAKE FLOATING CONTROL VALVE	4.935
DIAPHRAGM, POWER BRAKE POWER CYLINDER	4.922
DIAPHRAGM, REFRIGERANT CONTROL MASTER SWITCH	9.280
DIAPHRAGM, SUCTION THROTTLING (P.O.A.)	9.198
DIAPHRAGM, WINDSHIELD DEFROSTER	9.779
DIODE PKG., DELCO TRON	2.319
DISC ASSY., WHEEL TRIM	5.871

DISC, COMPRESSOR	9.172	ELBOW, TRANSMISSION AUXILIARY COOLER	4.128
DISC, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511	ELBOW, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128
DISC, FRONT WHEEL DISC BRAKE	5.809	ELBOW, TRANSMISSION VACUUM MODULATOR	4.205
DISC PKG., WHEEL TRIM (ACCESSORY PACKAGES)	5.871	ELEMENT, AIR INJECTION REACTOR PUMP	3.672
DISC, POWER BRAKE REACTION	4.934	ELEMENT, CARBURETOR AIR CLEANER	3.41D
DISC, POWER BRAKE REACTION	4.911	ELEMENT, CIGARETTE LIGHTER	9.709
DISC, WHEEL DISC (COMPONENT PARTS)	5.871	ELEMENT, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
DISPENSER, TISSUE AND LITTER CARRIER	8.891	ELEMENT, ENGINE CRANKCASE OIL FILLER	1.758
DISTRIBUTOR ASSY., IGNITION (COMPLETE)	2.361	ELEMENT, ENGINE OIL FILTER	1.836
DISTRIBUTOR, BRAKE LINE (FRONT)	4.874	ELEMENT, EVAPORATIVE EMISSION SYSTEM	3.13D
DISTRIBUTOR, CAR HEATER	8.845	ELEMENT, FUEL PUMP	3.910
DISTRIBUTOR, HYDRAULIC BRAKE LINE	4.686	ELEMENT, FUEL STRAINER	3.890
DIVERTER PKG., FUEL STRAINER	3.890	EMBLEM, FRONT FENDER FINISH TRIM	8.147
DIVIDER, POWER BRAKE CYLINDER	4.906	EMBLEM, HOOD OR FRONT END PANEL	8.039
DOG, CRUISE CONTROL REGULATOR	3.885	EMBLEM, HOOD PANEL	8.054
DOME, FUEL LINE	3.163	EMBLEM, HORN BLOWER	2.820
DOOR, BACK-UP LAMP	2.697	EMBLEM PKG., FRONT FENDER FINISH TRIM	8.147
DOOR, CARBURETOR AIR CLEANER	3.403	EMBLEM, RADIATOR GRILLE OR FRONT END PANEL	1.303
DOOR, COLD AIR	9.264	EMBLEM, REAR BUMPER BAR	7.832
DOOR, FUEL TANK FILLER	8.208	EMBLEM, WHEEL DISC (COMPONENT PARTS)	5.871
DOOR, HEADLAMP	2.728	END ASSY., STEERING TIE ROD (COMPLETE WITH BALL STUD)	6.233
DOOR, OUTSIDE AIR	9.789	END, CRUISE CONTROL REGULATOR	3.885
DOOR, PARKING LAMP	2.593	END, THROTTLE ROD	3.425
DOOR, STOP & TAIL LAMP	2.681	END, TRANSMISSION SHIFT CONTROL ROD	4.037
DRAIN COCK, ENGINE PIPE	0.034	ENGINE ASSY., BASIC ENGINE (LESS CYL. HEADS, MANIFOLDS, OIL PUMP, OIL PAN, FUEL AND ELECTRICAL PARTS)	0.033
DRAIN COCK, RADIATOR	1.219	ENGINE ASSY., COMPLETE (WITH ELECTRICAL & FUEL PARTS, CARB. & AIR CLEANER)	0.000
DRAIN COCKS	8.951	EQUALIZER, CLUTCH RELEASE	0.852
DRESSING, EXTERIOR FINISH SERVICE MAINTENANCE	8.800	EQUALIZER, CRUISE CONTROL SELECTOR	3.883
DRIVE ASSY., STARTING MOTOR	2.086	EQUALIZER, PARKING BRAKE CABLE	4.765
DRIVE SCREW	8.978	EQUALIZER, TRANSMISSION SHIFT LEVER	4.046
DRUM, FRONT WHEEL BRAKE	6.334	EQUALIZER, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070
DRUM, FRONT WHEEL DRUM BRAKE	5.809	EQUALIZER, TRANSMISSION SHIFT CONTROL RELAY	4.040
DRUM & HUB, FRONT WHEEL DRUM BRAKE	5.809	ESCUTCHEON, AIR CONDITIONING TEMPERATURE & FAN (AT DASH)	9.273
DRUM, REAR WHEEL BRAKE	5.809	ESCUTCHEON, CIGARETTE LIGHTER	9.709
DRUM, TRANSMISSION CLUTCH	4.169	ESCUTCHEON, CRUISE CONTROL SELECTOR	3.883
DRUM, TRANSMISSION REAR CLUTCH	4.184	ESCUTCHEON, HEATER (AT DASH)	8.849
DUCT, CARBURETOR OUTSIDE AIR INDUCTION	3.417	ESCUTCHEON, IGNITION SWITCH	2.198
DUCT, COLD AIR DISTRIBUTION	9.257	ESCUTCHEON, INSTRUMENT CLUSTER	9.743
DUCT, EVAPORATOR BLOWER	9.215	ESCUTCHEON, LIGHT SWITCH CONTROL	2.487
DUCT, EXHAUST MANIFOLD HOT AIR	3.602	ESCUTCHEON, POWER ANTENNA	9.647
DUCT, HEATER BLOWER MOTOR	8.857	ESCUTCHEON, RADIO	9.649
DUCT, HEATER	9.786	ESCUTCHEON, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
DUCT, OUTSIDE AIR	9.789	ESCUTCHEON, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
E			
ECCENTRIC, FUEL PUMP ACTUATING (ON CAMSHAFT)	3.935	ESCUTCHEON, STEREO TAPE PLAYER	9.670
ELBOW, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281	ESCUTCHEON, TRANSMISSION HAND SHIFT LEVER	4.006
ELBOW, AIR INJECTION REACTOR	3.680	EVAPORATOR ASSY., REFRIGERANT EVAPORATOR	9.210
ELBOW, BLOWER MOTOR COOLING OUTLET	9.218	EXPANDER, POWER BRAKE POWER CYLINDER	4.922
ELBOW, CARBURETOR IDLE COMPENSATOR	3.820	EXPANSION TANK, FUEL TANK	3.003
ELBOW, CHOKE AIR OR HEATER	3.603	EXTENSION, AIR INJECTION REACTOR	3.675
ELBOW, COLD AIR DISTRIBUTION	9.257	EXTENSION, CLUTCH PEDAL RETURN SPRING	0.846
ELBOW, CRANKCASE VENTILATION	1.745	EXTENSION, CLUTCH RELEASE FORK	0.795
ELBOW, ENGINE OIL COOLER	1.540	EXTENSION, ENGINE OIL PUMP	1.639
ELBOW, ENGINE OIL FILTER	1.837	EXTENSION, EXHAUST PIPE	3.609
ELBOW, ENGINE OIL PRESSURE GAUGE	1.800	EXTENSION, FRAME SIDE RAIL FRONT (FRAME HORN)	7.009
ELBOW, ENGINE VACUUM	9.755	EXTENSION, FRONT BUMPER GRAVEL	7.833
ELBOW, EVAPORATOR BLOWER	9.215	EXTENSION, FRONT FENDER FILLER	8.160
ELBOW, FUEL LINE INVERTED FLARED	8.963	EXTENSION, FRONT FENDER	8.131
ELBOW, FUEL LINE	3.163	EXTENSION, FRONT FENDER TRIM	8.147
ELBOW, HEATER BLOWER MOTOR	8.857	EXTENSION, FRONT PRIMARY BUMPER BAR	7.831
ELBOW, HEATER VACUUM	8.850		
ELBOW, IGNITION DISTRIBUTOR VACUUM	9.717		
ELBOW, INTAKE MANIFOLD VACUUM	3.278		
ELBOW, OUTSIDE AIR	9.789		
ELBOW, POWER BRAKE VACUUM LINE	4.931		
ELBOW, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778		

EXTENSION, HOOD PANEL FRONT	8.005
EXTENSION, MUFFLER OR RESONATOR TAIL PIPE	3.705
EXTENSION PKG., RADIATOR GRILLE	1.266
EXTENSION PKG., ROCKER FINISHING PANEL	8.304
EXTENSION, RADIATOR CORE SUPPORT TIE BAR	1.271
EXTENSION, RADIATOR CORE SUPPORT	1.272
EXTENSION, RADIATOR GRILLE OR FRONT END PANEL	1.303
EXTENSION, RADIATOR GRILLE	1.268
EXTENSION, RADIATOR GRILLE	1.266
EXTENSION, REAR PRIMARY BUMPER BAR	7.831
EXTENSION, SHOCK ABSORBER MOUNTING	7.395
EXTENSION, STOP & TAIL LAMP	2.680
EXTENSION, TIRE VALVE	5.875
EXTENSION, TRANSMISSION REAR	4.317
EXTENSION, TRANSMISSION SHIFT LEVER	4.046
EXTENSION, TRANSMISSION FLOOR SHIFT	4.047
EXTENSION UNIT, FRAME FRONT END REPLACEMENT (INC. FRONT CROSS MEMBER & FRAME HORNS)	7.010
EXTINGUISHER ASSY., FIRE	9.990
EXTINGUISHER, HIGHWAY EMERGENCY	8.821
EYELET, HORN	2.819

F

FACE PLATE, HEATER (AT DASH)	8.849
FAN ASSY., RADIATOR FAN	1.064
FAN, DELCOTRON	2.274
FAN, EVAPORATOR BLOWER	9.216
FAN, FORCED AIR VENTILATION	9.790
FAN, HEATER BLOWER MOTOR	8.857
FAN, OUTSIDE AIR	9.789
FAN, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
FASTENER, FRONT FENDER	8.154
FASTENER, HEATER (AT DASH)	8.849
FASTENER, HOOD RELEASE	8.080
FASTENER, RADIATOR CORE SUPPORT	1.270
FASTENER, REAR PRIMARY BUMPER BAR	7.831
FASTENER, STEERING COLUMN FLOOR	6.758
FASTENER, TRANSMISSION CONTROL SWITCH	4.060
FENDER, FRONT FENDER	8.130
FILLER, FRONT BUMPER GRAVEL	7.833
FILLER, FRONT FENDER	8.131
FILLER, FRONT PRIMARY BUMPER BAR	7.831
FILLER, FUEL TANK	3.003
FILLER, HOOD PANEL	8.024
FILLER, PLASTIC HOOD OR VALANCE PANEL REPAIR	8.800
FILLER, RADIATOR CORE SUPPORT	1.272
FILLER, RADIATOR GRILLE	1.266
FILLER, REAR PRIMARY BUMPER BAR	7.831
FILTER, AIR INJECTION REACTOR PUMP	3.672
FILTER ASSY., ENGINE OIL FILTER	1.835
FILTER ASSY., FUEL STRAINER	3.890
FILTER, CARBURETOR FUEL INLET	3.740
FILTER, CHOKE AIR OR HEATER	3.603
FILTER CHOKE, RADIO STATIC SUPPRESSION	9.663
FILTER, CLIMATIC COMBUSTION CONTROL	3.417
FILTER, CRANKCASE VENTILATION	1.745
FILTER, CRUISE CONTROL REGULATOR	3.885
FILTER, DISTRIBUTOR VACUUM HOSE	3.445
FILTER, FLUID METERING VALVE	3.364
FILTER, FRONT PARKING & SIGNAL LAMP	2.589
FILTER, FUEL GAUGE (IN TANK)	3.110
FILTER, INSTRUMENT CLUSTER SPEED WARNING	9.762
FILTER, INSTRUMENT CLUSTER	9.744
FILTER, POWER BRAKE AIR CLEANER	4.913
FILTER, STOP & TAIL LAMP	2.689

FILTER, THROTTLE RETURN CHECK OR DASHPOT	3.440
FILTER, TURBO ROCKET FLUID	3.362
FILTER, TURN SIGNAL FLASHER (IN INSTRUMENT PANEL)	2.893
FINAL DRIVE PKG., FINAL DRIVE ASSY. (WITH GEARS-LESS SHAFTS)	5.504
FINISH RESTORER, EXTERIOR FINISH SERVICE MAINTENANCE	8.800
FIN RING, WHEEL DISC (COMPONENT PARTS)	5.871
FIN, WHEEL DISC (COMPONENT PARTS)	5.871
FITTING, AIR INJECTION REACTOR	3.680
FITTING, CARBURETOR IDLE SPEED-UP	3.820
FITTING, CARBURETOR VACUUM BREAK	3.755
FITTING, CARBURETOR VACUUM BREAK CONTROL	3.765
FITTING, CRANKCASE VENTILATION	1.745
FITTING, FRONT WHEEL LOWER CONTROL ARM	6.174
FITTING, FRONT WHEEL UPPER CONTROL ARM	6.178
FITTING, FUEL LINE	3.163
FITTING, HEATER VACUUM	8.850
FITTING, HYDRAULIC BRAKE LINE	4.686
FITTING, IGNITION DISTRIBUTOR VACUUM	2.420
FITTING, LUBRICATION	8.984
FITTING PKG., AIR CONDITIONING REFRIGERANT LINE	9.222
FITTING, STEERING OIL HOSE COUPLING	6.673
FITTING, STEERING OIL PUMP	6.635
FITTING, STEERING RELAY ROD BALL STUD	6.874
FITTING, SUPERLIFT SHOCK ABSORBER (MANUAL FILL)	7.346
FLAG, HIGHWAY EMERGENCY	8.821
FLANGE, COMPRESSOR	3.342
FLANGE, ENGINE OIL PAN DRAIN	1.453
FLANGE, EXHAUST PIPE TO MANIFOLD	3.610
FLANGE, OUTSIDE AIR	9.789
FLANGE, PROPELLER SHAFT UNIVERSAL JOINT COMPANION (AXLE END)	5.545
FLANGE, STEERING SHAFT CONNECTING	6.525
FLANGE, TRANSMISSION HAND SHIFT LEVER	4.008
FLANGE, TRANSMISSION PLANETARY	4.175
FLANGE, UNIVERSAL JOINT COMPANION (TRANS. END)	4.344
FLARE, HIGHWAY EMERGENCY	8.821
FLASHER, HAZARD WARNING OR MARKER LAMP	2.575
FLASHER, TURN SIGNAL	2.892
FLOAT ASSY., CARBURETOR FUEL	3.745
FLOAT, FLUID METERING VALVE	3.366
FLUID, HYDRAULIC BRAKE	4.683
FLUID, TURBO ROCKET	3.370
FLYWHEEL, ENGINE CRANKSHAFT FLYWHEEL	0.666
FORK, CLUTCH RELEASE FORK	0.795
FORK, TRANSMISSION SHIFTING	4.303
FRAME ASSY., CHASSIS (COMPLETE)	7.003
FRAME ASSY., DELCOTRON STATOR END	2.297
FRAME ASSY., HEAVY DUTY TRAILER HAULING CHASSIS	7.003
FRAME, DELCOTRON DRIVE END	2.305
FRAME, GENERATOR COMMUTATOR	2.297
FRAME, HOOD OR FRONT END PANEL	8.039
FRAME, STARTING MOTOR COMMUTATOR END	2.067
FREON, AIR CONDITIONING	9.282
FREON, SERVICE MAINTENANCE	8.800
FUSE ASSY., COMPRESSOR HEAT SWITCH	9.172
FUSE ASSY., VOLTAGE CONTROL	2.500
FUSE, COMPRESSOR	9.172
FUSE, ELECTRICAL	8.965
FUSE, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
FUSE HOLDER ASSY., AIR CONDITIONING	9.276
FUSE PKG., HIGHWAY EMERGENCY	8.821
FUSIBLE CABLE, ELECTRICAL	2.530
FUSIBLE LINK PACKAGE (WIRING HARNESS)	

REPAIR)	2.480
G	
GASKET, ACCELERATOR PEDAL SUPPORT ROD	3.469
GASKET, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
GASKET, AIR RIDE PRESSURE PIPE	7.482
GASKET, AXLE HOUSING OR FINAL DRIVE COVER	5.399
GASKET, BACK-UP LAMP LENS	2.697
GASKET, BACK-UP LAMP MOUNTING	2.697
GASKET, CARBURETOR AIR CLEANER	3.406
GASKET, CARBURETOR AIR CLEANER	3.403
GASKET, CARBURETOR CHOKE HOUSING	3.750
GASKET, CARBURETOR DEPRESSURE	3.372
GASKET, CARBURETOR FLOAT BOWL TO AIR HORN	3.738
GASKET, CARBURETOR FLOAT BOWL TO THROTTLE BODY	3.735
GASKET, CARBURETOR FUEL INLET	3.740
GASKET, CARBURETOR IDLE COMPENSATOR	3.820
GASKET, CARBURETOR	3.814
GASKET, CARBURETOR POWER	3.858
GASKET, CARBURETOR TO MANIFOLD	3.726
GASKET, CAR HEATER	8.845
GASKET, CHOKE AIR OR HEATER	3.603
GASKET, CLOCK	9.772
GASKET, COLD AIR DISTRIBUTION	9.257
GASKET, COLD AIR DISTRIBUTOR	9.263
GASKET, COMPRESSOR CLUTCH COIL	9.186
GASKET, COMPRESSOR MOUNTING	9.171
GASKET, COMPRESSOR PRESSURE RELIEF	9.178
GASKET, COMPRESSOR	9.177
GASKET, COPPER-ASBESTOS	8.955
GASKET, CORNERING LAMP	2.585
GASKET, CRANKCASE VENTILATOR	1.780
GASKET, CRANKCASE VENTILATION	1.745
GASKET, CRANKSHAFT TO FLYWHEEL	0.665
GASKET, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
GASKET, CRUISE CONTROL REGULATOR	3.885
GASKET, DELCOTRON DRIVE END BEARING	2.307
GASKET, DIFFERENTIAL CARRIER TO AXLE HOUSING	5.508
GASKET, ENGINE CYLINDER HEAD OR VALVE GRIND	0.289
GASKET, ENGINE EXHAUST EMISSION CONTROL	2.408
GASKET, ENGINE FRONT COVER	0.207
GASKET, ENGINE OIL FILTER MOUNTING	1.844
GASKET, ENGINE OIL FILTER	1.837
GASKET, ENGINE OIL PAN DRAIN PLUG	1.456
GASKET, ENGINE OIL PAN	1.429
GASKET, ENGINE OIL PUMP COVER	1.724
GASKET, ENGINE OIL PUMP PRESSURE REGULATOR HOLE	1.531
GASKET, ENGINE OIL PUMP PRESSURE	1.609
GASKET, ENGINE OIL PUMP SCREEN	1.657
GASKET, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
GASKET, ENGINE VALVE PUSH ROD SIDE COVER	0.443
GASKET, ENGINE VALVE ROCKER COVER	0.423
GASKET, ENGINE WATER OUTLET MOUNTING	1.154
GASKET, ENGINE WATER PUMP MOUNTING	1.079
GASKET, ENGINE WATER TEMPERATURE THERMOSTAT HOUSING	1.252
GASKET, EVAPORATIVE EMISSION SYSTEM	3.120
GASKET, EVAPORATOR BLOWER	9.215
GASKET, EVAPORATOR BLOWER	9.216
GASKET, EVAPORATOR	9.211

GASKET, EXHAUST MANIFOLD HEAT CONTROL	3.640
GASKET, EXHAUST MANIFOLD HOT AIR	3.602
GASKET, EXHAUST PIPE TO MANIFOLD	3.611
GASKET, FINAL DRIVE ASSY. FILLER & DRAIN	5.400
GASKET, FINAL DRIVE TO TRANSMISSION	5.508
GASKET, FLUID METERING VALVE	3.364
GASKET, FORCED AIR VENTILATION	9.790
GASKET, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	5.002
GASKET, FRONT BRAKE GREASE	6.038
GASKET, FRONT END PANEL	1.263
GASKET, FRONT FENDER	8.131
GASKET, FRONT FENDER	8.154
GASKET, FUEL GAUGE TO TANK	3.112
GASKET, FUEL INTAKE MANIFOLD	3.265
GASKET, FUEL PUMP MOUNTING	3.904
GASKET, FUEL STRAINER	3.890
GASKET, FUEL TANK (INST. PANEL UNIT)	3.108
GASKET, HAZARD WARNING OR MARKER LAMP	2.575
GASKET, HEATER BLOWER MOTOR	8.857
GASKET, HEATER CORE	8.854
GASKET, HEATER HOSE TO ENGINE	8.866
GASKET, HEATER MOTOR MOUNTING	8.856
GASKET, HOOD PANEL FRONT	8.005
GASKET, HORN BLOWER	2.820
GASKET, IGNITION DISTRIBUTOR MOUNTING	2.363
GASKET, INSTRUMENT CLUSTER	9.745
GASKET, INSTRUMENT CLUSTER SPEED WARNING	9.762
GASKET, INSTRUMENT CLUSTER	9.749
GASKET, INSTRUMENT CLUSTER	9.744
GASKET, INTAKE MANIFOLD	3.270
GASKET, INTAKE TO EXHAUST MANIFOLD	3.272
GASKET, LICENSE LAMP	2.707
GASKET, MANUAL ANTENNA	9.647
GASKET, MASTER BRAKE CYL. FILLER	4.651
GASKET, MASTER BRAKE CYLINDER	4.661
GASKET, MASTER BRAKE CYLINDER	4.648
GASKET, MASTER CYLINDER RESIDUAL VALVE TUBE	4.652
GASKET, OUTSIDE AIR	9.789
GASKET, PARKING LAMP MOUNTING	2.599
GASKET, PARKING LAMP WIRING	2.596
GASKET, PARKING & SIGNAL LAMP LENS	2.590
GASKET PKG., ENGINE CYLINDER HEAD OR VALVE GRIND	0.289
GASKET PKG., ENGINE OIL PAN	1.429
GASKET PKG., TRANSMISSION OVERHAUL	4.005
GASKET, POWER ANTENNA	9.647
GASKET, POWER BRAKE CYLINDER	4.906
GASKET, REAR BRAKE BACKING PLATE TO AXLE	5.002
GASKET, REAR BUMPER BAR	7.832
GASKET, REAR LAMP STONE (INNER—RUBBER)	2.664
GASKET, REAR UNIVERSAL JOINT FLANGE	5.595
GASKET, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
GASKET SET, CARBURETOR	3.724
GASKET SET, ENGINE CYLINDER BLOCK INSTALLATION	0.040
GASKET SET, ENGINE TUNE-UP	0.010
GASKET, SPARK PLUG (COPPER ANNULAR TYPE)	2.271
GASKET, STEERING GEAR HOUSING SIDE COVER	6.809
GASKET, STEERING GEAR HOUSING END COVER	6.825
GASKET, STEERING OIL PUMP	6.635
GASKET, STEERING OIL PUMP	6.609
GASKET, STOP & TAIL LAMP ASSY.	2.660
GASKET, STOP & TAIL LAMP	2.689
GASKET, STOP & TAIL LAMP LENS	2.684
GASKET, STOP & TAIL LAMP	2.681
GASKET, SUCTION THROTTLING (P.O.A.)	9.198

GASKET, SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL VALVE (AUTOMATIC FILL)	7.476
GASKET, SUPERLIFT SHDCK ABSORBER COMPRESSDR COVER	7.457
GASKET, THROTTLE ROD	3.425
GASKET, TRANSMISSION AUXILIARY COOLER	4.128
GASKET, TRANSMISSION CASE AND OR SPROCKET COVER	4.109
GASKET, TRANSMISSION CASE FRONT COVER	4.124
GASKET, TRANSMISSION DRIVE & DRIVEN LINK SPROCKET	4.130
GASKET, TRANSMISSION FRONT UNIT TORUS	4.155
GASKET, TRANSMISSION FRONT SERVO	4.225
GASKET, TRANSMISSION GOVERNOR	4.256
GASKET, TRANSMISSION MAIN DRIVE GEAR BEARING RETAINER	4.358
GASKET, TRANSMISSION MAIN TORUS	4.118
GASKET, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128
GASKET, TRANSMISSION OIL PRESSURE SPARK CONTROL	4.075
GASKET, TRANSMISSION OIL CONTROL VALVE BODY	4.265
GASKET, TRANSMISSION OIL PAN	4.195
GASKET, TRANSMISSION OIL PAN	4.196
GASKET, TRANSMISSION OIL PUMP PRIMING	4.203
GASKET, TRANSMISSION OIL PUMP	4.226
GASKET, TRANSMISSION OIL PAN	4.197
GASKET, TRANSMISSION	4.020
GASKET, TRANSMISSION REVERSE CLUTCH	4.188
GASKET, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241
GASKET, TRANSMISSION REAR EXTENSION	4.318
GASKET, TRANSMISSION STATOR CONTROL	4.122
GASKET, TRANSMISSION TO CLUTCH HOUSING	4.005
GASKET, TURBO COMPRESSOR	3.344
GASKET, TURBO COMPRESSOR OIL DRAIN	3.358
GASKET, TURBO EXHAUST BY-PASS	3.352
GASKET, TURBO FLUID & WATER	3.372
GASKET, TURBO ROCKET FLUID	3.360
GASKET, TURBO VACUUM CHECK	3.374
GASKET, VENTURI CLUSTER TO BOWL	3.790
GASKET, WHEEL BRG. RETAINER TO BACKING PLATE	5.819
GASKET, WHEEL DISC (COMPONENT PARTS)	5.871
GASKET, WHEEL LOCK CONTROL SENSOR	4.710
GATE, STEERING SHAFT ANTI-THEFT	6.500
GATE, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070
GATE, TRANSMISSION FLOOR SHIFT	4.015
GATE, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
GAUGE ASSY., ENGINE WATER TEMPERATURE (DASH UNIT)	1.148
GAUGE, ENGINE VACUUM	9.755
GAUGE, FUEL TANK (INST. PANEL UNIT)	3.108
GAUGE, FUEL TANK (TANK UNIT)	3.107
GAUGE, INSTRUMENT CLUSTER OIL PRESSURE GAUGE	1.803
GAUGE, TURBO ROCKET FLUID	3.360
GEAR ASSY., STEERING	6.508
GEAR ASSY., TRANSMISSION INPUT RING	4.158
GEAR ASSY., TRANSMISSION SPEEDOMETER DRIVEN	4.337
GEAR, CRUISE CONTROL REGULATOR	3.885
GEAR, DIFFERENTIAL OR FINAL DRIVE PINION	5.526
GEAR, DIFFERENTIAL OR FINAL DRIVE SIDE	5.528
GEAR, ENGINE CAMSHAFT SPROCKET GEAR	0.736
GEAR, ENGINE CRANKSHAFT SPROCKET	0.728
GEAR, ENGINE CRANKSHAFT FLYWHEEL RING	0.673
GEAR, ENGINE OIL PUMP	1.639

GEAR, FINAL DRIVE	5.515
GEAR, IGNITION DISTRIBUTOR DRIVE	2.374
GEAR PKG., DIFFERENTIAL DR FINAL DRIVE SIDE & PINION	5.527
GEAR PKG., TRANSMISSION GOVERNOR	4.256
GEAR SET, COMPRESSOR OIL PUMP	9.172
GEAR SET, DIFFERENTIAL OR FINAL DRIVE RING & DRIVE PINION	5.529
GEAR, STEERING GEAR PITMAN SHAFT	6.850
GEAR, TRANSMISSION CASE	4.162
GEAR, TRANSMISSION COUNTERSHAFT CLUSTER	4.421
GEAR, TRANSMISSION DRIVE & DRIVEN	4.131
GEAR, TRANSMISSION GOVERNOR & OIL PUMP DRIVE (STEEL)	4.211
GEAR, TRANSMISSION GOVERNOR & OIL PUMP DRIVE (BRONZE)	4.210
GEAR, TRANSMISSION MAIN DRIVE (CLUTCH GEAR)	4.351
GEAR, TRANSMISSION PLANETARY	4.175
GEAR, TRANSMISSION REAR INTERNAL	4.187
GEAR, TRANSMISSION REAR UNIT SUN	4.172
GEAR, TRANSMISSION REVERSE INTERNAL	4.193
GEAR, TRANSMISSION REVERSE SUN	4.190
GEAR, TRANSMISSION REVERSE RING	4.190
GEAR, TRANSMISSION REVERSE IDLER	4.430
GEAR, TRANSMISSION SECOND SPEED	4.395
GEAR, TRANSMISSION SPEEDOMETER DRIVE	4.343
GEAR, TRANSMISSION SUN	4.159
GEAR, TRANSMISSION 1ST & REVERSE SLIDING	4.417
GEAR, TRANSMISSION 3RD SPEED	4.415
GENERATOR ASSY., ELECTRICAL GENERATING (COMPLETE)	2.275
GLASS ASSY., REGRIGERANT FLOW SIGHT	9.202
GOVERNOR ASSY., TRANSMISSION	4.256
GOVERNOR, CRUISE CONTROL REGULATOR	3.885
GRILLE, AIR CONDITIONING CONTROL	9.275
GRILLE, HEADLAMP CONCEALING	2.770
GRILLE, HEATER	8.858
GRILLE, HOOD PANEL	8.055
GRILLE, OUTSIDE AIR	9.789
GRILLE, RADIATOR GRILLE	1.266
GRILLE, RADIO FRONT	9.650
GRILLE, RADIO REAR SEAT SPEAKER	9.665
GRILLE, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
GRILLE, STOP & TAIL LAMP	2.681
GRIP, CIGARETTE LIGHTER	9.709
GROMMET, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
GROMMET, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
GROMMET, BACK-UP LAMP	2.697
GROMMET, BATTERY	2.345
GROMMET, BATTERY CABLE OR STRAP	2.343
GROMMET, CHOKE AIR OR HEATER	3.603
GROMMET, CLIMATIC COMBUSTION CONTROL	3.417
GROMMET, CLOCK	9.772
GROMMET, COLD AIR	9.264
GROMMET, CORNERING LAMP	2.585
GROMMET, CRANKCASE VENTILATION	1.745
GROMMET, CRUISE CONTROL SELECTOR	3.883
GROMMET, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
GROMMET, ENGINE OIL COOLER	1.540
GROMMET, EVAPORATOR	9.211
GROMMET, FUEL INTAKE MANIFOLD	3.265
GROMMET, FUEL TANK	3.003
GROMMET, FUEL TANK FILLER PIPE	3.008
GROMMET, FUEL TANK GAUGE	3.115
GROMMET, HAND THROTTLE CONTROL	3.483
GROMMET, HEATER CORE	8.854
GROMMET, HEATER VACUUM	8.850
GROMMET, HOOD LOCK CONTROL	8.075
GROMMET, HORN BUTTON	2.859
GROMMET, IGNITION DISTRIBUTOR LEAD	2.401

GROMMET, IGNITION DISTRIBUTOR	2.372
GROMMET, INSTRUMENT CLUSTER	9.744
GROMMET, MANUAL ANTENNA	9.647
GROMMET, PARKING LAMP WIRING	2.596
GROMMET, POWER BRAKE CYLINDER	4.906
GROMMET, POWER BRAKE VACUUM CHECK	4.955
GROMMET, REFRIGERANT PIPE	9.242
GROMMET, RIDE STABILIZER LINK (RUBBER)	7.244
GROMMET, SHOCK ABSORBER	7.388
GROMMET, SHOCK ABSORBER	7.377
GROMMET, SPARK PLUG WIRE	2.251
GROMMET, SPEEDOMETER CABLE	4.342
GROMMET, STARTING MOTOR SWITCH	2.102
GROMMET, STEERING COLUMN ATTACHING	6.760
GROMMET, STEERING COLUMN FLOOR	6.758
GROMMET, STEERING OIL PUMP COOLER	6.602
GROMMET, STEERING OIL PUMP HOSE	6.672
GROMMET, STOP & TAIL LAMP	2.694
GROMMET, TRANSMISSION AUXILIARY COOLER	4.128
GROMMET, TRANSMISSION FLOOR SHIFT	4.D47
GROMMET, TRANSMISSION HAND SHIFT LEVER	4.008
GROMMET, TRANSMISSION OIL PAN	4.197
GROMMET, TRANSMISSION SHIFT LEVER	4.046
GROMMET, TRANSMISSION SHIFT TUBE LEVER	4.032
GROMMET, TRANSMISSION SHIFT CONTROL ROD	4.037
GROMMET, WINDSHIELD DEFROSTER	9.779
GROMMET, WIRING & PIPE	9.775
GROUND WIRE, AIR CONDITIONING	9.276
GUARD, CLUTCH RELEASE FORK	0.797
GUARD, FRONT BUMPER GUARD	7.828
GUARD, MASTER BRAKE CYL. PUSH ROD	4.659
GUARD PKG., FRONT BUMPER GUARD	7.828
GUARD PKG., REAR BUMPER GUARD	7.828
GUARD, RADIATOR FAN SHROUD	1.277
GUARD, REAR BUMPER GUARD	7.828
GUARD, WIRING HARNESS	2.559
GUIDE, CARBURETOR PUMP DISCHARGE CHECK	3.825
GUIDE, CRUISE CONTROL REGULATOR	3.885
GUIDE, CRUISE CONTROL SELECTOR	3.883
GUIDE, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511
GUIDE, ENGINE INTAKE & EXHAUST VALVE	0.283
GUIDE, ENGINE OIL LEVEL INDICATOR	1.516
GUIDE, PARKING BRAKE CABLE	4.785
GUIDE, POWER BRAKE POWER CYLINDER	4.922
GUIDE, SPEEDOMETER CABLE	4.342
GUIDE, STEERING GEAR WORM BALL RETURN	6.842
GUIDE, TILT WHEEL	6.514
GUIDE, TURBO EXHAUST BY-PASS	3.352
GUIDE, TURN SIGNAL SWITCH ACTUATOR	2.906

H

HANDLE, CAR BUMPER JACK	8.820
HANDLE, FUEL TANK FILLER DOOR	8.209
HANDLE, HOOD RELEASE	8.080
HANDLE, PARKING BRAKE LEVER	4.592
HANDLE, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179
HANDLE, TRANSMISSION HAND SHIFT LEVER	4.006
HANGER, EXHAUST MUFFLER	3.704
HANGER, EXHAUST PIPE TO MANIFOLD	3.610
HANGER, EXHAUST PIPE	3.616
HANGER, RADIO MOUNTING	9.655
HANGER, TAIL PIPE OR RESONATOR MOUNTING	3.706
HARDENER, BODY MAINTENANCE	8.800
HARDNER, PLASTIC HOOD OR VALANCE PANEL REPAIR	8.800

HARNESS, AIR CONDITIONING	9.276
HARNESS ASSY., INSTRUMENT PANEL	2.480
HARNESS ASSY., MAIN WIRING	2.480
HARNESS, CHASSIS TO CONSOLE	2.480
HARNESS, CLOCK	9.772
HARNESS, COMPRESSOR HEAT SWITCH	9.172
HARNESS, CONSOLE	2.480
HARNESS, CORNERING LAMP	2.480
HARNESS, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
HARNESS, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.75D
HARNESS, FRONT LAMP, HDRN & DELCOTRON	2.480
HARNESS, FUEL TANK (INST. PANEL UNIT)	3.108
HARNESS, HEADLAMP DIMMER	2.459
HARNESS, HEADLAMP OFF-DELAY CONTROL (NIGHT-WATCH)	2.485
HARNESS, HEADLAMP WIRING	2.750
HARNESS, HEATER CONTROL	8.852
HARNESS, NEUTRAL STARTING SWITCH	4.054
HARNESS, POWER ANTENNA	9.647
HARNESS, REAR SEAT SPEAKER	9.656
HARNESS, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
HARNESS, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
HARNESS, REFRIGERANT COMPRESSOR	9.170
HARNESS, STEREO TAPE PLAYER	9.670
HARNESS, STOP & TAIL LAMP	2.694
HARNESS, TRANSMISSION CONTROL	4.057
HARNESS, TURN SIGNAL	2.895
HARNESS, WHEEL LOCK CONTROL	4.720
HEAD ASSY., ENGINE CYLINDER HEAD (COMPLETE)	0.269
HEAD ASSY., ENGINE CYLINDER HEAD (LESS VALVES)	0.269
HEAD ASSY., SPEEDOMETER	9.761
HEAD, COMPRESSOR	9.174
HEAD, CRUISE CONTROL SELECTOR	3.883
HEAD PKG., ENGINE CYLINDER HEAD (LESS VALVES)	0.269
HEATER ASSY., CAR HEATER (EXC. C.A.C.)	8.854
HEATER ASSY., CAR HEATER (WITH C.A.C.)	8.854
HEATER ASSY., ENGINE CYLINDER BLOCK	0.034
HEAT SINK, DELCOTRON	2.319
HINGE ASSY., HOOD PANEL HINGE	8.015
HINGE, HEADLAMP HOUSING OR GRILLE	2.765
HOLDER KIT, CARBURETOR MAIN METERING	3.806
HOLDER, STARTING MOTOR BRUSH HOLDER	2.052
HOOD, INSTRUMENT CLUSTER	9.743
HOOK, CLUTCH PEDAL RETURN SPRING	0.846
HOOK, HOOD RELEASE	8.080
HOOK, PARKING BRAKE CABLE	4.785
HOOK, TRANSMISSION SHIFT INDICATOR	4.022
HORN ASSY., CARBURETOR AIR	3.730
HORN ASSY., WARNING	2.810
HOSE, AIR CONDITIONING CONTROL	9.275
HOSE, AIR CONDITIONING REFRIGERANT LINE	9.222
HOSE, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
HOSE, AIR INJECTION REACTOR	3.675
HOSE ASSY., COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
HOSE ASSY., HYDRAULIC BRAKE	4.680
HOSE, BATTERY	2.345
HOSE, BY-PASS VALVE TO CONNECTOR OR EVAPORATOR	9.229
HOSE, CARBURETOR DISTRIBUTOR VACUUM HOSE FITTING	3.764
HOSE, CARBURETOR OUTSIDE AIR INDUCTION	3.417
HOSE, CARBURETOR VACUUM BREAK CONTROL	3.765
HOSE, CHOKE AIR OR HEATER	3.603
HOSE, CLIMATIC COMBUSTION CONTROL	3.417
HOSE, COLD AIR DISTRIBUTION	9.257

HOSE, CONDENSER TO RECEIVER OR BY-PASS VALVE	9.227
HOSE, CRUISE CONTROL ACTUATING	3.885
HOSE, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
HOSE, DISTRIBUTOR VACUUM HOSE	3.445
HOSE, ENGINE COOLANT BY PASS HOSE	1.097
HOSE, ENGINE CRANKCASE VENTILATION	1.762
HOSE, ENGINE OIL COOLER	1.540
HOSE, ENGINE VACUUM	9.755
HOSE, EVAPORATIVE EMISSION SYSTEM	3.130
HOSE, EVAPORATIVE EMISSION SYSTEM	3.120
HOSE, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
HOSE, EVAPORATOR	9.211
HOSE, FUEL LINE	3.163
HOSE, FUEL STRAINER	3.890
HOSE, FUEL TANK	3.003
HOSE, HEADLAMP HOUSING OR GRILLE	2.765
HOSE, HEATER HOT WATER	8.846
HOSE, HEATER VACUUM	8.850
HOSE, IGNITION DISTRIBUTOR VACUUM	9.717
HOSE, IGNITION DISTRIBUTOR VACUUM	2.420
HOSE, OUTSIDE AIR	9.789
HOSE PKG., COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
HOSE PKG., WHEEL LOCK CONTROL	4.74D
HOSE, POWER BRAKE VACUUM LINE	4.931
HOSE, RADIATOR INLET (UPPER)	1.159
HOSE, RADIATOR OUTLET (LOWER)	1.173
HOSE, RADIATOR OVERFLOW	1.240
HOSE, RECEIVER TO EVAPORATOR (LIQUID LINE)	9.231
HOSE, RUBBER	8.962
HOSE, STEERING OIL PUMP COOLER	6.602
HOSE, STEERING OIL PUMP PRESSURE (PUMP TO GEAR)	6.670
HOSE, STEERING OIL PUMP RETURN (GEAR TO PUMP OR COOLER)	6.671
HOSE, SUPERLIFT SHOCK ABSORBER (AUTOMATIC FILL)	7.346
HOSE, THROTTLE RETURN CHECK OR DASHPOT	3.440
HOSE, TRANSMISSION AUXILIARY COOLER	4.128
HOSE, TRANSMISSION VACUUM MODULATOR	4.205
HOSE, TURBO CARBURETOR BOOST PRESSURE OR LIMIT	3.374
HOSE, TURBO COMPRESSOR	3.344
HOSE, TURBO VACUUM CHECK	3.374
HOSE, WINDSHIELD DEFROSTER	9.779
HOUSING ASSY., DIFFERENTIAL OR FINAL DRIVE ASSY.	5.505
HOUSING ASSY., REAR AXLE	5.387
HOUSING ASSY., STEERING GEAR LOWER	6.803
HOUSING, BACK-UP LAMP	2.697
HOUSING, CARBURETOR CHOKE	3.750
HOUSING, CARBURETOR FUEL	3.838
HOUSING, COLD AIR DISTRIBUTION	9.257
HOUSING, COLD AIR	9.264
HOUSING, COLD AIR	9.262
HOUSING, CONVERTER OR FLYWHEEL HOUSING (LOWER)	0.679
HOUSING, CORNERING LAMP	2.585
HOUSING, CRUISE CONTROL SELECTOR	3.883
HOUSING, CRUISE CONTROL REGULATOR	3.885
HOUSING, ENGINE OIL PUMP SCREEN	1.657
HOUSING, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
HOUSING, ENGINE VACUUM	9.755
HOUSING, ENGINE WATER TEMPERATURE THERMOSTAT	1.251
HOUSING, FLYWHEEL HOUSING	0.683
HOUSING, FRONT DRIVE AXLE	6.060
HOUSING, FRONT WHEEL DISC BRAKE CALIPER	4.665
HOUSING, HAZARD WARNING OR MARKER LAMP	2.575

HOUSING, HEADLAMP	2.726
HOUSING, HEADLAMP CONCEALING	2.770
HOUSING, HEATER	9.786
HOUSING, HEATER	8.858
HOUSING, IGNITION DISTRIBUTOR	2.362
HOUSING, IGNITION SWITCH	2.198
HOUSING, INSTRUMENT CLUSTER SPEED WARNING	9.762
HOUSING, INSTRUMENT CLUSTER	9.744
HOUSING, INSTRUMENT CLUSTER	9.743
HOUSING, LICENSE LAMP	2.705
HOUSING, LIGHT SWITCH CONTROL	2.487
HOUSING, LIGHT SWITCH CONTROL	2.486
HOUSING, OUTSIDE AIR	9.789
HOUSING, OUTSIDE AIR VENTILATING	9.787
HOUSING, PARKING LAMP	2.586
HOUSING, POWER BRAKE AIR CLEANER	4.913
HOUSING, POWER BRAKE CYLINDER	4.906
HOUSING, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
HOUSING, REFRIGERANT COMPRESSOR	9.17D
HOUSING, STARTING MOTOR DRIVE HOUSING (WITH BUSHING)	2.085
HOUSING, STEERING COLUMN	6.518
HOUSING, STOP & TAIL LAMP	2.680
HOUSING, SUPERLIFT SHOCK ABSORBER	7.455
HOUSING, TILT WHEEL	6.514
HOUSING, TRANSMISSION CLUTCH	4.169
HOUSING, TRANSMISSION HAND SHIFT LEVER	4.010
HOUSING, TRANSMISSION	4.020
HOUSING, TRANSMISSION REAR	4.317
HOUSING, TURBO COMPRESSOR	3.344
HOUSING, TURN SIGNAL SWITCH ACTUATOR	2.906
HUB ASSY., FRONT WHEEL HUB	6.307
HUB ASSY., REAR AXLE	5.806
HUB & DISC, FRONT WHEEL DISC BRAKE	5.809
HUB & DRUM ASSY., FRONT WHEEL	6.306
HUB, ENGINE CRANKSHAFT	0.659
HUB, ENGINE FAN & WATER PUMP	1.062
HUB, FRONT WHEEL DRUM BRAKE	5.809
HUB, POWER BRAKE VACUUM CYLINDER END	4.904
HUB, STEERING WHEEL (LESS EMBLEM, SHROUD OR SWITCH)	6.513
HUB, TRANSMISSION CLUTCH	4.164
HUB, TRANSMISSION REAR UNIT CLUTCH	4.186
HUB, WHEEL DISC (COMPONENT PARTS)	5.871

I

IMPELLER, WATER PUMP	1.109
INDICATOR & CAP, MASTER BRAKE CYL. FILLER	4.651
INDICATOR, ENGINE OIL LEVEL INDICATOR	1.516
INDICATOR, ENGINE TIMING INDICATOR	0.219
INDICATOR, FUEL TANK FILLER PIPE	3.008
INDICATOR, TRANSMISSION	4.020
INDICATOR, TRANSMISSION OIL LEVEL & FILLER	4.133
INFLATOR ASSY., TIRE	5.880
INFLATOR, HIGHWAY EMERGENCY	8.821
INFLATOR, TIRE VALVE	5.875
INLET KIT, CARBURETOR FUEL INLET	3.740
INLET, POWER BRAKE AIR CLEANER	4.913
INSERT, BATTERY	2.333
INSERT, BRAKE HOSE TO WHEEL CYLINDER	4.671
INSERT, CARBURETOR FLOAT BOWL	3.734
INSERT, CRUISE CONTROL REGULATOR	3.885
INSERT, EXHAUST VALVE (IN CYLINDER HEAD)	D.253
INSERT, FRONT BUMPER GUARD	7.828
INSERT, FRONT FENDER FINISH TRIM	8.147

INSERT, FRONT PRIMARY BUMPER BAR	7.831
INSERT, HELICAL THREAD	8.914
INSERT KITS	8.914
INSERT, LIGHT SWITCH CONTROL	2.487
INSERT, MASTER BRAKE CYLINDER	4.661
INSERT, REAR BUMPER BAR	7.832
INSERT, REAR BUMPER GUARD	7.828
INSERT, SPARK PLUG HOLE HELICAL THREAD	2.270
INSTALLATION PKG., CRANKCASE VENTILATION	1.745
INSULATION, EVAPORATOR	9.211
INSULATION, REFRIGERANT EXPANSION	9.213
INSULATOR, ACCELERATOR PEDAL	3.454
INSULATOR, AIR CONDITIONING CONTROL	9.275
INSULATOR, BODY TO FRAME	9.023
INSULATOR, CAR BUMPER JACK	8.820
INSULATOR, CARBURETOR TO MANIFOLD	3.726
INSULATOR, CHOKE AIR OR HEATER	3.603
INSULATOR, CHOKE HEATER	3.545
INSULATOR, COMPRESSOR DISCHARGE HOSE	9.226
INSULATOR, COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
INSULATOR, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
INSULATOR, DELCOTRON BRUSH HOLDER	2.291
INSULATOR, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
INSULATOR, EXHAUST MUFFLER	3.704
INSULATOR, FRONT COIL SPRING	7.420
INSULATOR, FRONT FENDER FILLER	8.160
INSULATOR, FRONT FENDER	8.141
INSULATOR, FUEL LINE	3.162
INSULATOR, FUEL TANK MOUNTING	3.022
INSULATOR, HEADLAMP OR GRILLE	2.760
INSULATOR, HOOD PANEL	8.021
INSULATOR, HORN	2.819
INSULATOR, INSTRUMENT CLUSTER	9.744
INSULATOR, INSTRUMENT CLUSTER	9.745
INSULATOR, PROPELLER SHAFT CENTER BEARING	5.598
INSULATOR, RADIATOR BAFFLE AND DEFLECTOR	1.274
INSULATOR, RADIATOR CORE SUPPORT	1.270
INSULATOR, RADIATOR FAN SHROUD	1.277
INSULATOR, RADIATOR GRILLE	1.266
INSULATOR, REAR SPRING	7.545
INSULATOR, REFRIGERANT COMPRESSOR MOUNTING BRACKET	9.173
INSULATOR, REFRIGERANT CONDENSER	9.190
INSULATOR, REFRIGERANT RECEIVER	9.195
INSULATOR, REFRIGERANT BY-PASS	9.198
INSULATOR, SPARK PLUG & DISTRIBUTOR WIRE	2.258
INSULATOR, STARTING MOTOR FIELD	2.049
INSULATOR, STEERING OIL PUMP COOLER	6.602
INSULATOR, SUPERLIFT SHOCK ABSORBER COMPRESSOR MOUNTING (AUTOMATIC FILL)	7.452
INSULATOR, TAIL PIPE OR RESONATOR MOUNTING	3.706
INSULATOR, TORSION BAR	7.105
INSULATOR, TRANSMISSION HAND SHIFT LEVER	4.006
INSULATOR, TRANSMISSION AUXILIARY COOLER	4.128
INSULATOR, TRANSMISSION CASE AND OR SPROCKET COVER	4.109
INSULATOR, TRANSMISSION HAND SHIFT LEVER	4.010
INSULATOR, TRANSMISSION SHIFT CONTROL RELAY	4.042
INSULATOR, TRANSMISSION MOUNTING	4.085
INSULATOR, WHEEL DISC (COMPONENT PARTS)	5.871
INSULATOR, WHEEL LOCK CONTROL SENSOR	4.710

INSULATOR, WHEEL LOCK CONTROL MODULATOR	4.730
INTAKE, CARBURETOR OUTSIDE AIR INDUCTION	3.417
INTERLOCK, TRANSMISSION	4.307
INTERLOCK, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
J	
JACKET ASSY., STEERING COLUMN	6.518
JACK PKG., CAR BUMPER JACK	8.820
JET ASSY., CARBURETOR LOW SPEED	3.798
JET, CARBURETOR MAIN METERING (REGULAR)	3.792
JET PKG., CARBURETOR MAIN METERING (HI-ALTITUDE)	3.792
J NUT, FRONT FENDER	8.143
J NUT, RADIATOR CORE SUPPORT	1.272
J NUT, REAR PRIMARY BUMPER BAR	7.831
JOINT ASSY., FRONT DRIVE AXLE	6.060
JOINT, STEERING SHAFT CONNECTING	6.525
JUMPER WIRE, BACK-UP LAMP	2.697
JUNCTION, HYDRAULIC BRAKE LINE	4.686
K	
KEY, CAMSHAFT GEAR ATTACHING	0.738
KEY, CAR LOCK (UNCODED)	2.187
KEY, COMPRESSOR CLUTCH	9.188
KEY, CRANKSHAFT SPROCKET GEAR	0.729
KEY, ENGINE CAMSHAFT SPROCKET GEAR	0.736
KEY, ENGINE CRANKSHAFT BALANCER OR PULLEY	0.662
KEY, ENGINE INTAKE & EXHAUST VALVE STEM	0.310
KEY, ENGINE DIL PUMP	1.639
KEY, FUEL PUMP ACTUATING (ON CAMSHAFT)	3.935
KEY, IGNITION DISTRIBUTOR DRIVE	2.374
KEY, POWER BRAKE AIR VALVE	4.918
KEY, STEERING OIL PUMP	6.655
KEY, TRANSMISSION CASE	4.162
KEY, TRANSMISSION CLUTCH	4.169
KEY, TRANSMISSION GOVERNOR	4.256
KEY, TRANSMISSION HAND SHIFT LEVER	4.008
KEY, TRANSMISSION	4.428
KEY, TRANSMISSION REVERSE IDLER GEAR RETAINING	4.435
KEY, TRANSMISSION REVERSE CLUTCH	4.189
KEY, TRANSMISSION SYNCHRONIZING CLUTCH	4.384
KEY, WOODRUFF	8.960
KING PIN PKG., STEERING KNUCKLE	6.203
KIT, CARBURETOR AIR VALVE	3.757
KIT, CARBURETOR DEPRESSURE	3.372
KIT, CARBURETOR IDLE VENT	3.852
KIT, CARBURETOR PUMP	3.842
KIT, ENGINE CARBURETOR (MAJOR REPAIR)	3.725
KIT, ENGINE CARBURETOR (OFF-KAR REPAIR)	3.725
KIT, EVAPORATIVE EMISSION SYSTEM	3.130
KIT, PLASTIC HOOD OR VALANCE PANEL REPAIR	8.800
KIT, POWER BRAKE POWER CYLINDER	4.922
KIT, PROPELLER SHAFT CENTER BALL STUD	5.590
KIT, REFRIGERANT BY-PASS	9.198
KITS, KLEANOUT (ON CAR-R.P. CARBURETOR)	3.725
KIT, STEERING OIL HOSE COUPLING	6.673
KIT, STEERING SHAFT	6.524
KIT, STOP & TAIL LAMP	2.694

KNOB, AIR CONDITIONING CONTROL	9.275
KNOB, AIR CONDITIONING CONTROL SWITCH (FAN SPEED)	9.278
KNOB, CAR BUMPER JACK	8.820
KNOB, CIGARETTE LIGHTER	9.709
KNDB, CLDCK	9.772
KNOB, COLD AIR	9.264
KNOB, CRUISE CONTROL SELECTOR	3.883
KNOB, HAZARD WARNING OR MARKER LAMP	2.575
KNOB, HEADLAMP DIMMER	2.459
KNOB, HEATER (AT DASH)	8.849
KNOB, HEATER CONTROL	8.852
KNOB, INSTRUMENT CLUSTER SPEED WARNING	9.762
KNOB, LIGHT SWITCH CONTROL	2.486
KNOB, OUTSIDE AIR VENTILATING	9.787
KNOB, POWER ANTENNA	9.647
KNOB, RADIO	9.649
KNOB, RADIO REAR SEAT SPEAKER	9.665
KNOB, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
KNOB, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
KNOB, STEREO TAPE PLAYER	9.670
KNOB, TRANSMISSION HAND SHIFT LEVER	4.006
KNUCKLE ASSY., STEERING	6.020

L

LABEL, CARBURETOR AIR CLEANER	3.403
LABEL, ENGINE	8.800
LABEL, ENGINE EXHAUST EMISSION CONTROL	2.408
LABEL, ENGINE VALVE ROCKER COVER	0.386
LABEL, RADIATOR FILLER CAP (PRESSURE TYPE)	1.203
LAMP ASSY., BACK-UP LAMP	2.697
LAMP ASSY., INSTRUMENT PANEL COURTESY	2.776
LAMP ASSY., PARKING LAMP	2.585
LAMP ASSY., REAR LICENSE LAMP	2.700
LAMP ASSY., STOP & TAIL LAMP (COMPLETE)	2.679
LAMP, CORNERING LAMP	2.585
LAMP, FUEL TANK (INST. PANEL UNIT)	3.108
LAMP, HAZARD WARNING OR MARKER LAMP	2.575
LAMP, HEADLAMP ASSEMBLY	2.725
LAMP PKG., PARKING BRAKE SIGNAL	4.589
LAMP PKG., PORTABLE SPOT	9.773
LAMP PKG., TRUNK COMPARTMENT	9.988
LAMP, TRUNK COMPARTMENT	9.988
LAMP, UNDER HOOD LAMP	8.890
LATCH, HOOD RELEASE	8.080
LEAD, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
LEAD, IGNITION DISTRIBUTOR	2.400
LEAD IN, MANUAL ANTENNA	9.647
LEAD IN, POWER ANTENNA	9.647
LEAD IN, WINDSHIELD ANTENNA	9.647
LEAD, STARTING MOTOR BRUSH GROUND	2.055
LEAD WIRE, ENGINE EXHAUST EMISSION CONTROL	2.408
LENS, AIR CONDITIONING CONTROL	9.275
LENS, BACK-UP LAMP	2.697
LENS, CLOCK	9.772
LENS, CORNERING LAMP	2.585
LENS, CRUISE CONTROL SELECTOR	3.883
LENS, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
LENS, ENGINE VACUUM	9.755
LENS, FRONT PARKING & SIGNAL LAMP	2.589
LENS, INSTRUMENT CLUSTER	9.748
LENS, INSTRUMENT CLUSTER	9.744
LENS, LICENSE LAMP	2.709

LENS, LIGHT SWITCH CONTROL	2.487
LENS, PARKING BRAKE SIGNAL	4.589
LENS, PARKING LAMP	2.585
LENS, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
LENS, STEREO TAPE PLAYER	9.670
LENS, STOP & TAIL LAMP	2.689
LENS, STOP & TAIL LAMP	2.682
LENS, TRANSMISSION	4.020
LENS, TRUNK COMPARTMENT	9.988
LENS, TURN SIGNAL FLASHER (IN INSTRUMENT PANEL)	2.893
LETTER, HOOD OR FRONT END PANEL	8.039
LETTERS, RADIATOR GRILLE OR FRONT END PANEL	1.303
LEVER, ACCELERATOR PEDAL	3.454
LEVER, AIR CONDITIONING CONTROL	9.275
LEVER, AIR CONDITIONING TEMPERATURE & FAN (AT DASH)	9.273
LEVER ASSY., BACK-UP LAMP ACTUATING	2.698
LEVER ASSY., CARBURETOR THROTTLE WITH SHAFT	3.759
LEVER ASSY., PARKING BRAKE (COMPLETE)	4.591
LEVER ASSY., TRANSMISSION SHIFT SELECTOR (INNER)	4.302
LEVER ASSY., TRANSMISSION SHIFTING	4.309
LEVER ASSY., TRANSMISSION HAND SHIFT LOWER (FLOOR SHIFT TYPE TRANS.)	4.004
LEVER ASSY., TURN SIGNAL SWITCH HAND (WITH KNOB)	2.897
LEVER & BUSHING, CLUTCH RELEASE	0.852
LEVER, CARBURETOR ACTUATING	3.762
LEVER, CARBURETOR AIR VALVE	3.757
LEVER, CARBURETOR CHOKE	3.752
LEVER, CARBURETOR FAST IDLE	3.766
LEVER, CARBURETOR POWER	3.858
LEVER, CARBURETOR PUMP	3.842
LEVER, CARBURETOR VACUUM BREAK CONTROL	3.765
LEVER, CLUTCH PEDAL RETURN SPRING	0.846
LEVER, CLUTCH RELEASE	0.852
LEVER, COLD AIR	9.264
LEVER, CRUISE CONTROL SELECTOR	3.883
LEVER, HAND THROTTLE CONTROL	3.483
LEVER, HAZARD WARNING OR MARKER LAMP	2.575
LEVER, HEADLAMP HOUSING OR GRILLE	2.765
LEVER, HEATER (AT DASH)	8.849
LEVER, HEATER CONTROL	8.852
LEVER, HEATER	8.858
LEVER, HOOD RELEASE	8.080
LEVER & HUB, CLUTCH RELEASE	0.852
LEVER, MASTER BRAKE PEDAL	4.625
LEVER, NEUTRAL STARTING SWITCH	4.054
LEVER, PARKING BRAKE OPERATING	5.149
LEVER, PDWER BRAKE REACTION	4.934
LEVER, RANGE SELECTOR	4.045
LEVER, STARTING MOTOR DRIVE SHIFT LEVER	2.108
LEVER & STRUT PKG., PARKING BRAKE OPERATING	5.149
LEVER, THROTTLE CONTROL	3.463
LEVER, TILT WHEEL	6.514
LEVER, TRANSMISSION HAND SHIFT	4.006
LEVER, TRANSMISSION PARKING BRAKE INSIDE DETENT	4.279
LEVER, TRANSMISSION PARKING BRAKE	4.290
LEVER, TRANSMISSION RANGE SELECTOR & PARKING LOCK	4.278
LEVER, TRANSMISSION SHIFT CONTROL RELAY	4.040
LEVER, TRANSMISSION SHIFTER (ON TRANS.)	4.045
LEVER, TRANSMISSION SHIFT CONTROL TUBE OR SHAFT	4.030
LEVER, TRANSMISSION	4.020
LEVER, TRANSMISSION THROTTLE VALVE CONTROL (OUTER)	4.050

OPENING PANEL	8.176
MOLDING, ROCKER PANEL	8.231
MOLDING, STDP & TAIL LAMP	2.681
MOTOR, AIR CONDITIONING CONTROL	9.275
MOTOR ASSY., ENGINE STARTING MOTOR (INC. SOLENOID SWITCH)	2.041
MOTOR, CARBURETOR AIR CLEANER	3.415
MOTOR, CRUISE CONTROL REGULATOR	3.887
MOTOR, EVAPORATOR BLOWER	9.215
MOTOR & FAN ASSY., HEATER & DEFROSTER	8.855
MOTOR, FORCED AIR VENTILATION	9.790
MOTOR, HEATER & DEFROSTER	8.855
MOTOR, POWER ANTENNA	9.647
MOTOR, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
MOTOR, WINDSHIELD DEFROSTER	9.779
MOUNT ASSY., FRONT ENGINE MOUNT	0.027
MOUNT ASSY., REAR ENGINE MOUNT	0.027
MOUNT, FRONT SUSPENSION MOUNTING CROSS	7.010
MOUNTING PKG., COMPRESSOR MOUNTING MOUNTING PKG., REFRIGERANT COMPRESSOR	9.171
MOUNT PKG., FRONT ENGINE MOUNT	9.170
MOUNT, TRANSMISSION	0.027
MOUNT, TRANSMISSION	4.081
MUFFLER, AIR INJECTION REACTOR PUMP	3.672
MUFFLER ASSY., EXHAUST	3.701
MUFFLER, COMPRESSOR DISCHARGE HOSE	9.226
MUFFLER, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238
MUFFLER PKG., AIR CONDITIONING REFRIGERANT LINE	9.222
MUFFLER PKG., COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
MULTIPLIER ASSY., TRANSMISSION TORUS TORQUE MULTIPLIER	4.157

N

NAME PLATE, RADIATOR GRILLE OR FRONT END PANEL	1.303
NAMEPLATE, REAR BUMPER BAR	7.832
NEEDLE, CARBURETOR IDLE ADJUSTING	3.822
NEEDLE & LIMITER KIT, CARBURETOR IDLE ADJUSTING	3.822
NEEDLE & SEAT, CARBURETOR	3.814
NEEDLE, TRANSMISSION	4.020
NEEDLE VALVE, CARBURETOR PUMP DISCHARGE CHECK	3.825
NIPPLE, CRANKCASE VENTILATION	1.745
NIPPLE, ENGINE WATER (ON ENGINE)	1.153
NIPPLE, HEATER HOSE TO ENGINE	8.866
NIPPLE, HEATER WATER TEMP. CONTROL	8.848
NIPPLE, IGNITION DISTRIBUTOR VACUUM	2.420
NIPPLE, INTAKE MANIFOLD VACUUM	3.278
NIPPLE, SPARK PLUG & DISTRIBUTOR WIRE	2.258
NIPPLE, TURBO FLUID & WATER	3.372
NOZZLE, ENGINE TIMING GEAR	0.748
NOZZLE, WINDSHIELD DEFROSTER	9.779
NUMERAL PKG., FRONT FENDER FINISH TRIM	8.147
NUMERAL PKG., HOOD OR FRONT END PANEL	8.039
NUMERAL PKG., RADIATOR GRILLE OR FRONT END PANEL	1.303
NUT, ACCELERATOR PEDAL	3.454
NUT ASSY., TRANSMISSION SHIFT CONTROL ROD	4.037
NUT, BACK-UP LAMP	2.697
NUT, BATTERY HOLD-DOWN	2.334
NUT, BODY TO FRAME BOLT	9.011
NUT, BRAKE ANCHOR PIN	5.056
NUT, BRAKE SHOE ADJUSTING SCREW	5.111

NUT, CAR BUMPER JACK	8.820
NUT, CARBURETOR AIR CLEANER	3.403
NUT, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
NUT, CARBURETOR FUEL INLET	3.740
NUT, CARBURETOR IDLE VENT	3.852
NUT, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
NUT, CARBURETOR TO MANIFOLD	3.726
NUT, CHECK	8.916
NUT, CLUTCH PEDAL ATTACHING	0.837
NUT, CLUTCH RELEASE EQUALIZER	0.851
NUT, CLUTCH RELEASE ROD	0.787
NUT, COMPRESSOR MOUNTING	9.171
NUT, COMPRESSOR	3.342
NUT, CORNERING LAMP	2.585
NUT, CRUISE CONTROL ACTUATING	3.885
NUT, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
NUT, CRUISE CONTROL REGULATOR	3.885
NUT, CRUISE CONTROL REGULATOR MOUNTING	3.880
NUT, CRUISE CONTROL SELECTOR	3.883
NUT, DELCOTRON ADJUSTING	2.317
NUT, DELCOTRON ROTOR SHAFT	2.280
NUT, DIFFERENTIAL OR FINAL DRIVE ASSY.	5.506
NUT, DIFFERENTIAL OR FINAL DRIVE SIDE BEARING ADJUSTING	5.537
NUT, ENGINE CONNECTING ROD BEARING CAP BOLT	0.626
NUT, ENGINE CRANKCASE OIL	1.430
NUT, ENGINE MOUNT ATTACHING	0.002
NUT, EVAPORATIVE EMISSION SYSTEM	3.120
NUT, EVAPORATOR BLOWER	9.215
NUT, EXHAUST MANIFOLD HEAT CONTROL	3.640
NUT, EXHAUST PIPE	3.609
NUT, EXHAUST PIPE TO MANIFOLD	3.611
NUT, EXHAUST PIPE TO MANIFOLD	3.613
NUT, FINAL DRIVE MOUNTING	5.500
NUT, FRONT AXLE SHAFT HUB	6.063
NUT, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	5.002
NUT, FRONT BUMPER BAR ATTACHING	7.836
NUT, FRONT BUMPER GRAVEL	7.833
NUT, FRONT BUMPER GUARD	7.828
NUT, FRONT BUMPER	7.832
NUT, FRONT END PANEL	1.263
NUT, FRONT FENDER	8.131
NUT, FRONT FENDER	8.141
NUT, FRONT FENDER FILLER	8.160
NUT, FRONT FENDER FINISH TRIM	8.147
NUT, FRONT FENDER	8.143
NUT, FRONT FENDER TRIM	8.147
NUT, FRONT PARKING & SIGNAL LAMP	2.587
NUT, FRONT PRIMARY BUMPER BAR	7.831
NUT, FRONT SUSPENSION MOUNTING CROSS	7.010
NUT, FRONT TORSION BAR ADJUSTER	7.428
NUT, FRONT WHEEL LOWER CONTROL ARM & SHAFT	6.169
NUT, FRONT WHEEL LOWER CONTROL ARM	6.174
NUT, FRONT WHEEL LOWER CONTROL ARM SHAFT TO FRAME	6.172
NUT, FRONT WHEEL UPPER CONTROL ARM	6.178
NUT, FUEL LINE BALL SLEEVE	8.963
NUT, FUEL LINE INVERTED FLARED	8.963
NUT, FUEL PUMP MOUNTING	3.901
NUT, FUEL TANK FILLER DOOR	8.209
NUT, FUEL TANK (INST. PANEL UNIT)	3.108
NUT, FUEL TANK MOUNTING	3.023
NUT, HAZARD WARNING OR MARKER LAMP	2.575
NUT, HEADLAMP DOOR RETAINING	2.729
NUT, HEADLAMP HOUSING OR GRILLE	2.765
NUT, HEADLAMP MOUNTING	2.726
NUT, HEADLAMP MOUNTING	2.720
NUT, HEADLAMP RING RETAINING	2.736
NUT, HEADLAMP SEALED BEAM UNIT ADJUSTING	2.737

NUT, HEATER (AT DASH)	8.849	NUT, STABILIZER LINK BOLT	7.238
NUT, HEATER BLOWER MOTOR	8.857	NUT, STAMPED	8.921
NUT, HEATER CDNTROL	8.852	NUT, STARTING MOTOR ATTACHING	2.077
NUT, HEATER MDTOR MOUNTING	8.856	NUT, STEERING ARM & BACKING PLATE TO	
NUT, HEATER	8.858	KNUCKLE.	6.104
NUT, HEXAGDN REGULAR	8.915	NUT, STEERING COLUMN ATTACHING.	6.760
NUT, HOOD EMBLEM & ORNAMENT &		NUT, STEERING GEAR PITMAN SHAFT LASH	6.822
SCRIPT ATTACHING	8.040	NUT, STEERING GEAR THRUST BEARING	
NUT, HOOD PANEL	8.024	ADJUSTER LOCK	6.832
NUT, HOOD PANEL FRONT.	8.005	NUT, STEERING GEAR WORM BALL.	6.841
NUT, HOOD PANEL	8.054	NUT, STEERING IDLER ARM	6.896
NUT, HOOD RELEASE	8.080	NUT, STEERING KNUCKLE	6.022
NUT, HORN RELAY & BATTERY CABLE		NUT, STEERING LINKAGE SHOCK ABSORBER	6.865
JUNCTION.	2.815	NUT, STEERING OIL PUMP.	6.655
NUT, HYDRAULIC BRAKE.	4.685	NUT, STEERING PITMAN ARM TO GEAR.	6.861
NUT, IGNITIDN SWITCH	2.192	NUT, STEERING SHAFT CONNECTING	6.525
NUT, INSTRUMENT CLUSTER	9.744	NUT, STEERING SHAFT	6.521
NUT, INTAKE & EXHAUST MANIFOLD	3.275	NUT, STEERING TIE ROD END ADJUSTER.	6.234
NUT, LICENSE PLATE MOUNTING	7.800	NUT, STEERING WHEEL.	6.515
NUT, LIGHT SWITCH CONTROL	2.487	NUT, STEERING WHEEL SPOKE	6.512
NUT, LDCKING.	8.917	NUT, STEREO PLAYER ATTACHING	9.672
NUT, MANUAL ANTENNA	9.647	NUT, STERED TAPE PLAYER.	9.670
NUT, MASTER BRAKE CYLINDER.	4.648	NUT, STOP & TAIL LAMP ASSY.	2.660
NUT, MASTER BRAKE CYL.	4.658	NUT, STOP & TAIL LAMP.	2.680
NUT, MASTER BRAKE PEDAL MOUNTING.	4.634	NUT, STOP & TAIL LAMP MOUNTING	2.664
NUT, NEUTRAL STARTING SWITCH.	4.054	NUT, SUCTION THROTTLING (P.O.A.)	9.198
NUT, OUTSIDE AIR	9.789	NUT, SUPERLIFT SHOCK ABSORBER	
NUT, OUTSIDE AIR VENTILATING	9.787	(MANUAL FILL)	7.346
NUT, PARKING BRAKE CABLE	4.785	NUT, THROTTLE RETURN CHECK OR	
NUT PKG., COMPRESSOR PULLEY	9.181	DASHPOT	3.440
NUT PKG., REFRIGERANT COMPRESSOR	9.170	NUT, TORSION BAR	7.105
NUT, POWER ANTENNA	9.647	NUT, TRANSMISSION HAND SHIFT LEVER	4.008
NUT, PROPELLER SHAFT CENTER BEARING	5.601	NUT, TRANSMISSION	4.081
NUT, PROPELLER SHAFT REAR FLANGE.	5.545	NUT, TRANSMISSION	4.020
NUT, RADIATOR BAFFLE AND DEFLECTOR	1.274	NUT, TRANSMISSION MAIN DRIVE GEAR.	4.356
NUT, RADIATOR BAFFLE OR FAN SHROUD		NUT, TRANSMISSION MAIN SHAFT.	4.173
ATTACHING.	1.276	NUT, TRANSMISSION	4.103
NUT, RADIATOR CORE SUPPORT TIE BAR	1.271	NUT, TRANSMISSION SHIFTER (ON TRANS.)	4.045
NUT, RADIATOR CORE SUPPORT	1.270	NUT, TRANSMISSION SHIFT LEVER.	4.046
NUT, RADIATOR GRILLE	1.266	NUT, TRANSMISSION SHIFT INDICATOR	4.022
NUT, RADIATOR GRILLE OR FRONT END		NUT, TRANSMISSION VACUUM MODULATOR	4.205
PANEL.	1.303	NUT, TURBO ROCKET	3.370
NUT, RADIO MOUNTING	9.655	NUT, VALVE PUSH ROD ADJUSTING (ON	
NUT, RADIO REAR SEAT SPEAKER	9.665	ROCKER ARM)	0.429
NUT, RADIO RECEIVER	9.667	NUT, WHEEL DISC (COMPONENT PARTS)	5.871
NUT, REAR BRAKE BACKING PLATE TO AXLE	5.002	NUT, WHEEL LOCK CONTROL MODULATOR	4.730
NUT, REAR BUMPER ATTACHING	7.836	NUT, WHEEL TO BRAKE DRUM BOLT.	5.813
NUT, REAR BUMPER BAR	7.832	NUT, WINDSHIELD DEFROSTER	9.779
NUT, REAR COIL SPRING CLAMP	7.529	NUT, WING	8.920
NUT, REAR LEAF SPRING.	7.504	NUT, WIRING HARNESS	2.559
NUT, REAR PRIMARY BUMPER BAR.	7.831		
NUT, REAR QUARTER PANEL WHEEL			
OPENING PANEL.	8.179		
NUT, REAR QUARTER PANEL WHEEL			
OPENING PANEL.	8.176		
NUT, REAR SPRING.	7.545		
NUT, REAR SUSPENSION ARM	5.383		
NUT, REAR SUSPENSION LEAF SPRING	7.518		
NUT, REAR UNIVERSAL JOINT FLANGE	5.595		
NUT, REAR WHEEL & BRAKE DRUM TO AXLE			
SHAFT FLANGE	5.812		
NUT, REAR WHEEL HUB & BRG. RETAINER			
TO SPINDLE.	5.829		
NUT, REAR WINDOW DEFOGGER (BLOWER			
TYPE)	9.778		
NUT, REFRIGERANT COMPRESSOR			
MOUNTING BRACKET	9.173		
NUT, REFRIGERANT CONDENSER	9.190		
NUT, REFRIGERANT RECEIVER	9.195		
NUT, RIDE STABILIZER LINK (RUBBER)	7.244		
NUT, RIDE STABILIZER SHAFT	7.242		
NUT, ROCKER PANEL MOLDING ATTACHING	8.309		
NUT, SHOCK ABSORBER ATTACHING	7.347		
NUT, SLOTTED LOCK	8.917		
NUT, SPARE WHEEL CLAMP BOLT	7.633		
NUT, SPECIAL STAMPED	8.921		
NUT, SPEEDOMETER.	9.761		
NUT, SPRING.	8.921		

O

OCTANE ADJUSTMENT PKG., ENGINE	
EXHAUST EMISSION CONTROL	2.408
OIL, AIR CONDITIONING	9.282
OIL CUP, DELCOTRON DRIVE END.	2.305
OIL RING, TRANSMISSION DRIVE & DRIVEN	4.131
OIL SEAL KIT, TRANSMISSION OVERHAUL	4.005
OIL, SERVICE MAINTENANCE	8.800
OIL, SPECIAL ENGINE OIL ADDITIVE	1.850
O RING, AIR CONDITIONING REFRIGERANT	
LINE	9.222
O RING, BY-PASS VALVE TO CONNECTOR OR	
EVAPORATOR.	9.229
O RING, COMPRESSOR DISCHARGE &	
INTAKE VALVE MOUNTING.	9.240
O RING, COMPRESSOR PRESSURE RELIEF	9.178
O RING, COMPRESSOR TO CONDENSER OR	
MUFFLER (HIGH PRESSURE)	9.225
O RING, CONDENSER TO RECEIVER OR	
BY-PASS VALVE	9.227
O RING, DIFFERENTIAL OR FINAL DRIVE	
PINION GEAR	5.469

O RING, ENGINE INTAKE & EXHAUST VALVE OIL	0.308
O RING, EVAPORATOR EXPANSION VALVE.	9.214
O RING, EVAPORATOR	9.211
O RING, FRONT BRAKE GREASE	6.038
O RING, FRONT DRIVE OUTER AXLE SHAFT	6.061
O RING, IGNITION DISTRIBUTOR MOUNTING	2.363
O RING KIT, STEERING GEAR	6.507
O RING, MASTER BRAKE CYL. PISTON (RUBBER).	4.654
O RING, MASTER BRAKE CYL. PISTON	4.656
O RING, POWER BRAKE VACUUM CHECK.	4.955
O RING, REAR AXLE DRIVE PINION	5.445
O RING, REAR AXLE SHAFT INNER OIL.	5.822
O RING, RECEIVER	9.196
O RING, STEERING GEAR HOUSING SIDE COVER	6.809
O RING, STEERING GEAR HYDRAULIC VALVE	6.556
O RING, STEERING GEAR HYDRAULIC VALVE	6.552
O RING, STEERING GEAR OIL HOSE UNION.	6.674
O RING, STEERING GEAR THRUST BEARING ADJUSTER PLUG.	6.840
O RING, STEERING OIL PUMP.	6.609
O RING, STEERING OIL PUMP.	6.612
O RING, STEERING OIL PUMP.	6.635
O RING, SUPERLIFT SHOCK ABSORBER COMPRESSOR (ON REGULATOR)	7.465
O RING, SUPERLIFT SHOCK ABSORBER COMPRESSOR COVER	7.457
O RING, SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL VALVE (AUTOMATIC FILL).	7.476
O RING, TRANSMISSION GOVERNOR.	4.256
O RING, TRANSMISSION HAND SHIFT LEVER	4.008
O RING, TRANSMISSION INNER CONTROL LEVER.	4.282
O RING, TRANSMISSION OIL LEVEL & FILLER	4.133
O RING, TRANSMISSION REAR EXTENSION	4.318
O RING, TRANSMISSION REAR	4.317
O RING, TURBO VACUUM CHECK	3.374
O RING, WHEEL BRAKE CYLINDER BLEEDER	4.666
ORNAMENT, BACK-UP LAMP	2.697
ORNAMENT, CLOCK	9.772
ORNAMENT, FRONT PARKING & SIGNAL LAMP	2.589
ORNAMENT, HOOD PANEL.	8.055
ORNAMENT PKG., FRONT FENDER FINISH TRIM.	8.147
ORNAMENT, RADIATOR GRILLE OR FRONT END PANEL	1.303
ORNAMENT, REAR BUMPER BAR	7.832
ORNAMENT, STOP & TAIL LAMP.	2.680
ORNAMENT, WHEEL DISC (COMPONENT PARTS)	5.871
OUTLET, COLD AIR DISTRIBUTION	9.257
OUTLET, COLD AIR.	9.262
OUTLET, COLD AIR.	9.264
OUTLET, ENGINE WATER (ON ENGINE)	1.153
OUTLET, HEATER	9.786
OUTLET, HEATER	8.858
OUTLET, OUTSIDE AIR	9.789
OUTLET PKG., ENGINE WATER (ON ENGINE).	1.153
OUTLET, WINDSHIELD DEFROSTER.	9.779
OVERHAUL PKG., TRANSMISSION OVERHAUL	4.005

P

PACKAGE, TRANSMISSION OIL CONTROL VALVE BODY	4.265
PACKING, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
PACKING, CRANKSHAFT REAR BEARING CAP OIL	0.137
PACKING, POWER BRAKE POWER CYLINDER	4.922

PAD, BODY MAINTENANCE	8.800
PAD, BRAKE & CLUTCH PEDAL (RUBBER).	4.630
PAD, CAR BUMPER JACK	8.820
PAD, COLD AIR DISTRIBUTION	9.257
PAD, HEADLAMP DIMMER	2.459
PAD, INSTRUMENT CLUSTER	9.743
PAD PKG., ACCELERATOR	3.451
PAD PKG., BRAKE & CLUTCH PEDAL (RUBBER).	4.630
PAD, REAR BUMPER BAR ATTACHING	7.865
PAD, REAR BUMPER STEP	7.875
PAD, REAR PRIMARY BUMPER BAR	7.831
PAD, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179
PAD, STEERING WHEEL SPOKE.	6.512
PAD, STEREO TAPE PLAYER	9.670
PAINT, BUMPER & PARKING LAMP FILLER ELASTOMERIC PAINT (1 PINT CAN)	8.800
PAINT, ENGINE & CHASSIS	8.800
PAINT, PAINTED BUMPER PAINT	8.800
PAINT STICK PKG., TOUCH UP PAINT	8.800
PAINT STICK, TOUCH UP PAINT	8.800
PAN ASSY., ENGINE OIL	1.426
PAN, CONVERTER OR FLYWHEEL HOUSING (LOWER)	0.679
PANEL, FRONT BUMPER GRAVEL	7.833
PANEL, FRONT END PANEL	1.263
PANEL, FRONT FENDER TRIM	8.147
PANEL, FRONT PRIMARY BUMPER BAR	7.831
PANEL, HOOD (PRIMED-LESS ORNAMENTAL PARTS)	8.000
PANEL, RADIATOR GRILLE	1.266
PANEL, REAR BUMPER BAR	7.832
PANEL, REAR QUARTER PANEL WHEEL OPENING	8.175
PAN, TRANSMISSION OIL PAN	4.195
PARTS PKG., SUPERLIFT SHOCK ABSORBER (MANUAL FILL).	7.346
PARTS PKG., TRANSMISSION HAND SHIFT LEVER.	4.008
PATCH PKG., PAINTED BUMPER PAINT	8.800
PAWL, CRUISE CONTROL REGULATOR.	3.885
PAWL, PARKING BRAKE LEVER.	4.595
PAWL, TRANSMISSION PARKING BRAKE	4.294
PEDAL ASSY., ACCELERATOR.	3.451
PEDAL ASSY., CLUTCH	0.830
PEDAL, MASTER BRAKE PEDAL	4.625
PHOTOCELL, HEADLAMP DIMMER.	2.459
PILOT, HOOD RELEASE	8.080
PIN, BRAKE SHOE HOLD-DOWN OR RETAINING	5.041
PIN, CAMSHAFT GEAR ATTACHING.	0.738
PIN, CARBURETOR AIR VALVE	3.757
PIN, CARBURETOR CHOKE.	3.752
PIN, CARBURETOR FLOAT LEVER HINGE	3.747
PIN, CARBURETOR PUMP	3.842
PIN, CLEVIS.	8.942
PIN, CLUTCH PEDAL ATTACHING	0.837
PIN, CLUTCH PEDAL SUPPORT	0.833
PIN, CLUTCH RELEASE	0.852
PIN, CLUTCH RELEASE LEVER CONN. ROD	0.793
PIN, CLUTCH RELEASE UPPER ROD.	0.854
PIN, COMPRESSOR PRESSURE RELIEF	9.178
PIN, COTTER	8.938
PIN, CRUISE CONTROL REGULATOR	3.885
PIN, CYLINDER HEAD ATTACH.	0.293
PIN, DIFFERENTIAL OR FINAL DRIVE ASSY.	5.506
PIN, DIFFERENTIAL OR FINAL DRIVE PINION SHAFT LOCK	5.518
PIN, ENGINE FLYWHEEL ATTACHING.	0.669
PIN, ENGINE FRONT COVER	0.206
PIN, ENGINE OIL PUMP	1.723
PIN, ENGINE OIL PUMP	1.653
PIN, ENGINE PISTON WRIST.	0.636
PIN, ENGINE TIMING INDICATOR	0.219
PIN, ENGINE VALVE ROCKER SHAFT ANCHOR	0.366
PIN, EXHAUST MANIFOLD HEAT CONTROL.	3.640

PIN, FLYWHEEL HOUSING TO CYLINDER BLOCK	0.685	PIPE, CLIMATIC COMBUSTION CONTROL	3.417
PIN, FRONT AXLE SHAFT HUB	6.063	PIPE, COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
PIN, FRONT WHEEL UPPER CONTROL ARM	6.178	PIPE, CONDENSER TO RECEIVER OR BY-PASS VALVE	9.227
PIN, FUEL TANK FILLER DOOR	8.209	PIPE, ENGINE CRANKCASE VENTILATION	1.762
PIN, GROOVE	8.940	PIPE, ENGINE OIL COOLER	1.540
PIN, HEADLAMP DIMMER	2.459	PIPE, EVAPORATIVE EMISSION SYSTEM	3.130
PIN, HEATER BLOWER MOTOR	8.857	PIPE, EVAPORATIVE EMISSION SYSTEM	3.120
PIN, IGNITION DISTRIBUTOR DRIVE GEAR	2.379	PIPE, EXHAUST	3.609
PINION PKG., FINAL DRIVE	5.515	PIPE, FUEL LINE	3.163
PINION PKG., TRANSMISSION FRONT UNIT	4.161	PIPE, FUEL TANK	3.003
PINION SET PKG., TRANSMISSION REAR	4.177	PIPE, HEATER HOT WATER	8.846
PINION, TRANSMISSION PLANETARY	4.175	PIPE, IGNITION DISTRIBUTOR VACUUM	2.420
PIN, MASTER BRAKE CYLINDER	4.662	PIPE, INSTRUMENT CLUSTER OIL PRESSURE GAUGE	1.803
PIN, MASTER BRAKE PEDAL MOUNTING	4.634	PIPE, INSTRUMENT CLUSTER	9.744
PIN, NEUTRAL STARTING SWITCH	4.054	PIPE, MUFFLER OR RESONATOR TAIL PIPE	3.705
PIN, PARKING BRAKE LEVER	4.595	PIPE, MUFFLER TO RESONATOR CONNECTOR PIPE	3.705
PIN, PARKING BRAKE LEVER	4.592	PIPE, POWER BRAKE VACUUM LINE	4.931
PIN, PARKING BRAKE SIGNAL	4.589	PIPE, RECEIVER TO EVAPORATOR (LIQUID LINE)	9.231
PIN, REAR BUMPER BAR	7.832	PIPE, STEERING OIL PUMP COOLER	6.602
PIN, REFRIGERANT COMPRESSOR	9.170	PIPE, STEERING OIL PUMP RETURN (GEAR TO PUMP OR COOLER)	6.671
PIN, STARTING MOTOR BRUSH HOLDER	2.052	PIPE, TRANSMISSION AUXILIARY COOLER	4.128
PIN, STARTING MOTOR DRIVE SHIFT LEVER	2.108	PIPE, TRANSMISSION	4.104
PIN, STEERING OIL PUMP	6.608	PIPE, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128
PIN, STRAIGHT (SLOTTED SPRING TYPE)	8.939	PIPE, TRANSMISSION OIL LEVEL & FILLER	4.133
PIN, THROTTLE CONTROL (AUXILIARY BELLCRANK TO CARBURETOR)	3.430	PIPE, TRANSMISSION OIL	4.248
PIN, THROTTLE CONTROL	3.463	PIPE, TRANSMISSION OIL PAN	4.197
PIN, TILT WHEEL	6.514	PIPE, TRANSMISSION OIL PUMP INLET SUCTION	4.222
PIN, TRANSMISSION CLUTCH BRAKE BAND	4.253	PIPE, TRANSMISSION VACUUM MODULATOR	4.205
PIN, TRANSMISSION COUNTERSHAFT CLUSTER GEAR	4.422	PIPE, TURBO COMPRESSOR OIL DRAIN	3.358
PIN, TRANSMISSION DETENT OR INTERLOCK	4.311	PIPE, TURBO FLUID & WATER	3.372
PIN, TRANSMISSION FLOOR SHIFT	4.047	PIPE, WHEEL LOCK CONTROL	4.740
PIN, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228	PISTON ASSY., DOMESTIC ENGINE (WITH PIN)	0.629
PIN, TRANSMISSION GOVERNOR	4.256	PISTON ASSY., EXPORT ENGINE (WITH PIN)	0.629
PIN, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012	PISTON ASSY., MASTER BRAKE CYLINDER	4.653
PIN, TRANSMISSION HAND SHIFT LEVER	4.008	PISTON, CARBURETOR CHOKE	3.752
PIN, TRANSMISSION	4.428	PISTON, CARBURETOR POWER	3.858
PIN, TRANSMISSION	4.307	PISTON, COMPRESSOR	9.172
PIN, TRANSMISSION OIL CONTROL VALVE BODY	4.265	PISTON PKG., POWER BRAKE REACTION	4.934
PIN, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216	PISTON, POWER BRAKE POWER CYLINDER	4.922
PIN, TRANSMISSION OIL PUMP	4.226	PISTON, POWER BRAKE POWER CYLINDER	4.922
PIN, TRANSMISSION PARKING BRAKE INSIDE DETENT	4.279	PISTON, SUCTION THROTTLING (P.O.A.)	9.198
PIN, TRANSMISSION PARKING BRAKE	4.294	PISTON, SUPERLIFT SHOCK ABSORBER	7.455
PIN, TRANSMISSION PARKING BRAKE	4.290	PISTON, SUPERLIFT SHOCK ABSORBER COMPRESSOR ASSY.	7.460
PIN, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275	PISTON, TRANSMISSION CLUTCH	4.166
PIN, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241	PISTON, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228
PIN, TRANSMISSION REVERSE IDLER GEAR RETAINING	4.435	PISTON, TRANSMISSION HAND SHIFT LEVER	4.008
PIN, TRANSMISSION REVERSE OIL LINE CHECK VALVE (IN CASE)	4.106	PISTON, TRANSMISSION PARKING BRAKE	4.290
PIN, TRANSMISSION SERVO TRIMMER & ACCUMULATOR	4.230	PISTON, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241
PIN, TRANSMISSION SHIFT SELECTOR (INNER)	4.302	PISTON, WHEEL BRAKES CYLINDER OR CALIPER	4.668
PIN, TRANSMISSION SHIFT CONTROL ROD	4.037	PIVOT, BRAKE ADJUSTING	5.103
PIN, TRANSMISSION SHIFT CONTROL RELAY	4.042	PIVOT, CLUTCH RELEASE EQUALIZER	0.851
PIN, TRANSMISSION SHIFT TUBE OR SHAFT	4.027	PIVOT, HORN	2.819
PIN, TRANSMISSION STATOR CONTROL	4.122	PIVOT, TRANSMISSION SHIFT CONTROL RELAY	4.042
PIN, TRANSMISSION THROTTLE VALVE CONTROL ROD OR LEVER	4.052	PIVOT, VALVE PUSH ROD ADJUSTING (ON ROCKER ARM)	0.429
PIN, TURBO EXHAUST BY-PASS	3.352	PLASTIGAGE PKG., CRANKSHAFT BEARING CLEARANCE	0.093
PIN, TURN SIGNAL	2.895	PLATE, ACCELERATOR PEDAL	3.454
PIN, TURN SIGNAL SWITCH CANCELLING	2.896	PLATE, AIR INJECTION REACTOR PUMP	3.665
PIN, TURN SIGNAL SWITCH LEVER	2.910	PLATE ASSY., CLUTCH DRIVEN	0.886
PIN, WATER PUMP TO TIMING CHAIN COVER	1.073	PLATE ASSY., COMPRESSOR CLUTCH	9.188
PIN, WHEEL LOCK CONTROL MODULATOR	4.730	PLATE, BATTERY	2.335
PIPE, AIR INJECTION REACTOR	3.675	PLATE, BRAKE & CLUTCH PEDAL (RUBBER)	4.630
PIPE ASSY., HYDRAULIC BRAKE	4.685	PLATE, BRAKE SHOE ANCHOR PIN GUIDE	5.045
PIPE, CHOKE AIR OR HEATER	3.603		

PLATE, CARBURETOR AIR CLEANER	3.406	PLATE, TRANSMISSION HAND SHIFT LEVER	4.008
PLATE, CARBURETOR CHOKE HOUSING OR T/STAT	3.750	PLATE, TRANSMISSION INTERMEDIATE CLUTCH	4.163
PLATE, CAR HEATER	8.845	PLATE, TRANSMISSION NEUTRAL CLUTCH	4.163
PLATE, CLOCK	9.772	PLATE, TRANSMISSION	4.020
PLATE, CLUTCH PEDAL RETURN SPRING	0.846	PLATE, TRANSMISSION OIL PUMP	4.224
PLATE, CLUTCH PRESSURE	0.863	PLATE, TRANSMISSION OIL CONTROL VALVE BODY	4.265
PLATE, COMPRESSOR	9.172	PLATE, TRANSMISSION OVER-RUN CLUTCH	4.165
PLATE, CORNERING LAMP	2.585	PLATE, TRANSMISSION PLANETARY CARRIER	4.176
PLATE, CRANKCASE VENTILATION	1.745	PLATE, TRANSMISSION REAR CLUTCH	4.184
PLATE, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	PLATE, TRANSMISSION REVERSE CLUTCH	4.163
PLATE, CRUISE CONTROL SELECTOR	3.883	PLATE, TRANSMISSION REVERSE IDLER GEAR RETAINING	4.435
PLATE, DELCOTRON DRIVE END BEARING	2.307	PLATE, TRANSMISSION SHIFT INDICATOR	4.022
PLATE, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511	PLATE, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
PLATE, DIFFERENTIAL OR FINAL DRIVE SIDE	5.528	PLATE, TRANSMISSION SYNCHRONIZING CLUTCH	4.384
PLATE, ENGINE CRANKSHAFT FLYWHEEL	0.666	PLATE, TURBO EXHAUST BY-PASS	3.352
PLATE, ENGINE FRONT SUPPORT	0.004	PLATE, TURN SIGNAL	2.895
PLATE, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	PLATE, TURN SIGNAL SWITCH CANCELLING	2.896
PLATE, ENGINE TO-FRAME FILLER	8.112	PLATE, TURN SIGNAL SWITCH LEVER	2.910
PLATE, EVAPORATOR BLOWER	9.216	PLATE, UNIVERSAL JOINT BEARING & FLANGE	5.586
PLATE, EVAPORATOR BLOWER	9.215	PLATE, UNIVERSAL JOINT COMPANION (TRANS. END)	4.344
PLATE, EXHAUST MANIFOLD BOLT LOCK	3.604	PLATE, WINDSHIELD COMPASS	8.873
PLATE, EXHAUST MANIFOLD HOT AIR	3.602	PLUG, AIR CONDITIONING CONTROL	9.275
PLATE, EXHAUST MUFFLER	3.704	PLUG, AIR CONDITIONING VAC. & TEMP. CONTRDL	9.281
PLATE, FINAL DRIVE MOUNTING	5.500	PLUG, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
PLATE, FLUID METERING VALVE	3.364	PLUG, BODY TO FRAME	9.023
PLATE, FORCED AIR VENTILATION	9.790	PLUG, CARBURETOR AIR CLEANER	3.406
PLATE, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	5.002	PLUG, CARBURETOR AIR HORN	3.730
PLATE, FRONT DRUM BRAKE BACKING	5.001	PLUG, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
PLATE, FRONT FENDER FILLER	8.160	PLUG, CARBURETOR FLOAT BOWL	3.734
PLATE, FRONT FENDER	8.131	PLUG, CARBURETOR PASSAGE	3.775
PLATE, FUEL PUMP MOUNTING	3.901	PLUG, CARBURETOR PUMP DISCHARGE CHECK	3.825
PLATE, HAZARD WARNING OR MARKER LAMP	2.575	PLUG, CAR HEATER	8.845
PLATE, HEADLAMP CONCEALING	2.770	PLUG, CHOKE AIR OR HEATER	3.603
PLATE, HEATER WATER TEMP. CONTROL	8.848	PLUG, CLOCK	9.772
PLATE, HOOD PANEL	8.024	PLUG, CLUTCH & FLYWHEEL HOUSING ACCESS OR VENT	0.686
PLATE, HOOD RELEASE	8.080	PLUG, DIFFERENTIAL OIL FILLER HOLE	5.505
PLATE, HORN	2.819	PLUG, ENGINE CRANKCASE VENTILATION	1.762
PLATE, IGNITION COIL MOUNTING	2.183	PLUG, ENGINE CUP TYPE	0.034
PLATE, IGNITION DISTRIBUTOR BREAKER	2.385	PLUG, ENGINE CUP TYPE	0.553
PLATE, IGNITION DISTRIBUTOR ADVANCE WEIGHT HOLD-DOWN	2.390	PLUG, ENGINE FRONT COVER	0.206
PLATE, INSTRUMENT CLUSTER PRINTED CIRCUIT	9.744	PLUG, ENGINE OIL PAN DRAIN	1.453
PLATE, INTAKE & EXHAUST MANIFOLD	3.275	PLUG, ENGINE OIL PUMP PRESSURE	1.609
PLATE, LIGHT SWITCH CONTROL	2.486	PLUG, ENGINE OIL PUMP PRESSURE REGULATOR HOLE	1.531
PLATE, MASTER BRAKE CYL. PISTON	4.656	PLUG, ENGINE PIPE	0.034
PLATE PKG., CLUTCH DRIVE PLATE COVER & PRESSURE	0.858	PLUG, ENGINE VALVE ROCKER SHAFT END	0.356
PLATE, POWER BRAKE MASTER CYL.	4.910	PLUG, ENGINE VALVE ROCKER COVER	0.386
PLATE, POWER BRAKE POWER CYLINDER	4.922	PLUG, EXHAUST MANIFOLD HEAT CONTROL	3.640
PLATE, POWER BRAKE REACTION	4.934	PLUG, EXPANSION	8.970
PLATE, RADIATOR CORE SUPPORT	1.270	PLUG, FINAL DRIVE ASSY. FILLER & DRAIN	5.400
PLATE, RADIO MOUNTING	9.655	PLUG, FRONT WHEEL LOWER CONTROL ARM	6.174
PLATE, RADIO	9.649	PLUG, FRONT WHEEL LOWER CONTROL ARM BUSHING	6.166
PLATE, REAR DRUM BRAKE BACKING	5.001	PLUG, FRONT WHEEL UPPER CONTROL ARM	6.178
PLATE, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179	PLUG, FUEL INTAKE MANIFOLD	3.265
PLATE, REAR SPRING	7.545	PLUG, FUEL TANK	3.003
PLATE & SEAL, POWER BRAKE POWER PISTON	4.924	PLUG, FUEL TANK GAUGE	3.107
PLATE, SHOCK ABSORBER MOUNTING	7.395	PLUG, HEATER CONTROL	8.852
PLATE, STEERING ARM & BACKING PLATE TO KNUCKLE	6.104	PLUG, HEATER VACUUM	8.850
PLATE, STEERING OIL PUMP	6.612	PLUG INSULATOR, BODY TO FRAME MOUNTING	9.023
PLATE, STEERING SHAFT	6.521	PLUG KIT, STEERING RELAY ROD	6.870
PLATE, TILT WHEEL	6.514	PLUG, MASTER BRAKE CYL. FILLER	4.651
PLATE, TRANSMISSION CASE FRONT	4.123	PLUG, REAR BUMPER ATTACHING	7.836
PLATE, TRANSMISSION DIRECT CLUTCH	4.163	PLUG, REAR PRIMARY BUMPER BAR	7.831
PLATE, TRANSMISSION FORWARD CLUTCH	4.163		
PLATE, TRANSMISSION FRONT UNIT TORUS	4.155		
PLATE, TRANSMISSION HAND SHIFT LEVER	4.010		
PLATE, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012		

COVER	0.413	REPAIR PKG., STEERING GEAR MOUNTING	6.509
REINFORCEMENT, EXHAUST MUFFLER	3.704	REPAIR PKG., STOP & TAIL LAMP	2.694
REINFORCEMENT, FRONT BUMPER BAR		RESERVOIR & CAP, RADIATOR FILLER CAP	
ATTACHING	7.836	(PRESSURE TYPE)	1.203
REINFORCEMENT, FRONT FENDER	8.141	RESERVOIR OVERFLOW PKG., RADIATOR	1.219
REINFORCEMENT, MASTER BRAKE CYLINDER	4.648	RESERVOIR, RADIATOR OVERFLOW	1.240
REINFORCEMENT PKG., BODY FRAME SIDE		RESERVOIR, STEERING OIL PUMP	6.635
(AT REAR COMPT.)	7.006	RESIN, PLASTIC HOOD OR VALANCE PANEL	
REINFORCEMENT, RADIATOR GRILLE	1.266	REPAIR	8.800
REINFORCEMENT, RADIATOR BAFFLE AND		RESISTOR, AIR CONDITIONING CONTROL	9.275
DEFLECTOR	1.274	RESISTOR, HEATER CONTROL	8.852
REINFORCEMENT, REAR AXLE CONTROL		RESISTOR, HEATER & DEFROSTER	8.855
ARM FRAME	5.380	RESISTOR, IGNITION COIL	2.173
REINFORCEMENT, REAR SUSPENSION		RESISTOR, REAR WINDOW ELECTRIC	
CONTROL	5.382	DEFOGGER (ON GLASS)	9.778
REINFORCEMENT, TAIL PIPE OR RESONATOR		RESONATOR ASSY., EXHAUST	3.702
MOUNTING	3.706	RESTRICTOR, AIR CONDITIONING VAC. &	
REINFORCEMENT, TRANSMISSION SHIFT		TEMP. CONTROL	9.281
LEVER	4.046	RESTRICTOR, CRUISE CONTROL REGULATOR	3.885
RELAY, AIR CONDITIONING VAC. & TEMP.		RESTRICTOR, EVAPORATIVE EMISSION	
CONTROL	9.281	SYSTEM	3.130
RELAY, AIR CONDITIONING CONTROL	9.275	RESTRICTOR, FUEL LINE	3.163
RELAY, AIR CONDITIONING VACUUM	9.270	RESTRICTOR, FUEL TANK	3.003
RELAY, AIR CONDITIONING	9.277	RESTRICTOR PKG., CRUISE CONTROL	
RELAY & CAPACITOR, CRUISE CONTROL		REGULATOR ELECTRICAL ACTUATING	3.887
REGULATOR ELECTRICAL ACTUATING	3.887	RESTRICTOR, REAR AXLE HOUSING	5.395
RELAY, DELCOTRON WARNING LIGHT	2.515	RESTRICTOR, TORSION BAR	7.105
RELAY, ENGINE EXHAUST EMISSION		RESTRICTOR, TRANSMISSION MOUNTING	4.085
CONTROL	2.408	RESTRICTOR, WHEEL LOCK CONTROL	4.720
RELAY, GENERATOR ELECTRICAL OUTPUT	2.510	RETAINER, AIR CONDITIONING VAC. & TEMP.	
RELAY, HEADLAMP DIMMER	2.459	CONTROL	9.281
RELAY, HEATER CONTROL	8.852	RETAINER, AIR CONDITIONING CONTROL	9.275
RELAY, HEATER VACUUM	8.850	RETAINER, AIR CONDITIONING CONTROL	9.275
RELAY, INSTRUMENT CLUSTER SPEED		RETAINER, BACK-UP LAMP ACTUATING	2.698
WARNING	9.762	RETAINER, BACK-UP LAMP	2.697
RELAY, REAR WINDOW ELECTRIC DEFOGGER		RETAINER, BATTERY	2.335
(ON GLASS)	9.778	RETAINER, BODY TO FRAME BOLT	9.011
RELAY, STOP & TAIL LAMP	2.694	RETAINER, BRAKE SHOE ADJUSTING	5.107
RELAY & SWITCH, CRUISE CONTROL		RETAINER, CARBURETOR ACTUATING	3.762
REGULATOR ELECTRICAL ACTUATING	3.887	RETAINER, CARBURETOR AIR VALVE	3.757
RELAY, THROTTLE RETURN OR SLOW IDLE	3.440	RETAINER, CARBURETOR AIR CLEANER	3.410
RELAY, TRANSMISSION OIL PRESSURE		RETAINER, CARBURETOR CHOKE HOUSING	
SPARK CONTROL	4.075	OR T/STAT	3.750
REPAIR KIT, BRAKE SHOE HOLD DOWN PIN	5.043	RETAINER, CARBURETOR CHOKE	3.752
REPAIR KIT, CLUTCH RELEASE FORK	0.795	RETAINER, CARBURETOR FAST IDLE	3.768
REPAIR KIT, ELECTRIC REAR WINDOW		RETAINER, CARBURETOR FLOAT LEVER	
DEFOGGER HEATING ELEMENT	8.800	HINGE	3.747
REPAIR KIT, ENGINE FUEL & VACUUM PUMP	3.925	RETAINER, CARBURETOR FUEL	3.838
REPAIR KIT, FRONT WHEEL BRAKE		RETAINER, CARBURETOR	3.814
CYLINDER	4.667	RETAINER, CARBURETOR POWER	3.858
REPAIR KIT, FRONT WHEEL CALIPER PISTON	4.667	RETAINER, CARBURETOR PUMP	3.841
REPAIR KIT, FRONT WHEEL CYLINDER (WITH		RETAINER, CARBURETOR PUMP	3.842
DRUM BRAKES)	4.665	RETAINER, CARBURETOR PUMP DISCHARGE	
REPAIR KIT, FRONT WHEEL DISC BRAKE		CHECK	3.825
CALIPER PISTON	4.665	RETAINER, CARBURETOR VACUUM BREAK	
REPAIR KIT, MASTER BRAKE CYLINDER		CONTROL	3.765
(MANUAL BRAKES)	4.649	RETAINER, CAR HEATER	8.845
REPAIR KIT, MASTER BRAKE CYLINDER		RETAINER, CIGARETTE LIGHTER	9.709
(POWER BRAKES)	4.649	RETAINER, CLOCK	9.772
REPAIR KIT, MASTER & POWER CYLINDER		RETAINER, CLUTCH PEDAL OR ROD	0.829
(COMPLETE)	4.898	RETAINER, CLUTCH RELEASE ROD	0.787
REPAIR KIT, POLYCAST WHEEL	8.800	RETAINER, CLUTCH RELEASE FORK	0.796
REPAIR KIT, POWER ASSIST CYLINDER	4.898	RETAINER, CLUTCH RELEASE	0.852
REPAIR KIT, POWER BRAKE REACTION	4.934	RETAINER, CLUTCH RELEASE COLLAR (WIRE)	0.805
REPAIR KIT, PROPELLER SHAFT UNIVERSAL		RETAINER, CLUTCH RELEASE UPPER ROD	0.854
JOINT	5.548	RETAINER, CLUTCH RELEASE LEVER CONN.	
REPAIR KIT, REAR LEAF SPRING	7.504	ROD	0.793
REPAIR KIT, REAR WHEEL BRAKE CYLINDER	4.667	RETAINER, CLUTCH RELEASE BEARING	0.799
REPAIR KIT, REAR WHEEL CYLINDER (WITH		RETAINER, COLD AIR DISTRIBUTOR	9.263
FRONT DISC BRAKES)	4.665	RETAINER, COLD AIR	9.264
REPAIR KIT, REAR WHEEL CYLINDER (WITH		RETAINER, CONTROLLER	3.356
FRONT & REAR DRUM BRAKES)	4.665	RETAINER, CORNERING LAMP	2.585
REPAIR KIT, REAR WINDOW ELECTRIC		RETAINER, CRUISE CONTROL REGULATOR	3.885
DEFOGGER (ON GLASS)	9.778	RETAINER, CRUISE CONTROL SELECTOR	3.883
REPAIR PKG., PROPELLER SHAFT REAR		RETAINER, CRUISE CONTROL ACTUATING	3.885
SUPPORT YOKE LINK	5.442	RETAINER, DELCOTRON DRIVE END BEARING	2.307
REPAIR PKGS., SUPERLIFT SHOCK		RETAINER, DELCOTRON	2.319
ABSORBER COMPRESSOR ASSY.	7.460	RETAINER, DELCOTRON STATOR END	2.298

RETAINER, DISTRIBUTOR VACUUM HOSE	3.445	RETAINER, RADIATOR GRILLE OR FRONT END PANEL	1.303
RETAINER, ENGINE CRANKSHAFT CLUTCH GEAR PILOT	0.649	RETAINER, RADIATOR GRILLE	1.266
RETAINER, ENGINE INTAKE & EXHAUST VALVE SPRING	0.309	RETAINER, RADIATOR GRILLE	1.268
RETAINER, ENGINE OIL PUMP	1.639	RETAINER, RADIO	9.649
RETAINER, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	RETAINER, REAR AXLE VIBRATION	5.394
RETAINER, EVAPORATOR	9.211	RETAINER, REAR BUMPER BAR	7.832
RETAINER, FINAL DRIVE REAR PINION BEARING	5.489	RETAINER, REAR PRIMARY BUMPER BAR	7.831
RETAINER, FRONT BUMPER	7.832	RETAINER, REAR QUARTER PANEL WHEEL OPENING PANEL	8.176
RETAINER, FRONT BUMPER GRAVEL	7.833	RETAINER, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179
RETAINER, FRONT DRIVE AXLE SHAFT	6.056	RETAINER, REAR WHEEL BEARING	5.816
RETAINER, FRONT FENDER FILLER	8.160	RETAINER, REAR WHEEL HUB GREASE	5.830
RETAINER, FRONT FENDER	8.154	RETAINER, REFRIGERANT CONTROL MASTER SWITCH	9.280
RETAINER, FRONT FENDER	8.131	RETAINER, REFRIGERANT PIPE	9.242
RETAINER, FRONT FENDER REAR MOLDING	8.133	RETAINER, RIDE STABILIZER LINK GROMMET (STEEL)	7.245
RETAINER, FRONT FENDER TRIM	8.147	RETAINER, ROCKER PANEL MOLDING ATTACHING	8.309
RETAINER, FRONT PARKING & SIGNAL LAMP	2.587	RETAINER, SHOCK ABSORBER MOUNTING	7.395
RETAINER, FRONT PRIMARY BUMPER BAR	7.831	RETAINER, SHOCK ABSORBER LINK BUSHING	7.389
RETAINER, FRONT TORSION BAR	7.436	RETAINER, SPARE WHEEL	7.632
RETAINER, FRONT WHEEL HUB (INNER)	6.311	RETAINER, SPARK PLUG WIRE	2.251
RETAINER, FRONT WHEEL LOWER CONTROL ARM & SHAFT	6.169	RETAINER, SPEEDOMETER CABLE	4.342
RETAINER, FRONT WHEEL UPPER CONTROL ARM	6.178	RETAINER, SPRING (HAIRPIN TYPE)	8.934
RETAINER, HAND THROTTLE CONTROL	3.483	RETAINER, STEERING GEAR THRUST	6.835
RETAINER, HAZARD WARNING OR MARKER LAMP	2.575	RETAINER, STEERING KNUCKLE	6.022
RETAINER, HEADLAMP HOUSING OR GRILLE	2.765	RETAINER, STEERING OIL PUMP HOSE	6.672
RETAINER, HEATER CONTROL	8.852	RETAINER, STEERING SHAFT	6.521
RETAINER, HEATER HOSE TO ENGINE	8.866	RETAINER, STEERING WHEEL SPOKE	6.512
RETAINER, HEATER	8.858	RETAINER, STOP & TAIL LAMP ASSY	2.660
RETAINER, HEATER WATER TEMP. CONTROL	8.848	RETAINER, SUCTION THROTTLING (P.O.A.)	9.198
RETAINER, HOOD PANEL	8.021	RETAINER, TAIL PIPE OR RESONATOR MOUNTING	3.706
RETAINER, HOOD PANEL	8.055	RETAINER, THROTTLE CONTROL	3.463
RETAINER, HOOD PANEL	8.054	RETAINER, THROTTLE CONTROL	3.430
RETAINER, HOOD PANEL	8.024	RETAINER, THROTTLE RETURN CHECK OR DASHPOT	3.440
RETAINER, HOOD RELEASE	8.080	RETAINER, THROTTLE ROD	3.425
RETAINER, HORN BLOWER	2.820	RETAINER, TILT WHEEL	6.514
RETAINER, HORN	2.819	RETAINER, TRANSMISSION SYNCHRONIZING CLUTCH	4.383
RETAINER, IGNITION DISTRIBUTOR MOUNTING	2.363	RETAINER, TRANSMISSION REAR BEARING RETAINING	4.412
RETAINER, IGNITION DISTRIBUTOR	2.364	RETAINER, TRANSMISSION MAIN DRIVE GEAR	4.356
RETAINER, INSTRUMENT CLUSTER	9.745	RETAINER, TRANSMISSION MAIN DRIVE GEAR BEARING	4.376
RETAINER, INSTRUMENT CLUSTER	9.748	RETAINER, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228
RETAINER, INSTRUMENT CLUSTER	9.743	RETAINER, TRANSMISSION OIL PUMP	4.226
RETAINER, MASTER BRAKE CYLINDER	4.662	RETAINER, TRANSMISSION GOVERNOR	4.256
RETAINER, MASTER BRAKE CYL.	4.658	RETAINER, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241
RETAINER, MASTER BRAKE CYL. PUSH ROD	4.659	RETAINER, TRANSMISSION COAST DOWNSHIFT TIMING	4.234
RETAINER, MASTER BRAKE CYL. PISTON (RUBBER)	4.654	RETAINER, TRANSMISSION REAR SERVO PISTON SPRING	4.247
RETAINER, MASTER BRAKE PEDAL MOUNTING	4.634	RETAINER, TRANSMISSION SERVO TRIMMER & ACCUMULATOR	4.230
RETAINER, MASTER CYL. PISTON RETURN	4.655	RETAINER, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.233
RETAINER, OUTSIDE AIR	9.789	RETAINER, TRANSMISSION OIL CONTROL VALVE BODY	4.265
RETAINER, OUTSIDE AIR VENTILATING	9.787	RETAINER, TRANSMISSION VACUUM MODULATOR	4.205
RETAINER, PARKING BRAKE CABLE	4.785	RETAINER, TRANSMISSION PARKING BRAKE	4.294
RETAINER, PARKING LAMP	2.585	RETAINER, TRANSMISSION	4.307
RETAINER, PISTON PIN LOCK	0.639	RETAINER, TRANSMISSION INNER CONTROL LEVER	4.282
RETAINER PKG., SHOCK ABSORBER MOUNTING	7.395	RETAINER, TRANSMISSION SPEEDOMETER DRIVEN GEAR	4.338
RETAINER, POWER BRAKE AIR VALVE	4.918	RETAINER, TRANSMISSION REAR	4.317
RETAINER, POWER BRAKE AIR CLEANER	4.913	RETAINER, TRANSMISSION PARKING BRAKE	4.290
RETAINER, POWER BRAKE CYLINDER POPPET	4.928	RETAINER, TRANSMISSION RANGE	
RETAINER, POWER BRAKE FLOATING CONTROL VALVE	4.935		
RETAINER, POWER BRAKE POWER PISTON	4.924		
RETAINER, POWER BRAKE POWER CYLINDER	4.922		
RETAINER, POWER BRAKE REACTION	4.934		
RETAINER, POWER BRAKE REACTION	4.911		
RETAINER, PROPELLER SHAFT CENTER BEARING	5.601		
RETAINER, PROPELLER SHAFT CENTER	5.600		
RETAINER, RADIATOR BAFFLE AND DEFLECTOR	1.274		

SELECTOR OR SHIFT	4.275	RING, POWER BRAKE POWER CYLINDER . . .	4.922
RETAINER, TRANSMISSION MOUNTING	4.085	RING, RADIATOR FAN SHROUD	1.277
RETAINER, TRANSMISSION	4.081	RING, STARTING MOTOR THRUST	2.063
RETAINER, TRANSMISSION SHIFT CONTROL		RING, STEERING GEAR HOUSING END	6.806
RELAY	4.042	RING, STEERING GEAR OIL PUMP ROTOR	
RETAINER, TRANSMISSION CONTROL	4.057	CAM	6.611
RETAINER, TRANSMISSION REVERSE		RING, STEERING OIL PUMP DRIVE SHAFT	
CLUTCH	4.189	RETAINING	6.616
RETAINER, TRANSMISSION LOW SPEED	4.180	RING, STEERING SHAFT ANTI-THEFT	6.500
RETAINER, TRANSMISSION INTERMEDIATE		RING, STEERING SHAFT CONNECTING	6.525
CLUTCH	4.167	RING, STEERING SHAFT	6.521
RETAINER, TRANSMISSION CLUTCH	4.164	RINGS, TRANSMISSION OIL SEAL (METAL) . .	4.127
RETAINER, TRANSMISSION REAR UNIT SUN .	4.172	RING, TILT WHEEL	6.514
RETAINER, TRANSMISSION SHIFT TUBE OR		RING, TRANSMISSION CASE	4.162
SHAFT	4.027	RING, TRANSMISSION CLUTCH	4.169
RETAINER, TRANSMISSION	4.020	RING, TRANSMISSION CONTROL OR BACK	
RETAINER, TRANSMISSION HAND SHIFT		DRIVE (TRANS. LINKAGE LOCKING)	4.070
LEVER	4.008	RING, TRANSMISSION DETENT OR	
RETAINER, TRANSMISSION FLOOR SHIFT . . .	4.015	INTERLOCK	4.311
RETAINER, TRANSMISSION SHIFT CONTROL		RING, TRANSMISSION DRIVE & DRIVEN LINK	
ROD	4.037	SPROCKET	4.130
RETAINER, TRANSMISSION SHIFT		RING, TRANSMISSION FIRST & REVERSE	
INDICATOR	4.022	RETAINING	4.416
RETAINER, TRANSMISSION HAND SHIFT		RING, TRANSMISSION FRONT SERVO &	
LEVER HOUSING OR BRACKET	4.012	ACCUMULATOR	4.228
RETAINER, TRANSMISSION CASE	4.162	RING, TRANSMISSION FRONT SERVO &	
RETAINER, TURBO CARBURETOR BOOST		ACCUMULATOR PISTON	4.229
PRESSURE OR LIMIT	3.374	RING, TRANSMISSION FRONT UNIT TORUS . .	4.156
RETAINER, TURN SIGNAL SWITCH		RING, TRANSMISSION FRONT	4.161
ACTUATOR	2.906	RING, TRANSMISSION FRONT UNIT TORUS . .	4.155
RETAINER, TURN SIGNAL SWITCH LEVER . . .	2.910	RING, TRANSMISSION FRONT OIL	4.125
RETAINER, UPPER CONTROL ARM BUSHING .	6.163	RING, TRANSMISSION GOVERNOR	4.256
RETAINER, WHEEL DISC (COMPONENT		RING, TRANSMISSION HAND SHIFT LEVER	
PARTS)	5.871	HOUSING OR BRACKET	4.012
RETAINER, WHEEL LOCK CONTROL		RING, TRANSMISSION HAND SHIFT LEVER . .	4.008
MODULATOR	4.730	RING, TRANSMISSION INPUT	4.123
RETAINER, WHEEL LOCK CONTROL	4.720	RING, TRANSMISSION INTERMEDIATE	
RETAINER, WHEEL LOCK CONTROL SENSOR	4.710	CLUTCH	4.167
RETARDER ASSY., DISTRIBUTOR VACUUM		RING, TRANSMISSION INTERMEDIATE	4.168
HOSE	3.445	RING, TRANSMISSION LOW SPEED	4.180
RIDE PKG., REAR SUSPENSION CONTROL . . .	5.382	RING, TRANSMISSION MAIN	4.121
RING, CARBURETOR PUMP	3.841	RING, TRANSMISSION MAIN DRIVE GEAR	
RING, CLOCK	9.772	BEARING	4.376
RING, CLUTCH RELEASE FORK	0.796	RING, TRANSMISSION MAIN DRIVE SHAFT . .	4.397
RING, COMPRESSOR PULLEY	9.181	RING, TRANSMISSION OIL CONTROL VALVE	
RING, COMPRESSOR	9.172	BODY	4.265
RING, CONTROLLER	3.356	RING, TRANSMISSION OIL COOLER	
RING, CRUISE CONTROL REGULATOR	3.885	(PRESSURE REGULATOR OR	
RING, CRUISE CONTROL SELECTOR	3.883	MODULATOR)	4.216
RING, DIFFERENTIAL CLUTCH & SIDE GEAR .	5.511	RING, TRANSMISSION OIL DELIVERY (WITH	
RING, ENGINE PISTON COMPRESSION	0.643	BUSHING)	4.179
RING, ENGINE PISTON OIL	0.643	RING, TRANSMISSION OIL PUMP	4.226
RING, EXHAUST PIPE TO MANIFOLD	3.611	RING, TRANSMISSION PLANETARY CARRIER	4.176
RING, FRONT DRIVE AXLE	6.060	RING, TRANSMISSION RANGE SELECTOR &	
RING, FRONT DRIVE OUTER AXLE SHAFT . . .	6.061	PARKING LOCK	4.278
RING, FUEL TANK FILLER DOOR	8.209	RING, TRANSMISSION REAR SERVO &	
RING, FUEL TANK (INST. PANEL UNIT)	3.108	ACCUMULATOR PISTON	4.242
RING, HEADLAMP MOUNTING	2.726	RING, TRANSMISSION REAR BEARING	
RING, HEADLAMP SEALED BEAM UNIT		RETAINING	4.412
RETAINING	2.731	RING, TRANSMISSION REAR UNIT CLUTCH . .	4.186
RING, HORN BLOWER	2.820	RING, TRANSMISSION REVERSE PLANET . . .	4.192
RING, HORN	2.819	RING, TRANSMISSION REVERSE SUN	4.190
RING, IGNITION LOCK	2.188	RING, TRANSMISSION REVERSE CLUTCH . . .	4.189
RING, IGNITION SWITCH WARNING OR LOCK	2.195	RING, TRANSMISSION SHIFT TUBE OR	
RING, INSTRUMENT CLUSTER	9.745	SHAFT	4.027
RING, INSTRUMENT CLUSTER	9.743	RING, TRANSMISSION SHIFT TUBE LEVER . .	4.032
RING KIT, STEERING GEAR HYDRAULIC		RING, TRANSMISSION SHIFT FORK TO	
VALVE	6.552	SHAFT	4.312
RING, MASTER BRAKE CYL. PISTON	4.656	RING, TRANSMISSION SPEEDOMETER	
RING, MASTER CYL. PISTON RETURN	4.655	DRIVEN GEAR	4.338
RING PKG., ENGINE PISTON (FOR ONE		RING, TRANSMISSION SPEEDOMETER DRIVE	
PISTON)	0.643	GEAR	4.345
RING PKG., ENGINE PISTON (FOR ENTIRE		RING, TRANSMISSION STATOR CONTROL . . .	4.235
ENGINE)	0.643	RING, TRANSMISSION SUN	4.159
RING PKG., REFRIGERANT COMPRESSOR . . .	9.170	RING, TRANSMISSION SYNCHRONIZING	
RING, POWER BRAKE AIR CLEANER	4.913	CLUTCH	4.383
RING, POWER BRAKE FLOATING CONTROL		RING, TRANSMISSION SYNCHRONIZING	
VALVE	4.935	CLUTCH	4.384

RING, TRANSMISSION TORUS TORQUE MULTIPLIER	4.157
RING, TRANS. PILOT BEARING	4.353
RING, TURN SIGNAL	2.895
RING, UNIVERSAL JOINT BEARING & FLANGE	5.586
RING, WHEEL TRIM	5.871
RIVET, BRAKE LINING BRASS	5.019
RIVET, CLUTCH RELEASE LEVER CONN. ROD	0.793
RIVET, FRONT END PANEL	1.263
RIVET, HEATER	8.858
RIVET, PARKING BRAKE LEVER	4.595
RIVETS, DOME HEAD BLIND	8.967
RIVETS	8.967
RIVET, TRANSMISSION HAND SHIFT LEVER	4.008
ROD, ACCELERATOR PEDAL	3.454
ROD ASSY., ENGINE CONNECTING (LESS BEARINGS)	0.603
ROD ASSY., STEERING TIE ROD	6.230
ROD ASSY., SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL VALVE	7.477
ROD, BACK-UP LAMP ACTUATING	2.698
ROD, BATTERY	2.335
ROD, CARBURETOR ACTUATING	3.762
ROD, CARBURETOR AIR VALVE	3.757
ROD, CARBURETOR CHOKE	3.752
ROD, CARBURETOR FAST IDLE	3.768
ROD, CARBURETOR MAIN METERING	3.806
ROD, CARBURETOR POWER	3.858
ROD, CARBURETOR PUMP CONNECTOR	3.843
ROD, CARBURETOR VACUUM BREAK CONTROL	3.765
ROD, CARBURETOR VACUUM BREAK	3.755
ROD, CLUTCH RELEASE ROD	0.787
ROD, CLUTCH RELEASE UPPER ROD	0.854
ROD, CRUISE CONTROL ACTUATING	3.885
ROD, CRUISE CONTROL REGULATOR	3.885
ROD, ENGINE VALVE PUSH ROD	0.426
ROD, HOOD RELEASE	8.080
ROD, IGNITION DISTRIBUTOR VACUUM	2.420
ROD, MASTER BRAKE CYL	4.658
ROD, PARKING BRAKE CABLE	4.765
ROD & PLUNGER, MASTER BRAKE CYL	4.658
ROD, POWER BRAKE AIR VALVE	4.918
ROD, POWER BRAKE POWER PISTON	4.924
ROD, SPARE WHEEL	7.632
ROD, STEERING RELAY ROD	6.870
ROD, STEERING SHAFT CONNECTING	6.525
ROD, STEERING TIE ROD (COMPLETE WITH BALL STUD)	6.233
ROD, THROTTLE CONTROL (AUXILIARY BELLCRANK TO ACCELERATOR LEVER)	3.430
ROD, THROTTLE CONTROL (AUXILIARY BELLCRANK TO CARBURETOR)	3.430
ROD, THROTTLE CONTROL (BELLCRANK TO THROTTLE AUXILIARY BELLCRANK)	3.430
ROD, THROTTLE CONTROL (EQUALIZER TO ACCELERATOR BRACKET)	3.430
ROD, THROTTLE CONTROL	3.430
ROD, TILT WHEEL	6.514
ROD, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070
ROD, TRANSMISSION CONTROL SWITCH	4.060
ROD, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228
ROD, TRANSMISSION HAND SHIFT LEVER	4.006
ROD, TRANSMISSION SHIFT CONTROL (TUBE OR SHAFT TO TRANS.)	4.035
ROD, TRANSMISSION SHIFT CONTROL (TUBE OR SHAFT TO RELAY)	4.035
ROD, TRANSMISSION SHIFT CONTROL (RELAY TO TRANS.)	4.035
ROD, TRANSMISSION THROTTLE VALVE CONTROL (OUTER)	4.050
ROD, TURN SIGNAL	2.895
ROLLER, ACCELERATOR PEDAL	3.454
ROLLER ASSY., TRANSMISSION INTERMEDIATE CLUTCH	4.167
ROLLER, HEATER CONTROL	8.852

ROLLER, HEATER	8.858
ROLLER, HEATER	9.786
ROLLER, THROTTLE RETURN CHECK OR DASHPOT	3.440
ROLLER, TRANSMISSION CLUTCH	4.164
ROLLER, TRANSMISSION HAND SHIFT LEVER	4.008
ROLLER, TRANSMISSION LOW SPEED	4.180
ROLLER, TRANSMISSION PARKING BRAKE MANUAL DETENT	4.293
ROLLER, TRANSMISSION SHIFT FORK TO SHAFT	4.312
ROLLER, TURN SIGNAL SWITCH LEVER	2.910
ROTATOR, ENGINE INTAKE & EXHAUST VALVE SPRING	0.309
ROTOR ASSY., DELCOTRON	2.279
ROTOR, IGNITION DISTRIBUTOR	2.382
ROTOR KIT, STEERING OIL PUMP	6.610
ROTOR, STEERING OIL PUMP	6.610

S

SADDLE, STEERING COLUMN ATTACHING	6.760
SCOOP, RADIATOR GRILLE	1.266
SCREEN, CARBURETOR AIR CLEANER	3.410
SCREEN, CARBURETOR FUEL INLET	3.740
SCREEN, CARBURETOR PUMP	3.841
SCREEN, COMPRESSOR	9.172
SCREEN, ENGINE OIL PUMP	1.656
SCREEN, EVAPORATOR EXPANSION VALVE	9.214
SCREEN, EVAPORATOR	9.211
SCREEN, RADIATOR GRILLE	1.266
SCREEN, RADIO REAR SEAT SPEAKER	9.665
SCREEN, TRANSMISSION OIL	4.248
SCREEN, TRANSMISSION OIL PUMP	4.224
SCREEN, TRANSMISSION OIL PAN	4.197
SCREW, AIR CONDITIONING CONTROL	9.275
SCREW, AIR INJECTION REACTOR	3.680
SCREW, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
SCREW, AIR INJECTION REACTOR PUMP	3.672
SCREW, AIR INJECTION REACTOR PUMP	3.665
SCREW, BACK-UP LAMP ACTUATING	2.698
SCREW, BACK-UP LAMP	2.697
SCREW, BATTERY	2.333
SCREW, BODY TO FRAME BOLT	9.011
SCREW, BRAKE BALANCING & METERING VALVE	4.690
SCREW, BRAKE HOSE	4.681
SCREW, BRAKE SHOE ADJUSTING	5.110
SCREW, CAR BUMPER JACK	8.820
SCREW, CARBURETOR ACTUATING	3.762
SCREW, CARBURETOR AIR CLEANER	3.405
SCREW, CARBURETOR AIR CLEANER	3.403
SCREW, CARBURETOR AIR CLEANER	3.415
SCREW, CARBURETOR AIR CLEANER	3.410
SCREW, CARBURETOR AIR HORN	3.730
SCREW, CARBURETOR CHOKE	3.752
SCREW, CARBURETOR CHOKE	3.751
SCREW, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
SCREW, CARBURETOR FAST IDLE	3.766
SCREW, CARBURETOR FAST IDLE CAM	3.767
SCREW, CARBURETOR FUEL INLET	3.740
SCREW, CARBURETOR FUEL	3.838
SCREW, CARBURETOR IDLE ADJUSTING	3.822
SCREW, CARBURETOR IDLE COMPENSATOR	3.820
SCREW, CARBURETOR IDLE VENT	3.852
SCREW, CARBURETOR MAIN WELL	3.794
SCREW, CARBURETOR POWER	3.858
SCREW, CARBURETOR PUMP	3.842
SCREW, CARBURETOR THROTTLE LEVER, VALVE DR SLDW IDLE STOP	3.761
SCREW, CARBURETOR THROTTLE BODY ATTACHING	3.741

SCREW, CARBURETOR TO MANIFOLD	3.726	SCREW, HYDRAULIC BRAKE LINE	4.686
SCREW, CARBURETOR	3.814	SCREW, IGNITION COIL	2.170
SCREW, CARBURETOR VACUUM BREAK CONTROL	3.765	SCREW, IGNITION DISTRIBUTOR	2.393
SCREW, CARBURETOR VACUUM BREAK	3.755	SCREW, IGNITION DISTRIBUTOR BREAKER LEVER OR CONTACT	2.387
SCREW, CAR HEATER	8.845	SCREW, IGNITION DISTRIBUTOR BREAKER	2.385
SCREW, CHROME (CROSS RECESS).	8.977	SCREW, IGNITION LOCK	2.188
SCREW, CHROME (SLOTTED)	8.977	SCREW, INSTRUMENT CLUSTER SPEED WARNING	9.762
SCREW, COLD AIR	9.264	SCREW, INSTRUMENT CLUSTER	9.744
SCREW, COLD AIR DISTRIBUTION	9.257	SCREW, LICENSE LAMP LENS	2.708
SCREW, COMPRESSOR	3.342	SCREW, LICENSE LAMP	2.705
SCREW, COMPRESSOR	9.177	SCREW, LICENSE PLATE MOUNTING	7.800
SCREW, COMPRESSOR	9.175	SCREW, LIGHT SWITCH CONTROL	2.486
SCREW, CONTROLLER	3.356	SCREW, MANUAL ANTENNA	9.647
SCREW, CONVERTER OR FLYWHEEL HOUSING (LOWER)	0.679	SCREW, MASTER BRAKE CYLINDER	4.648
SCREW, CORNERING LAMP	2.585	SCREW, MASTER BRAKE CYL. PISTON	4.656
SCREW, CRUISE CONTROL REGULATOR MOUNTING	3.880	SCREW, NEUTRAL STARTING SWITCH	4.054
SCREW, CRUISE CONTROL REGULATOR	3.885	SCREW & NUT, CRUISE CONTROL REGULATOR	3.885
SCREW, CRUISE CONTROL SELECTOR	3.883	SCREW, OUTSIDE AIR	9.789
SCREW, DELCOTRON BRUSH HOLDER	2.291	SCREW, PARKING LAMP WIRING	2.596
SCREW, DELCOTRON DRIVE END BEARING	2.307	SCREW PKG., BRAKE SHOE ADJUSTING	5.110
SCREW, DIFFERENTIAL OR FINAL DRIVE RING GEAR TO CASE	5.531	SCREW PKG., CARBURETOR UPSET THREAD ASSORTMENT	3.864
SCREW, DIFFERENTIAL OR FINAL DRIVE PINION SHAFT LOCK	5.518	SCREW PKG., HORN	2.819
SCREW, ENGINE FRONT COVER	0.206	SCREW, PLAIN HEX. HEAD	8.977
SCREW, ENGINE OIL PAN ATTACHING	1.428	SCREW, POWER BRAKE REACTION	4.934
SCREW, ENGINE OIL PAN DRAIN	1.453	SCREW, RADIATOR BAFFLE AND DEFLECTOR	1.274
SCREW, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	SCREW, RADIATOR BAFFLE OR FAN SHROUD ATTACHING	1.276
SCREW, ENGINE TO FRAME FILLER	8.112	SCREW, RADIATOR CORE SUPPORT	1.270
SCREW, ENGINE VALVE ROCKER COVER	0.413	SCREW, RADIATOR CORE SUPPORT	1.272
SCREW, EVAPORATOR BLOWER	9.215	SCREW, RADIATOR GRILLE	1.266
SCREW, EVAPORATOR	9.211	SCREW, RADIATOR GRILLE	1.268
SCREW, EXHAUST MANIFOLD HOT AIR	3.602	SCREW, RADIATOR GRILLE OR FRONT END PANEL	1.303
SCREW, EXHAUST MUFFLER	3.704	SCREW, REAR BUMPER ATTACHING	7.836
SCREW, EXHAUST PIPE	3.616	SCREW, REAR BUMPER STEP	7.875
SCREW, EXHAUST PIPE	3.609	SCREW, REAR QUARTER PANEL WHEEL OPENING PANEL	8.176
SCREW, EXHAUST PIPE TO MANIFOLD	3.611	SCREW, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179
SCREW, EXHAUST SYSTEM ATTACHING	3.708	SCREW, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
SCREW, FINAL DRIVE REAR PINION BEARING	5.489	SCREW, REFRIGERANT CONDENSER	9.190
SCREW, FLUID METERING VALVE	3.364	SCREW, RIDE STABILIZER SHAFT	7.242
SCREW, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	5.002	SCREW, ROCKER PANEL MOLDING ATTACHING	8.309
SCREW, FRONT BUMPER GRAVEL	7.833	SCREW, SHEET METAL PLAIN-CROSS RECESS	8.977
SCREW, FRONT DRIVE AXLE SHAFT	6.056	SCREW, SHOCK ABSORBER ATTACHING	7.347
SCREW, FRONT FENDER	8.131	SCREW, SPEEDOMETER	9.761
SCREW, FRONT FENDER	8.143	SCREW, STARTING MOTOR ATTACHING	2.077
SCREW, FRONT FENDER FILLER	8.160	SCREW, STEERING COLUMN ATTACHING	6.760
SCREW, FRONT FENDER FINISH TRIM	8.147	SCREW, STEERING COLUMN FLOOR	6.758
SCREW, FRONT FENDER TRIM	8.147	SCREW, STEERING COLUMN	6.518
SCREW, FRONT PARKING & SIGNAL LAMP	2.587	SCREW, STEERING OIL PUMP MOUNTING	6.606
SCREW, FRONT PARKING & SIGNAL LAMP	2.594	SCREW, STEERING SHAFT	6.521
SCREW, FRONT PRIMARY BUMPER BAR	7.831	SCREW, STEERING SHAFT ANTI-THEFT	6.500
SCREW, FUEL LINE	3.162	SCREW, STEERING WHEEL SPOKE	6.512
SCREW, FUEL TANK GAUGE	3.107	SCREW, STEREO TAPE PLAYER	9.670
SCREW, FUEL TANK MOUNTING	3.023	SCREW, STOP & TAIL LAMP	2.680
SCREW, FUEL TANK MOUNTING	3.022	SCREW, STOP & TAIL LAMP LENS	2.688
SCREW, HAZARD WARNING OR MARKER LAMP	2.575	SCREW, STOP & TAIL LAMP MOUNTING	2.664
SCREW, HEADLAMP DIMMER	2.459	SCREW, STOP & TAIL LAMP	2.689
SCREW, HEADLAMP DOOR RETAINING	2.729	SCREW, TAIL PIPE OR RESONATOR MOUNTING	3.706
SCREW, HEADLAMP HOUSING OR GRILLE	2.765	SCREW, THROTTLE CONTROL	3.463
SCREW, HEADLAMP MOUNTING	2.720	SCREW, THROTTLE RETURN CHECK OR DASHPOT	3.440
SCREW, HEADLAMP MOUNTING	2.726	SCREW, TILT WHEEL	6.514
SCREW, HEADLAMP RING RETAINING	2.736	SCREW, TRANSMISSION CASE AND OR SPROCKET	4.105
SCREW, HEADLAMP SEALED BEAM UNIT ADJUSTING	2.737	SCREW, TRANSMISSION CASE	4.162
SCREW, HEATER CONTROL	8.852	SCREW, TRANSMISSION CLUTCH BRAKE BAND	4.253
SCREW, HEATER MOTOR MOUNTING	8.856	SCREW, TRANSMISSION CONTROL OR BACK	
SCREW, HEATER	8.858		
SCREW, HOOD HINGE ATTACHING	8.016		
SCREW, HOOD PANEL	8.054		
SCREW, HOOD RELEASE	8.080		
SCREW, HORN MOUNTING	2.812		
SCREW, HORN	2.819		

DRIVE (TRANS. LINKAGE LOCKING)	4.070	SEAL, COMPRESSOR	9.175
SCREW, TRANSMISSION FLOOR SHIFT	4.047	SEAL, CORNERING LAMP	2.585
SCREW, TRANSMISSION FRONT UNIT TORUS	4.155	SEAL & COVER, STEERING TIE ROD END	6.242
SCREW, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012	SEAL, CRANKCASE VENTILATION	1.745
SCREW, TRANSMISSION HAND SHIFT LEVER	4.010	SEAL, CRANKSHAFT REAR BEARING CAP OIL	0.137
SCREW, TRANSMISSION INNER CONTROL LEVER	4.282	SEAL, CRUISE CONTROL SELECTOR	3.883
SCREW, TRANSMISSION OIL CONTROL VALVE BODY	4.265	SEAL, DELCOTRON STATOR END	2.298
SCREW, TRANSMISSION OIL COOLING (STANDARD COOLING).	4.128	SEAL, DIFFERENTIAL OR FINAL DRIVE ASSY.	5.506
SCREW, TRANSMISSION OIL PRESSURE SPARK CONTROL	4.075	SEAL, DIFFERENTIAL OR FINAL DRIVE PINION GEAR	5.469
SCREW, TRANSMISSION OIL PAN	4.195	SEALED BEAM, PORTABLE SPOT	9.773
SCREW, TRANSMISSION OIL PAN	4.197	SEALED BEAM UNIT, HEADLAMP	2.727
SCREW, TRANSMISSION PLANETARY CARRIER	4.176	SEAL, ENGINE INTAKE & EXHAUST VALVE OIL	0.308
SCREW, TRANSMISSION RANGE SELECTOR & PARKING LOCK	4.278	SEAL, ENGINE OIL PAN	1.429
SCREW, TRANSMISSION SHIFT FORK TO SHAFT	4.312	SEAL, ENGINE VALVE PUSH ROD COVER TO BLOCK	0.446
SCREW, TRANSMISSION SHIFT SELECTOR (INNER)	4.302	SEAL, ENGINE VALVE ROCKER COVER	0.386
SCREW, TRANSMISSION SHIFTER (ON TRANS.)	4.045	SEALER, AIR CONDITIONING	9.282
SCREW, TRANSMISSION SHIFT INDICATOR	4.022	SEALER, BUMPER & PARKING LAMP FILLER ELASTOMERIC PAINT (1 PINT CAN)	8.800
SCREW, TRANSMISSION SHIFT TUBE OR SHAFT	4.027	SEALER, CRANKSHAFT TO FLYWHEEL	0.665
SCREW, TRANSMISSION SHIFT CONTROL RELAY	4.042	SEALER, EXTERIOR FINISH SERVICE MAINTENANCE	8.800
SCREW, TRANSMISSION SHIFT CONTROL ROD	4.037	SEALERS, SERVICE MAINTENANCE	8.800
SCREW, TRANSMISSION VACUUM MODULATOR	4.205	SEAL, EVAPORATOR BLOWER	9.215
SCREW, TURBO ROCKET FLUID	3.360	SEAL, EVAPORATOR	9.211
SCREW, TURN SIGNAL	2.895	SEAL, EXHAUST PIPE TO MANIFOLD	3.611
SCREW, TURN SIGNAL SWITCH HAND (WITH KNOB)	2.897	SEAL, FRONT BUMPER GRAVEL	7.833
SCREW, TURN SIGNAL SWITCH ACTUATOR	2.906	SEAL, FRONT FENDER	8.154
SCREW, VENTURI CLUSTER TO BOWL	3.790	SEAL, FRONT FENDER	8.141
SCREW, VOLTAGE CONTROL	2.500	SEAL, FRONT FENDER TRIM	8.147
SCREW & WASHER, ENGINE MOUNT ATTACHING	0.029	SEAL, FRONT PARKING & SIGNAL LAMP	2.587
SCREW, WATER PUMP TO TIMING CHAIN COVER	1.073	SEAL, FRONT PRIMARY BUMPER BAR	7.831
SCREW, WHEEL BRAKE CYLINDER BLEEDER	4.666	SEAL, FRONT TORSION BAR	7.436
SCREW, WHEEL DISC (COMPONENT PARTS)	5.871	SEAL, FRONT WHEEL LOWER CONTROL ARM BUSHING	6.166
SCREW, WINDSHIELD DEFROSTER	9.779	SEAL, FRONT WHEEL LOWER CONTROL ARM	6.174
SCRIPT, HOOD OR FRONT END PANEL	8.039	SEAL, FRONT WHEEL UPPER CONTROL ARM SEAL & GASKET PKG., DIFFERENTIAL OR FINAL DRIVE PINION GEAR	5.469
SCRIPT, HOOD PANEL	8.054	SEAL, HEATER CORE	8.854
SCRIPT PKG., FRONT FENDER FINISH TRIM	8.147	SEAL, HEATER	8.858
SCRIPT PKG., RADIATOR GRILLE OR FRONT END PANEL	1.303	SEAL, HOOD PANEL	8.021
SEAL, AIR CONDITIONING CONTROL	9.275	SEAL, HORN EMBLEM CAP	2.816
SEAL, AIR CONDITIONING CONTROL	9.275	SEAL, IGNITION DISTRIBUTOR MOUNTING	2.363
SEAL ASSY., ENGINE CRANKSHAFT FRONT OIL (IN ENGINE COVER)	0.213	SEAL, IGNITION DISTRIBUTOR	2.364
SEAL ASSY., FINAL DRIVE SIDE BEARING	5.538	SEAL, INTAKE MANIFOLD	3.270
SEAL ASSY. FRDNT WHEEL HUB BEARING OIL	6.326	SEAL KIT, BRAKE BALANCING & METERING VALVE	4.690
SEAL ASSY., TRANSMISSION FRONT OIL	4.125	SEAL KIT, COMPRESSOR	9.175
SEAL, BATTERY	2.335	SEAL KIT, FRONT DRIVE OUTER AXLE SHAFT	6.061
SEAL, CALIPER PISTON	4.667	SEAL KIT, STEERING GEAR HYDRAULIC VALVE	6.556
SEAL, CARBURETOR CHOKE	3.752	SEAL KIT, STEERING GEAR THRUST BEARING ADJUSTER PLUG	6.840
SEAL, CARBURETOR CHOKE HOUSING OR T/STAT	3.750	SEAL KIT, STEERING OIL PUMP	6.609
SEAL, CARBURETOR FLOAT BOWL	3.734	SEAL, MASTER BRAKE CYL. FILLER	4.651
SEAL, CARBURETOR OUTSIDE AIR INDUCTION	3.417	SEAL, MASTER BRAKE CYLINDER	4.648
SEAL, CAR HEATER	8.845	SEAL, MASTER BRAKE CYL. PISTON (RUBBER)	4.654
SEAL, CLUTCH PEDAL OR ROD	0.829	SEAL, OUTSIDE AIR	9.789
SEAL, CLUTCH RELEASE EQUALIZER	0.851	SEAL, PARKING BRAKE CABLE ANTI-RATTLE	4.784
SEAL, COLD AIR DISTRIBUTOR	9.263	SEAL PKG., FRONT WHEEL LOWER CONTROL ARM	6.174
SEAL, COLD AIR DISTRIBUTION	9.257	SEAL PKG., REFRIGERANT COMPRESSOR	9.170
SEAL, COLD AIR	9.264	SEAL PKG., STEERING GEAR	6.507
SEAL, COMPRESSOR MOUNTING	9.171	SEAL PKG., SUPERLIFT SHOCK ABSORBER COMPRESSOR COVER	7.457
SEAL, COMPRESSOR	3.342	SEAL PKG., SUPERLIFT SHOCK ABSORBER COMPRESSOR ASSY.	7.460
		SEAL PKG., TRANSMISSION MAIN DRIVE GEAR	4.356
		SEAL, POWER ANTENNA	9.647
		SEAL, POWER BRAKE AIR VALVE	4.918
		SEAL, POWER BRAKE MASTER CYL.	4.910
		SEAL, POWER BRAKE POWER CYLINDER	4.922
		SEAL, PROPELLER SHAFT CENTER BEARING	5.601

SEAL, PROPELLER SHAFT CENTER BALL STUD	5.590	SEAL, TRANSMISSION	4.020
SEAL, PROPELLER SHAFT REAR SUPPORT YOKE LINK	5.442	SEAL, TRANSMISSION SPEEDOMETER DRIVEN GEAR	4.338
SEAL, PROPELLER SHAFT UNIVERSAL JOINT COMPANION (AXLE END)	5.545	SEAL, TURBO CARBURETOR BOOST PRESSURE OR LIMIT	3.374
SEAL, RADIATOR Baffle AND DEFLECTOR	1.274	SEAL, TURBO FLUID & WATER	3.372
SEAL, RADIATOR CORE SUPPORT	1.270	SEAL, WATER PUMP	1.123
SEAL, RADIATOR CORE SUPPORT TIE BAR	1.271	SEAT, CLUTCH RELEASE EQUALIZER	0.851
SEAL, RADIATOR FAN SHROUD	1.277	SEAT, CLUTCH RELEASE LEVER CONN. ROD	0.793
SEAL, RADIATOR GRILLE	1.266	SEAT, HEATER	8.858
SEAL, REAR AXLE SHAFT INNER OIL	5.822	SEAT, MASTER BRAKE CYLINDER	4.661
SEAL, REAR QUARTER PANEL WHEEL OPENING PANEL	8.177	SEAT, REAR SPRING	7.545
SEAL, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778	SEAT, STEERING RELAY ROD BALL STUD	6.874
SEAL, REFRIGERANT CONDENSER	9.190	SEAT, STEERING SHAFT	6.521
SEAL, STARTING MOTOR DRIVE HOUSING (WITH BUSHING)	2.085	SEAT, TRANSMISSION CLUTCH	4.164
SEAL, STEERING COLUMN ATTACHING	6.760	SEAT, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.233
SEAL, STEERING COLUMN FLOOR	6.758	SEAT, TRANSMISSION OIL CONTROL VALVE BODY	4.265
SEAL, STEERING GEAR HOUSING END	6.806	SEAT, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216
SEAL, STEERING GEAR HOUSING END COVER	6.825	SECTOR, IGNITION SWITCH WARNING OR LOCK	2.195
SEAL, STEERING GEAR PITMAN SHAFT	6.855	SECTOR, STEERING SHAFT ANTI-THEFT	6.500
SEAL, STEERING IDLER ARM	6.898	SECTOR, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070
SEAL, STEERING OIL PUMP DRIVE SHAFT OIL	6.617	SELECTOR, CAR HEATER	8.845
SEAL, STEERING OIL PUMP	6.635	SELECTOR, COLD AIR DISTRIBUTION	9.257
SEAL, STEERING RELAY ROD	6.886	SENSOR, AIR CONDITIONING CONTROL	9.275
SEAL, STEERING SHAFT CONNECTING	6.525	SENSOR, CARBURETOR AIR CLEANER	3.415
SEAL, STEERING SHAFT	6.519	SENSOR, WHEEL LOCK CONTROL SENSOR	4.710
SEAL, STEERING TIE ROD END	6.242	SEPARATOR, EVAPORATIVE EMISSION SYSTEM	3.120
SEAL, STEERING TIE ROD	6.230	SERVO, AIR CONDITIONING CONTROL	9.275
SEAL, SUPERLIFT SHOCK ABSORBER (MANUAL FILL)	7.346	SERVO, CRUISE CONTROL REGULATOR	3.887
SEAL, TAIL PIPE OR RESONATOR MOUNTING	3.706	SET SCREW, FLAT POINT	8.975
SEAL, THROTTLE ROD	3.425	SET SCREW, MASTER BRAKE PEDAL	4.626
SEAL, TRANSMISSION CASE	4.162	SET SCREW, OVAL POINT	8.975
SEAL, TRANSMISSION CASE FRONT COVER	4.124	SET SCREWS, CUP POINT	8.975
SEAL, TRANSMISSION CLUTCH	4.166	SET SCREW, TRANSMISSION HAND SHIFT LEVER	4.008
SEAL, TRANSMISSION CONTROL	4.057	SET SCREW, TRANSMISSION SHIFT INDICATOR	4.022
SEAL, TRANSMISSION FLOOR SHIFT	4.047	SHACKLE, REAR LEAF SPRING	7.523
SEAL, TRANSMISSION FLOOR SHIFT	4.015	SHAFT, ACCELERATOR PEDAL	3.454
SEAL, TRANSMISSION FRONT UNIT TORUS	4.155	SHAFT, AIR CONDITIONING CONTROL	9.275
SEAL, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228	SHAFT ASSY., CLUTCH RELEASE	0.852
SEAL, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.229	SHAFT ASSY., ENGINE VALVE ROCKER	0.353
SEAL, TRANSMISSION GOVERNOR	4.256	SHAFT ASSY., PROPELLER (COMPLETE WITH JOINTS & FRONT YOKE)	5.544
SEAL, TRANSMISSION HAND SHIFT LEVER	4.008	SHAFT ASSY., REAR AXLE	5.420
SEAL, TRANSMISSION INNER CONTROL LEVER	4.282	SHAFT & BEARING, WATER PUMP	1.105
SEAL, TRANSMISSION INTERMEDIATE CLUTCH ACCUMULATOR PISTON COVER	4.227	SHAFT, CARBURETOR CHOKE	3.752
SEAL, TRANSMISSION MAIN DRIVE GEAR BEARING OIL	4.354	SHAFT, COLD AIR	9.264
SEAL, TRANSMISSION MAIN TORUS	4.118	SHAFT, COLD AIR DISTRIBUTION	9.257
SEAL, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128	SHAFT, CRUISE CONTROL REGULATOR	3.885
SEAL, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216	SHAFT, DIFFERENTIAL & FINAL DRIVE PINION GEAR	5.517
SEAL, TRANSMISSION OIL CONTROL VALVE BODY	4.265	SHAFT, ENGINE OIL PUMP	1.639
SEAL, TRANSMISSION OIL LEVEL & FILLER	4.133	SHAFT, FINAL DRIVE	5.515
SEAL, TRANSMISSION OIL PAN	4.197	SHAFT, FRONT DRIVE	6.055
SEAL, TRANSMISSION OIL PUMP	4.226	SHAFT, FRONT WHEEL LOWER CONTROL ARM	6.170
SEAL, TRANSMISSION OIL PUMP INLET PIPE	4.223	SHAFT, FRONT WHEEL UPPER CONTROL ARM	6.178
SEAL, TRANSMISSION	4.460	SHAFT, HEADLAMP HOUSING OR GRILLE	2.765
SEAL, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275	SHAFT, HEATER BLOWER MOTOR	8.857
SEAL, TRANSMISSION REAR SERVO & ACCUMULATOR PISTON	4.242	SHAFT, HEATER CONTROL	8.852
SEAL, TRANSMISSION REAR EXTENSION	4.318	SHAFT, HEATER	8.858
SEAL, TRANSMISSION SHIFT SHAFT	4.313	SHAFT, IGNITION DISTRIBUTOR	2.372
SEAL, TRANSMISSION SHIFT LEVER	4.046	SHAFT, IGNITION SWITCH WARNING OR LOCK	2.195
SEAL, TRANSMISSION SHIFT TUBE OR SHAFT	4.027	SHAFT, INSTRUMENT CLUSTER SPEED WARNING	9.762
SEAL, TRANSMISSION SHIFT INDICATOR	4.022	SHAFT & LEVER, HEATER	9.786
		SHAFT, MASTER BRAKE PEDAL MOUNTING	4.634
		SHAFT, OUTSIDE AIR	9.789

SHAFT PKG., ENGINE INTAKE & EXHAUST VALVE ROCKER	0.333	SHIELD, TRANSMISSION REAR EXTENSION	4.318
SHAFT PKG., FRONT DRIVE	6.055	SHIELD, TRANSMISSION SHIFT CONTROL LEVER	4.067
SHAFT PKG., UPPER CONTROL ARM SHAFT	6.164	SHIELD, TRANSMISSION SHIFT INDICATOR	4.022
SHAFT, REFRIGERANT COMPRESSOR	9.170	SHIELD, TRANSMISSION SUPPORT	4.083
SHAFT, RIDE STABILIZER	7.241	SHIELD, TURN SIGNAL SWITCH ACTUATOR	2.906
SHAFT & SEAL, HEATER	9.782	SHIFTER, TRANSMISSION FLOOR SHIFT	4.047
SHAFT, STARTING MOTOR DRIVE SHIFT LEVER	2.108	SHIFTER, TRANSMISSION HAND SHIFT LOWER (FLOOR SHIFT TYPE TRANS.)	4.004
SHAFT, STEERING GEAR PITMAN SHAFT	6.850	SHIM, ACCELERATOR PEDAL	3.454
SHAFT, STEERING OIL PUMP DRIVE	6.614	SHIM, BODY TO FRAME	9.023
SHAFT, STEERING SHAFT ANTI-THEFT	6.500	SHIM, COMPRESSOR MOUNTING	9.171
SHAFT, STEERING SHAFT	6.524	SHIM, COMPRESSOR PULLEY	9.181
SHAFT, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070	SHIM, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511
SHAFT, TRANSMISSION DETENT OR INTERLOCK	4.311	SHIM, DIFFERENTIAL OR FINAL DRIVE SIDE BEARING ADJUSTING	5.537
SHAFT, TRANSMISSION FRONT	4.161	SHIM, DIFFERENTIAL OR FINAL DRIVE PINION BEARING	5.453
SHAFT, TRANSMISSION INPUT	4.123	SHIM, DIFFERENTIAL REAR PINION BEARING	5.460
SHAFT, TRANSMISSION MAIN	4.172	SHIM, ENGINE CYLINDER HEAD OR VALVE GRIND	0.289
SHAFT, TRANSMISSION MAIN DRIVE	4.403	SHIM, ENGINE CYLINDER HEAD (LESS VALVES)	0.269
SHAFT, TRANSMISSION	4.428	SHIM, FRONT BUMPER BAR ATTACHING	7.836
SHAFT, TRANSMISSION PARKING BRAKE	4.290	SHIM, FRONT COIL SPRING	7.420
SHAFT, TRANSMISSION PARKING BRAKE	4.294	SHIM, FRONT FENDER	8.143
SHAFT, TRANSMISSION PLANETARY	4.175	SHIM, FRONT WHEEL UPPER CONTROL ARM	6.178
SHAFT, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275	SHIM, HEADLAMP HOUSING OR GRILLE	2.765
SHAFT, TRANSMISSION REVERSE IDLER GEAR	4.433	SHIM, HOOD PANEL	8.024
SHAFT, TRANSMISSION SHIFTING	4.309	SHIM, INTAKE MANIFOLD	3.270
SHAFT, TRANSMISSION SHIFT CONTROL	4.025	SHIM PKG., CALIPER PISTON	4.667
SHAFT, TRANSMISSION SUN GEAR	4.161	SHIM PKG., DIFFERENTIAL OR FINAL DRIVE PINION BEARING	5.453
SHAFT, UNIVERSAL JOINT SLEEVE YOKE GREASE	5.441	SHIM PKG., DIFFERENTIAL OR FINAL DRIVE SIDE BEARING ADJUSTING	5.537
SHAFT, WINDSHIELD DEFROSTER	9.779	SHIM PKG., DIFFERENTIAL REAR PINION BEARING	5.460
SHEDDER, ENGINE CRANKSHAFT FRONT OIL SHELL & STUD, ENGINE OIL FILTER	0.211	SHIM PKG., REAR LEAF SPRING	7.503
SHELL, TRANSMISSION PLANETARY	1.837	SHIM PKG., STEERING GEAR PITMAN SHAFT LASH ADJUSTER	6.828
SHIELD, BACK-UP LAMP ACTUATING	4.175	SHIM, PROPELLER SHAFT CENTER BEARING	5.598
SHIELD, CARBURETOR IDLE VENT	2.698	SHIM, RADIATOR CORE SUPPORT	1.270
SHIELD, CARBURETOR TO MANIFOLD	3.852	SHIM, RADIATOR FAN SHROUD	1.277
SHIELD, CHOKE AIR OR HEATER	3.726	SHIM, REAR BUMPER ATTACHING	7.836
SHIELD, COLD AIR	3.603	SHIM, REAR SUSPENSION ARM	5.383
SHIELD, COMPRESSOR MOUNTING	9.264	SHIM, RIDE STABILIZER SHAFT	7.242
SHIELD, CRUISE CONTROL SELECTOR	9.171	SHIM, STABILIZER RIDE SHAFT (RUBBER)	7.243
SHIELD, ENGINE INTAKE & EXHAUST VALVE OIL	3.883	SHIM, STARTING MOTOR ATTACHING	2.077
SHIELD, ENGINE MOUNT ATTACHING	0.308	SHIM, STEERING SHAFT CONNECTING	6.525
SHIELD, ENGINE R.P.M. (INST. PANEL CLUSTER)	0.029	SHIM, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012
SHIELD, ENGINE TO FRAME FILLER	9.750	SHIM, TRANSMISSION MOUNTING	4.085
SHIELD, EXHAUST PIPE TO MANIFOLD	8.112	SHIM, TRANSMISSION SHIFT TUBE LEVER	4.032
SHIELD, FORCED AIR VENTILATION	3.611	SHOCK ABSORBER ASSY., FRONT (WITH ATTACHING PARTS) (EXC. FIRM RIDE)	7.345
SHIELD, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	9.790	SHOCK ABSORBER ASSY., REAR (WITH ATTACHING PARTS) (STANDARD LOAD-EXC. FIRM RIDE)	7.345
SHIELD, FRONT BUMPER GRAVEL	5.002	SHOCK ABSORBER, STEERING LINKAGE SHOCK ABSORBER	6.865
SHIELD, FRONT PARKING & SIGNAL LAMP	7.833	SHOCK PKG., FRONT SHOCK ABSORBER (FIRM RIDE)	7.345
SHIELD, FUEL TANK (INST. PANEL UNIT)	2.589	SHOCK PKG., REAR SHOCK ABSORBER (FIRM RIDE)	7.345
SHIELD, FUEL TANK STONE	3.108	SHOCK, REAR SUPERLIFT SHOCK (MANUAL OR AUTOMATIC FILL)	7.345
SHIELD, HEATER CONTROL	3.015	SHOE, AIR INJECTION REACTOR PUMP	3.665
SHIELD, INSTRUMENT CLUSTER	8.852	SHOE ASSY., DRUM BRAKE (STD. SIZE FOR 2 REAR WHEELS)	5.017
SHIELD, INSTRUMENT CLUSTER	9.744	SHOE ASSY., DRUM BRAKE (STD. SIZE FOR 2 FRONT WHEELS)	5.017
SHIELD, INSTRUMENT CLUSTER	9.745	SHOE ASSY., DRUM BRAKE (.030 OVERSIZE FOR 2 FRONT WHEELS)	5.017
SHIELD, NEUTRAL STARTING SWITCH	4.054	SHOE ASSY., DRUM BRAKE (.030 OVERSIZE FOR 2 REAR WHEELS)	5.017
SHIELD PKG., CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	SHOE PKG., DISC BRAKE (FRONT 2 WHEELS)	5.017
SHIELD PKG., IGNITION DISTRIBUTOR	2.393	SHOE, TILT WHEEL	6.514
SHIELD, RADIATOR FAN SHROUD	1.277	SHOE, TRANSMISSION SHIFTING	4.303
SHIELD, REAR AXLE HOUSING OR FINAL DRIVE	5.398		
SHIELD, REAR LAMP STONE (INNER—RUBBER)	2.664		
SHIELD, STEERING COLUMN ATTACHING	6.760		
SHIELD, STEERING SHAFT CONNECTING	6.525		
SHIELD, STOP & TAIL LAMP	2.689		
SHIELD, TAIL PIPE EXHAUST	3.705		
SHIELD, TILT WHEEL	6.514		
SHIELD, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275		

SHROUD ASSY., CARBURETOR AIR CLEANER	3.402	SNAP RING, COMPRESSOR	9.175
SHROUD, EXHAUST MANIFOLD HOT AIR	3.602	SNAP RING, ENGINE CRANKSHAFT CLUTCH GEAR PILOT	0.649
SHROUD, EXHAUST PIPE TO MANIFOLD	3.611	SNAP RING, HEADLAMP HOUSING OR GRILLE	2.765
SHROUD, RADIATOR FAN SHROUD	1.277	SNAP RING, MASTER BRAKE CYL. PISTON	4.656
SHROUD, STEERING COLUMN	6.518	SNAP RING PKG., TRANSMISSION OVERHAUL	4.005
SHROUD, STEERING WHEEL SPOKE	6.512	SNAP RING, POWER BRAKE AIR VALVE	4.918
SHROUD, STOP & TAIL LAMP	2.681	SNAP RING, PROPELLER SHAFT CENTER	5.600
SHROUD, TRANSMISSION HAND SHIFT LEVER	4.010	SNAP RING, RETAINER	8.934
SILENCER, POWER BRAKE AIR CLEANER	4.913	SNAP RING, STARTING MOTOR DRIVE SHIFT LEVER	2.108
SLEEVE, ACCELERATOR PEDAL	3.454	SNAP RING, STEERING GEAR PITMAN SHAFT OIL SEAL RETAINING	6.856
SLEEVE, AIR CONDITIONING CONTROL	9.275	SNAP RING, STEERING GEAR HOUSING END COVER RETAINING	6.824
SLEEVE, AIR INJECTION REACTOR	3.675	SNAP RINGS, TRANSMISSION RETAINER & SNAP	4.128
SLEEVE, BRAKE ADJUSTING	5.103	SNAP RING, THROTTLE CONTROL	3.463
SLEEVE, CAR BUMPER JACK	8.820	SNAP RING, TRANSMISSION DRIVE & DRIVEN	4.131
SLEEVE, CLOCK	9.772	SNAP RING, TRANSMISSION FRONT UNIT TORUS	4.155
SLEEVE, CLUTCH PEDAL ATTACHING	0.837	SNAP RING, TRANSMISSION SHIFT LEVER	4.046
SLEEVE, COLD AIR DISTRIBUTION	9.257	SNAP RING, TRANSMISSION SHIFT CONTROL RELAY	4.042
SLEEVE, COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225	SNAP RING, TRANSMISSION REVERSE CLUTCH	4.189
SLEEVE, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	SNAP RING, TRANSMISSION MAIN	4.172
SLEEVE, CRUISE CONTROL SELECTOR	3.883	SNAP RING, TRANSMISSION REAR UNIT SUN	4.172
SLEEVE, ENGINE OIL COOLER	1.540	SNAP RING, TRANSMISSION REAR CLUTCH	4.184
SLEEVE, EVAPORATOR TO COMPRESSOR (SUCTION LINE)	9.238	SNAP RING, TRANSMISSION CLUTCH	4.164
SLEEVE, FUEL LINE BALL	8.963	SNAP RING, TRANSMISSION	4.307
SLEEVE, HORN	2.819	SNAP RING, TRANSMISSION PARKING BRAKE	4.290
SLEEVE, IGNITION DISTRIBUTOR	2.372	SNAP RING, TRANSMISSION REAR	4.317
SLEEVE, IGNITION DISTRIBUTOR BREAKER	2.385	SNAP RING, TRANSMISSION 1ST OR REVERSE GEAR	4.419
SLEEVE, IGNITION LOCK	2.188	SNAP RING, TRANSMISSION REVERSE IDLER GEAR RETAINING	4.435
SLEEVE, INSTRUMENT CLUSTER	9.744	SNAP RING, TRANSMISSION REAR SERVO PISTON SPRING	4.247
SLEEVE, INSTRUMENT CLUSTER SPEED WARNING	9.762	SNAP RING, TRANSMISSION SERVO TRIMMER & ACCUMULATOR	4.230
SLEEVE, LIGHT SWITCH CONTROL	2.487	SNAP RING, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.233
SLEEVE, MASTER BRAKE PEDAL	4.626	SOCKET, BRAKE SHOE ADJUSTING SCREW	5.111
SLEEVE, RECEIVER TO EVAPORATOR (LIQUID LINE)	9.231	SOCKET, CLOCK	9.772
SLEEVE, REFRIGERANT PIPE	9.242	SOCKET, CORNERING LAMP	2.585
SLEEVE, STEERING COLUMN ATTACHING	6.760	SOCKET, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
SLEEVE, STEERING TIE ROD	6.232	SOCKET, INSTRUMENT CLUSTER	9.744
SLEEVE, SUPERLIFT SHOCK ABSORBER (MANUAL FILL)	7.346	SOCKET, INSTRUMENT CLUSTER LAMP BULB	9.765
SLEEVE, SUPERLIFT SHOCK ABSORBER COMPRESSOR MOUNTING (AUTOMATIC FILL)	7.452	SOCKET, INSTRUMENT CLUSTER LAMP BULB	9.746
SLEEVE, THROTTLE CONTROL	3.463	SOCKET, PARKING BRAKE SIGNAL	4.589
SLEEVE, THROTTLE ROD	3.425	SOCKET PKG., STOP & TAIL LAMP	2.694
SLEEVE, TRANSMISSION HAND SHIFT LEVER	4.008	SOCKET, STOP & TAIL LAMP	2.694
SLEEVE, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216	SOCKET, TRANSMISSION SHIFT INDICATOR	4.022
SLEEVE, TRANSMISSION OIL DELIVERY (WITH BUSHING)	4.179	SOCKET & WIRE ASSY., TAIL LAMP	2.714
SLEEVE, TRANSMISSION OIL LEVEL & FILLER	4.133	SOCKET & WIRE, BACK-UP LAMP	2.697
SLEEVE, TRANSMISSION OIL CONTROL VALVE BODY	4.265	SOCKET & WIRE, HAZARD WARNING OR MARKER LAMP	2.575
SLEEVE, TRANSMISSION	4.307	SOCKET & WIRE, IGNITION SWITCH	2.198
SLEEVE, TRANSMISSION REAR EXTENSION	4.318	SOCKET & WIRE, PARKING LAMP WIRING	2.596
SLEEVE, TRANSMISSION SHIFT CONTROL ROD	4.037	SOCKET & WIRE, STOP & TAIL LAMP	2.694
SLEEVE, TRANSMISSION SHIFT TUBE LEVER	4.032	SOLDER, BODY MAINTENANCE	8.800
SLEEVE, TRANSMISSION SPEEDOMETER DRIVEN GEAR	4.338	SOLENOID, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
SLEEVE, TRANSMISSION 1ST OR REVERSE GEAR	4.419	SOLENOID, ENGINE EXHAUST EMISSION CONTROL	2.408
SLEEVE, WHEEL CYLINDER OR CALIPER ATTACHING	4.665	SOLENOID, THROTTLE RETURN OR SLOW IDLE	3.440
SLIDE, CRUISE CONTROL REGULATOR	3.885	SOLENOID, TRANSMISSION OIL CONTROL VALVE BODY	4.265
SLIDE, TRANSMISSION SHIFT INDICATOR	4.022	SOLENOID, WHEEL LOCK CONTROL	4.720
SLINGER, DELCOTRON DRIVE END BEARING	2.307	SOLVENTS, SERVICE MAINTENANCE	8.800
SLINGER, ENGINE CRANKSHAFT OIL	0.648		
SLINGER, FRONT DRIVE AXLE SHAFT	6.056		
SLINGER, PROPELLER SHAFT CENTER BEARING	5.601		
SLINGER, TRANSMISSION MAIN DRIVE GEAR OIL	4.374		
SNAP RING, ACCELERATOR PEDAL	3.454		

SPACER, BATTERY	2.335	SPACER, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216
SPACER, BRAKE BALANCING & METERING VALVE	4.690	SPACER, TRANSMISSION PARKING BRAKE	4.294
SPACER, CLUTCH PEDAL PIVOT BOLT	0.831	SPACER, TRANSMISSION PLANETARY CARRIER	4.176
SPACER, COLD AIR	9.264	SPACER, TRANSMISSION SHIFT TUBE LEVER	4.032
SPACER, COMPRESSOR DISCHARGE HOSE	9.226	SPACER, TRANS. PILOT BEARING	4.353
SPACER, COMPRESSOR MOUNTING	9.171	SPARK PLUG ASSY., IGNITION	2.270
SPACER, COMPRESSOR PULLEY	9.181	SPEAKER ASSY., RADIO FRONT	9.650
SPACER, COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225	SPEAKER PKG., RADIO REAR SEAT SPEAKER	9.665
SPACER, CRUISE CONTROL REGULATOR	3.885	SPEAKER, RADIO REAR SEAT SPEAKER	9.665
SPACER, DELCOTRON MOUNTING	2.277	SPHERE PKG., TILT WHEEL	6.514
SPACER, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511	SPHERE, STEERING SHAFT CONNECTING	6.525
SPACER, DIFFERENTIAL OR FINAL DRIVE PINION BEARING	5.453	SPHERE, TILT WHEEL	6.514
SPACER, DIFFERENTIAL OR FINAL DRIVE SIDE BEARING ADJUSTING	5.537	SPIDER, FRONT DRIVE AXLE	6.060
SPACER, ENGINE CRANKSHAFT	0.659	SPINDLE, REAR AXLE	5.806
SPACER, ENGINE INTAKE & EXHAUST VALVE SPRING	0.309	SPINNER, WHEEL DISC (COMPONENT PARTS)	5.871
SPACER, ENGINE MOUNT ATTACHING	0.029	SPLICER PKG., COMPRESSOR TO CONDENSER OR MUFFLER (HIGH PRESSURE)	9.225
SPACER, ENGINE MOUNT ATTACHING	0.002	SPOKE, WHEEL DISC (COMPONENT PARTS)	5.871
SPACER, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750	SPOT REMOVER, INTERIOR SERVICE MAINTENANCE	8.800
SPACER, ENGINE VALVE ROCKER SHAFT	0.349	SPRAG ASSY., TRANSMISSION INTERMEDIATE CLUTCH	4.167
SPACER, EXHAUST PIPE TO MANIFOLD	3.613	SPRAG ASSY., TRANSMISSION LOW SPEED	4.180
SPACER, FINAL DRIVE PINION GEAR OR SHAFT	5.513	SPRING, ACCELERATOR RETURN	3.459
SPACER, FLUID METERING VALVE	3.366	SPRING, AIR CONDITIONING CONTROL	9.275
SPACER, FRONT BUMPER BAR ATTACHING	7.836	SPRING, AIR CONDITIONING	9.277
SPACER, FRONT COIL SPRING	7.420	SPRING, AIR INJECTION REACTOR PUMP	3.665
SPACER, FUEL TANK MOUNTING	3.023	SPRING, AIR INJECTION REACTOR PUMP	3.672
SPACER, HEATER HOT WATER	8.846	SPRING, BRAKE DRUM COIL	5.810
SPACER, HEATER MOTOR MOUNTING	8.856	SPRING, BRAKE HOSE	4.681
SPACER, HOOD HINGE ATTACHING	8.016	SPRING, BRAKE SHOE ADJUSTING	5.107
SPACER, HORN	2.819	SPRING, BRAKE SHOE HOLD-DOWN	5.043
SPACER, INSTRUMENT CLUSTER	9.744	SPRING, BRAKE SHOE RETRACTION	5.026
SPACER, MANUAL ANTENNA	9.647	SPRING, CARBURETOR FAST IDLE	3.766
SPACER, MASTER BRAKE CYLINDER	4.648	SPRING, CARBURETOR FLOAT LEVER HINGE	3.747
SPACER, MASTER BRAKE PEDAL MOUNTING	4.634	SPRING, CARBURETOR FUEL INLET	3.740
SPACER, PARKING BRAKE SIGNAL	4.589	SPRING, CARBURETOR IDLE ADJUSTING NEEDLE	3.823
SPACER PKG., TRANSMISSION COUNTERSHAFT GEAR OR BEARING	4.423	SPRING, CARBURETOR IDLE VENT	3.852
SPACER, POWER ANTENNA	9.647	SPRING, CARBURETOR METERING ROD	3.810
SPACER, RADIATOR FAN ATTACHING	1.064	SPRING, CARBURETOR OUTSIDE AIR INDUCTION	3.417
SPACER, RADIATOR FILLER CAP (PRESSURE TYPE)	1.203	SPRING, CARBURETOR POWER PISTON	3.859
SPACER, RADIATOR HOSE	1.166	SPRING, CARBURETOR PUMP CONNECTOR	3.843
SPACER, RADIO	9.649	SPRING, CARBURETOR PUMP	3.841
SPACER, REAR AXLE HOUSING	5.395	SPRING, CARBURETOR PUMP DISCHARGE CHECK	3.825
SPACER, REAR AXLE VIBRATION	5.394	SPRING, CARBURETOR THROTTLE RETURN	3.763
SPACER, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778	SPRING, CARBURETOR THROTTLE LEVER, VALVE OR SLOW IDLE STOP	3.761
SPACER, RECEIVER TO EVAPORATOR (LIQUID LINE)	9.231	SPRING, CARBURETOR VACUUM BREAK CONTROL	3.765
SPACER, SPEEDOMETER	9.761	SPRING, CLUTCH PEDAL ATTACHING	0.837
SPACER, STABILIZER RIDE SHAFT (RUBBER)	7.243	SPRING, CLUTCH PEDAL RETURN	0.844
SPACER, STEERING COLUMN ATTACHING	6.760	SPRING, CLUTCH PRESSURE PLATE RETRACTING SPRING	0.864
SPACER, STEERING COLUMN	6.518	SPRING, CLUTCH RELEASE EQUALIZER	0.851
SPACER, STEERING LINKAGE SHOCK ABSORBER	6.865	SPRING, CLUTCH RELEASE LEVER CONN. ROD	0.793
SPACER, STEERING OIL PUMP HOSE	6.672	SPRING, CLUTCH RELEASE UPPER ROD	0.854
SPACER, STEERING OIL PUMP MOUNTING	6.606	SPRING, COMPRESSOR CLUTCH	9.188
SPACER, STEERING RELAY ROD BALL SEAT	6.883	SPRING, CRUISE CONTROL REGULATOR	3.885
SPACER, STEERING SHAFT	6.521	SPRING, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
SPACER, TAIL PIPE OR RESONATOR MOUNTING	3.706	SPRING, DIFFERENTIAL CLUTCH & SIDE GEAR	5.511
SPACER, THROTTLE ROD	3.425	SPRING, DIFFERENTIAL OR FINAL DRIVE SIDE	5.528
SPACER, TRANSMISSION CASE	4.162	SPRING, ENGINE CAMSHAFT THRUST	0.533
SPACER, TRANSMISSION COUNTERSHAFT GEAR	4.426	SPRING, ENGINE INTAKE & EXHAUST VALVE	0.303
SPACER, TRANSMISSION HAND SHIFT LEVER	4.008	SPRING, ENGINE OIL PUMP PRESSURE	1.609
SPACER, TRANSMISSION INPUT RING	4.158	SPRING, ENGINE TIMING CHAIN	0.724
SPACER, TRANSMISSION	4.115	SPRING, ENGINE VALVE ROCKER SHAFT	D.376
SPACER, TRANSMISSION MOUNTING	4.085	SPRING, EVAPORATIVE EMISSION SYSTEM	3.130
SPACER, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128		

SPRING, EXHAUST MANIFOLD HEAT CDNTROL THERMOSTAT	3.641	SPRING, STEERING GEAR HYDRAULIC VALVE	6.552
SPRING, EXHAUST PIPE TO MANIFOLD	3.613	SPRING, STEERING OIL PUMP	6.612
SPRING, FLUID METERING VALVE	3.366	SPRING, STEERING RELAY ROD	6.876
SPRING, FRONT SUSPENSION COIL (STANDARD CAR)	7.412	SPRING, STEERING SHAFT ANTI-THEFT	6.500
SPRING, FRONT SUSPENSION COIL (EXC. AIR CONDITIONING)	7.412	SPRING, STEERING SHAFT CONNECTING	6.525
SPRING, FRONT SUSPENSION COIL (WITH AIR CONDITIONING)	7.412	SPRING, STEERING SHAFT	6.521
SPRING, FUEL TANK FILLER DOOR	8.209	SPRING, SUCTION THROTTLING (P.O.A.)	9.198
SPRING, GENERATOR BRUSH	2.286	SPRING, THROTTLE CONTROL	3.463
SPRING, HEADLAMP DIMMER	2.459	SPRING, TILT WHEEL	6.514
SPRING, HEADLAMP DOOR RETAINING	2.729	SPRING, TRANSMISSION CASE	4.162
SPRING, HEADLAMP RIM SEAL RETAINING	2.746	SPRING, TRANSMISSION CLUTCH	4.164
SPRING, HEADLAMP SEALED BEAM UNIT ADJUSTING	2.737	SPRING, TRANSMISSION CONTROL SWITCH	4.060
SPRING, HEATER	9.786	SPRING, TRANSMISSION DETENT OR INTERLOCK	4.311
SPRING, HEATER BLOWER MOTOR	8.857	SPRING, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.233
SPRING, HEATER	8.858	SPRING, TRANSMISSION FRONT UNIT TORUS	4.155
SPRING, HEAVY DUTY FRONT SUSPENSION COIL (WITH AIR CONDITIONING)	7.412	SPRING, TRANSMISSION GOVERNOR	4.256
SPRING, HEAVY DUTY FRONT SUSPENSION COIL (EXC. AIR CONDITIONING)	7.412	SPRING, TRANSMISSION HAND SHIFT LEVER	4.008
SPRING, HOOD HINGE	8.013	SPRING, TRANSMISSION LOW SPEED	4.180
SPRING, HOOD RELEASE	8.080	SPRING, TRANSMISSION MAIN	4.121
SPRING, HORN	2.819	SPRING, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216
SPRING, IGNITION DISTRIBUTOR ADVANCE WEIGHT	2.389	SPRING, TRANSMISSION OIL CONTROL VALVE BODY	4.265
SPRING, IGNITION DISTRIBUTOR BREAKER	2.385	SPRING, TRANSMISSION OIL PUMP	4.226
SPRING, IGNITION SWITCH WARNING OR LOCK	2.195	SPRING, TRANSMISSION OVER-RUN CLUTCH	4.165
SPRING, MASTER BRAKE PEDAL RETURN	4.639	SPRING, TRANSMISSION PARKING LOCK PAWL RETURN	4.295
SPRING, MASTER CYL. PISTON RETURN	4.655	SPRING, TRANSMISSION PARKING BRAKE MANUAL DETENT	4.293
SPRING NUT, CRUISE CONTROL REGULATOR	3.885	SPRING, TRANSMISSION PARKING BRAKE	4.290
SPRING NUT, MASTER BRAKE CYLINDER	4.648	SPRING, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275
SPRING NUT, RADIATOR CORE SUPPORT	1.272	SPRING, TRANSMISSION REAR SERVO & ACCUMULATOR PISTON	4.246
SPRING NUT, REAR PRIMARY BUMPER BAR	7.831	SPRING, TRANSMISSION REVERSE CLUTCH	4.189
SPRING NUT, REAR WHEEL & BRAKE DRUM TO AXLE SHAFT FLANGE	5.812	SPRING, TRANSMISSION REVERSE OIL LINE CHECK VALVE (IN CASE)	4.106
SPRING, OUTSIDE AIR	9.789	SPRING, TRANSMISSION SERVO TRIMMER & ACCUMULATOR	4.230
SPRING, PARKING BRAKE FRAME LEVER RETURN	4.760	SPRING, TRANSMISSION SHIFT INDICATOR	4.022
SPRING, PARKING BRAKE LEVER RETURN	4.597	SPRING, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
SPRING, PARKING BRAKE SIGNAL	4.589	SPRING, TRANSMISSION SHIFT LEVER	4.046
SPRING, PARKING BRAKE STRUT TO SHOE	5.151	SPRING, TRANSMISSION SHIFT CONTROL RELAY	4.042
SPRING PKG., BRAKE SHOE HOLD DOWN (FOR ONE WHEEL)	5.043	SPRING, TRANSMISSION STATOR CONTROL	4.122
SPRING PKG., BRAKE SHOE HOLD DOWN (FOR TWO WHEELS)	5.043	SPRING, TRANSMISSION SYNCHRONIZING CLUTCH	4.384
SPRING PKG., BRAKE SHOE RETRACTION (FOR ONE WHEEL)	5.026	SPRING, TRANSMISSION SYNCHRONIZER	4.413
SPRING PKG., BRAKE SHOE RETRACTION (FOR TWO WHEELS)	5.026	SPRING, TRANSMISSION 1ST OR REVERSE GEAR	4.419
SPRING, POLICE FRONT SUSPENSION COIL (WITH AIR CONDITIONING)	7.412	SPRING, TURN SIGNAL	2.895
SPRING, POLICE FRONT SUSPENSION COIL (EXC. AIR CONDITIONING)	7.412	SPRING, TURN SIGNAL SWITCH CANCELLING	2.896
SPRING, POWER BRAKE AIR VALVE	4.918	SPRING, TURN SIGNAL SWITCH ACTUATOR	2.906
SPRING, POWER BRAKE POWER PISTON	4.924	SPRING, TURN SIGNAL SWITCH LEVER	2.910
SPRING, POWER BRAKE REACTION	4.934	SPRING WASHER, CLUTCH PEDAL ATTACHING	0.837
SPRING, RADIATOR HOSE	1.166	SPRING WASHER, CLUTCH RELEASE UPPER ROD	0.854
SPRING, REAR SUSPENSION (LEAF TYPE)	7.503	SPRING WASHER, COMPRESSOR OIL PUMP	9.172
SPRING, REAR SUSPENSION COIL (HEAVY DUTY & TRAILER HAULING)	7.503	SPRING WASHER, CRUISE CONTROL ACTUATING	3.885
SPRING, REAR SUSPENSION COIL (POLICE USAGE)	7.503	SPRING WASHER, CRUISE CONTROL REGULATORY	3.885
SPRING, REAR SUSPENSION (COIL TYPE) (STANDARD LOAD)	7.503	SPRING WASHERS	8.928
SPRING, REAR SUSPENSION (LEAF TYPE)	7.503	SPRING WASHER, THROTTLE CONTROL	3.430
SPRING, REAR SUSPENSION (LEAF TYPE) (EXPORT)	7.503	SPRING WASHER, TRANSMISSION SHIFT CONTROL ROD	4.037
SPRING RETAINER, CLUTCH RELEASE FORK	0.796	SPRING, WHEEL BRAKE CYL. OR CALIPER PISTON	4.669
SPRING & RETAINER, MASTER CYL. PISTON RETURN	4.655	SPRING, WINDSHIELD DEFROSTER	9.779
SPRING, STARTING MOTOR BRUSH	2.053	SPROCKET ASSY., TRANSMISSION DRIVE & DRIVEN	4.131
SPRING, STARTING MOTOR DRIVE SHIFT LEVER	2.108		

STAKE, EVAPORATOR	9.211	STUD, FRONT END PANEL	1.263
STAND PIPE, EVAPORATIVE EMISSION SYSTEM	3.120	STUD, FUEL PUMP MOUNTING	3.901
STATOR ASSY., DELCOTRON	2.310	STUD, FUEL TANK (INST. PANEL UNIT)	3.108
STEM, TIRE VALVE	5.875	STUD, INSTRUMENT PANEL	9.735
STEP, REAR BUMPER STEP	7.875	STUD, INTAKE & EXHAUST MANIFOLD	3.288
STOP, ACCELERATOR PEDAL	3.454	STUD, INTAKE & EXHAUST MANIFOLD	3.275
STOP, CARBURETOR AIR VALVE	3.757	STUD, RADIATOR FAN ATTACHING	1.064
STOP, HAND THROTTLE CONTROL	3.483	STUD, REAR QUARTER PANEL WHEEL OPENING PANEL	8.179
STOP, HEADLAMP CONCEALING GRILLE OR HOUSING	2.775	STUDS	8.981
STOP, HEATER	8.858	STUD, STARTING MOTOR ATTACHING	2.077
STOP, STEERING SHAFT CONNECTING	6.525	STUD, STARTING MOTOR DRIVE SHIFT LEVER	2.108
STOP, THROTTLE CONTROL	3.430	STUD, STEERING OIL PUMP MOUNTING	6.606
STOP, THROTTLE CONTROL	3.463	STUD, STEERING OIL PUMP	6.635
STOP, TILT WHEEL	6.514	STUD, STOP & TAIL LAMP MOUNTING	2.664
STOP, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216	STUD, STOP & TAIL LAMP	2.680
STOVE, CLIMATIC COMBUSTION CONTROL	3.417	STUD, THROTTLE CONTROL	3.463
STOVE, EXHAUST MANIFOLD HOT AIR	3.602	STUD, TRANSMISSION CONTROL SWITCH	4.060
STRAIGHT PLAIN TYPE	8.939	STUD, TRANSMISSION	4.307
STRAINER, CARBURETOR FUEL INLET	3.740	STUD, TRANSMISSION SHIFT CONTROL RELAY	4.042
STRAINER, FUEL PUMP	3.910	STUD, TRANSMISSION SHIFT LEVER	4.046
STRAINER, TRANSMISSION OIL PAN	4.197	STUD, TRANSMISSION	4.103
STRAP, AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670	STUD, VALVE PUSH ROD ADJUSTING (ON ROCKER ARM)	0.429
STRAP, BATTERY & ENGINE GROUND	2.341	SUPERLIFT PKG., REAR HEAVY DUTY LOAD TYPE (MANUAL FILL)	7.345
STRAP, CARBURETOR OUTSIDE AIR INDUCTION	3.417	SUPPORT, ACCELERATOR PEDAL	3.454
STRAP, CORNERING LAMP	2.585	SUPPORT, ACCELERATOR PEDAL FLOOR	3.452
STRAP, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	SUPPORT, AIR CONDITIONING TEMPERATURE & FAN (AT DASH)	9.273
STRAP, FUEL TANK GAUGE	3.107	SUPPORT, AIR INJECTION REACTOR PUMP	3.672
STRAP, FUEL TANK	3.003	SUPPORT ASSY., TRANSMISSION DRIVE & DRIVEN LINK SPROCKET	4.130
STRAP, FUEL TANK MOUNTING	3.022	SUPPORT ASSY., TRANSMISSION CASE	4.162
STRAP, IGNITION DISTRIBUTOR VACUUM	9.717	SUPPORT, BATTERY	2.333
STRAP, INSTRUMENT PANEL	9.735	SUPPORT, BRAKE HOSE	4.681
STRAP, RADIATOR FAN SHROUD	1.277	SUPPORT, CARBURETOR MAIN WELL	3.794
STRAP, RADIO STATIC SUPPRESSION	9.663	SUPPORT, COMPRESSOR DISCHARGE HOSE	9.226
STRAP, STOP & TAIL LAMP	2.694	SUPPORT, COMPRESSOR MOUNTING	9.171
STRAP, SUPERLIFT SHOCK ABSORBER (AUTOMATIC FILL)	7.346	SUPPORT, CRUISE CONTROL REGULATOR	3.885
STRAP, TRANSMISSION CASE AND OR SPROCKET COVER	4.109	SUPPORT, ENGINE FRONT SUPPORT	0.004
STRAP, UNIVERSAL JOINT BEARING & FLANGE	5.586	SUPPORT, ENGINE OIL COOLER	1.540
STRAP, WIRING HARNESS	2.559	SUPPORT, EXHAUST MUFFLER	3.704
STRIKER, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887	SUPPORT, EXHAUST PIPE	3.616
STRIKER, HOOD RELEASE	8.080	SUPPORT, FINAL DRIVE MOUNTING	5.500
STRIP, HORN BUTTON	2.859	SUPPORT, FRONT BUMPER BAR ATTACHING	7.836
STRUT, COMPRESSOR MOUNTING	9.171	SUPPORT, FRONT DRIVE AXLE SHAFT	6.056
STRUT, DELCOTRON MOUNTING	2.277	SUPPORT, FRONT FENDER	8.141
STRUT, FRAME SIDE RAIL FRONT (FRAME HORN)	7.009	SUPPORT, FUEL TANK MOUNTING	3.022
STRUT, PARKING BRAKE OPERATING LEVER	5.150	SUPPORT, FUEL TANK STONE	3.015
STRUT, TRANSMISSION CLUTCH BRAKE BAND	4.251	SUPPORT, HEADLAMP MOUNTING	2.720
STRUT, TRANSMISSION CLUTCH BRAKE BAND	4.252	SUPPORT, HEATER (AT DASH)	8.849
STUD, ACCELERATOR PEDAL FLOOR	3.452	SUPPORT, HOOD REINFORCING	8.022
STUD, ACCELERATOR PEDAL	3.454	SUPPORT, HOOD RELEASE	8.080
STUD, AIR CONDITIONING CONTROL	9.275	SUPPORT, HORN	2.819
STUD, AIR INJECTION REACTOR PUMP	3.655	SUPPORT, LICENSE PLATE MOUNTING	7.800
STUD, BATTERY CABLE OR STRAP	2.343	SUPPORT, OUTSIDE AIR VENTILATING	9.787
STUD, BODY TO FRAME MOUNTING	9.008	SUPPORT, PARKING BRAKE CABLE	4.785
STUD, CARBURETOR AIR CLEANER	3.403	SUPPORT PKG., STARTING MOTOR BRUSH HOLDER	2.052
STUD, CARBURETOR TO MANIFOLD	3.726	SUPPORT, POWER ANTENNA	9.647
STUD, CLUTCH RELEASE EQUALIZER	0.851	SUPPORT, POWER BRAKE POWER CYLINDER	4.922
STUD, CLUTCH RELEASE FORK	0.796	SUPPORT, PROPELLER SHAFT CENTER BEARING	5.598
STUD, COMPRESSOR	3.342	SUPPORT, RADIATOR CORE (COMPLETE ASSEMBLY)	1.270
STUD, CRUISE CONTROL ACTUATING	3.885	SUPPORT, RADIATOR CORE SUPPORT	1.272
STUD, DIFFERENTIAL OR FINAL DRIVE ASSY.	5.506	SUPPORT, RADIATOR CORE (UPPER & LOWER)	1.270
STUD, ENGINE CRANKSHAFT BEARING CAP	0.056	SUPPORT, RADIATOR FAN SHROUD	1.277
STUD, ENGINE MOUNT ATTACHING	0.002	SUPPORT, RADIATOR GRILLE	1.266
STUD, EXHAUST PIPE TO MANIFOLD	3.613	SUPPORT, RADIATOR HOSE	1.166
STUD, FAN BLADE CLUTCH	1.050	SUPPORT, RADIO MOUNTING	9.655
		SUPPORT, RADIO REAR SEAT SPEAKER	9.665
		SUPPORT, REAR BUMPER ATTACHING	7.836
		SUPPORT, REAR QUARTER PANEL WHEEL	

OPENING PANEL	8.179
SUPPORT, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
SUPPORT, REFRIGERANT CONDENSER	9.190
SUPPORT, REFRIGERANT EXPANSION	9.213
SUPPORT, REFRIGERANT RECEIVER	9.195
SUPPORT, RIDE STABILIZER SHAFT	7.242
SUPPORT, STEERING COLUMN ATTACHING	6.760
SUPPORT, STEERING IDLER ARM	6.896
SUPPORT, STEERING OIL PUMP MOUNTING	6.606
SUPPORT, SUPERLIFT SHOCK ABSORBER COMPRESSOR MOUNTING (AUTOMATIC FILL)	7.452
SUPPORT, TAIL PIPE OR RESONATOR MOUNTING	3.706
SUPPORT, TILT WHEEL	6.514
SUPPORT, TORSION BAR	7.105
SUPPORT, TRANSMISSION AUXILIARY COOLER	4.128
SUPPORT, TRANSMISSION HAND SHIFT LEVER	4.010
SUPPORT, TRANSMISSION OIL CONTROL VALVE BODY	4.265
SWITCH, AIR CONDITIONING CONTROL	9.275
SWITCH, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
SWITCH ASSY., ENGINE OIL PRESSURE GAUGE	1.800
SWITCH ASSY., LIGHT CONTROL (LESS KNOB & CONTROL)	2.485
SWITCH ASSY., STARTING MOTOR	2.100
SWITCH ASSY., TRANSMISSION OIL PRESSURE SPARK CONTROL	4.075
SWITCH, BACK-UP LAMP ACTUATING	2.698
SWITCH, CARBURETOR IDLE SPEED-UP	3.820
SWITCH, COMPRESSOR	9.172
SWITCH, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
SWITCH, CRUISE CONTROL SELECTOR	3.883
SWITCH, DISTRIBUTOR VACUUM CONTROL ACTUATING	2.410
SWITCH, ENGINE WATER TEMPERATURE	1.150
SWITCH, FORCED AIR VENTILATION	9.790
SWITCH, HEADLAMP DIMMER	2.459
SWITCH, HEADLAMP OFF-DELAY CONTROL (NIGHT-WATCH)	2.485
SWITCH, HEATER CONTROL	8.852
SWITCH, HORN	2.819
SWITCH, IGNITION LOCK	2.188
SWITCH, IGNITION SWITCH WARNING OR LOCK	2.195
SWITCH, NEUTRAL STARTING SWITCH	4.054
SWITCH, OUTSIDE AIR VENTILATING	9.787
SWITCH, PARKING BRAKE SIGNAL	4.589
SWITCH PKG., COMPRESSOR HEAT SWITCH	9.172
SWITCH, POWER ANTENNA	9.647
SWITCH, RADIO	9.649
SWITCH, RADIO REAR SEAT SPEAKER	9.665
SWITCH, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778
SWITCH, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
SWITCH, REFRIGERANT CONTROL MASTER SWITCH	9.280
SWITCH, STOP LAMP SWITCH	2.447
SWITCH, THROTTLE RETURN OR SLOW IDLE	3.440
SWITCH, TRANSMISSION	4.480
SWITCH, TRANSMISSION CONTROL	4.057
SWITCH, TRANSMISSION VACUUM MODULATOR	4.205
SWITCH, WINDSHIELD DEFROSTER	9.779
SWIVEL, CLUTCH RELEASE ROD	0.787
SWIVEL, CRUISE CONTROL ACTUATING	3.885
SWIVEL, HAND THROTTLE CONTROL	3.483
SWIVEL, THROTTLE ROD	3.425
SWIVEL, TRANSMISSION SHIFT CONTROL ROD	4.037

T

TACHOMETER, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
TANK, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
TANK ASSY., FUEL (LESS GAUGE)	3.001
TANK, FUEL LINE	3.163
TANK, HEADLAMP OR GRILLE	2.760
TANK, HEATER VACUUM	8.850
TANK, POWER BRAKE VACUUM RESERVE	4.902
TANK, TURBO ROCKET FLUID	3.360
TAPE PKG., BODY MAINTENANCE	8.800
TAPE PLAYER PKG., STEREO TAPE PLAYER	9.670
TEE, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
TEE, AIR INJECTION REACTOR	3.680
TEE BOLT, FENDER SIDE MOLDING	8.204
TEE BOLT, FRONT FENDER TRIM	8.147
TEE, CLIMATIC COMBUSTION CONTROL	3.417
TEE, CRANKCASE VENTILATION	1.745
TEE, CRUISE CONTROL ACTUATING	3.885
TEE, DISTRIBUTOR VACUUM HOSE	3.445
TEE, ENGINE OIL COOLER	1.540
TEE, ENGINE OIL FILTER	1.837
TEE, EVAPORATIVE EMISSION SYSTEM	3.130
TEE, FUEL LINE	3.163
TEE, FUEL LINE	8.963
TEE, HEADLAMP OR GRILLE	2.760
TEE, HEATER VACUUM	8.850
TEE, HEATER WATER TEMP. CONTROL	8.848
TEE, IGNITION DISTRIBUTOR VACUUM	9.717
TEE, IGNITION DISTRIBUTOR VACUUM	2.420
TEE, INTAKE MANIFOLD VACUUM	3.278
TEE, POWER BRAKE VACUUM LINE	4.931
TEE, SUPERLIFT SHOCK ABSORBER (AUTOMATIC FILL)	7.346
TEE, SUPERLIFT SHOCK ABSORBER COMPRESSOR	7.447
TEE, THROTTLE RETURN CHECK OR DASHPOT	3.440
TEE, TRANSMISSION VACUUM MODULATOR	4.205
TEE, TURBO CARBURETOR BOOST PRESSURE OR LIMIT	3.374
TEE, TURBO COMPRESSOR	3.344
TEE, VACUUM	7.345
TELL TALE, INSTRUMENT CLUSTER OIL PRESSURE GAUGE	1.803
TEMPLATE, FRONT FENDER	8.130
TERMINAL BOARD, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
TERMINAL, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
TERMINAL PKG., DELCOTRON	2.313
TERMINAL, POWER ANTENNA	9.647
TERMINAL, STARTING MOTOR SWITCH	2.102
TERMINALS, WIRING HARNESS	2.530
TERMINAL WIRE, CLOCK	9.772
THERMOSTAT ASSY., TRANSMISSION OIL CONTROL VALVE BODY	4.265
THERMOSTAT, CARBURETOR CHOKE HOUSING OR T/STAT	3.750
THERMOSTAT, ENGINE WATER TEMPERATURE	1.246
THERMOSTAT, EXHAUST MANIFOLD HEAT CONTROL	3.640
THERMOSTAT, HEATER WATER TEMP. CONTROL	8.848
THINNER, PAINTED BUMPER PAINT	8.800
TIMER, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
TORUS ASSY., TRANSMISSION MAIN	4.121
TORUS ASSY., TRANSMISSION FRONT UNIT TORUS	4.156
TRANSDUCER, AIR CONDITIONING CONTROL	9.275

TRANSDUCER, CRUISE CONTROL	3.885
TRANSDUCER, ENGINE OIL PRESSURE GAUGE	1.800
TRANSFER, FRONT FENDER FINISH TRIM	8.147
TRANSFER, FRONT FENDER	8.132
TRANSFER, REAR QUARTER PANEL WHEEL OPENING PANEL	8.176
TRANSMISSION ASSY., SYNCHROMESH (COMPLETE)	4.003
TRANSMISSION, AUTOMATIC (INC. CONVERTER)	4.003
TRANSMISSION FLUID, SERVICE MAINTENANCE	8.800
TRIM CAP, TRANSMISSION SHIFT INDICATOR	4.022
TRIM DISC, INSTRUMENT CLUSTER	9.745
TRIM PANEL, LICENSE PLATE MOUNTING	7.800
TROUGH, WIRING HARNESS	2.559
TRUNNION AND PIN, TRANSMISSION SHIFT CONTROL ROD	4.037
TUBE, AIR INJECTION REACTOR	3.675
TUBE ASSY., CARBURETOR IDLE	3.818
TUBE ASSY., TRANSMISSION SHIFT CONTROL	4.025
TUBE, BATTERY CABLE OR STRAP	2.343
TUBE, BLOWER MOTOR COOLING OUTLET	9.218
TUBE, CARBURETOR FLOAT BOWL	3.734
TUBE, CHOKE AIR OR HEATER	3.603
TUBE, CLIMATIC COMBUSTION CONTROL	3.417
TUBE, COMPRESSOR OIL PUMP	9.172
TUBE, ENGINE CRANKCASE OIL FILLER	1.745
TUBE, ENGINE CRANKCASE VENTILATION	1.762
TUBE, ENGINE OIL LEVEL INDICATOR	1.516
TUBE, EVAPORATOR BLOWER	9.215
TUBE, HEATER BLOWER MOTOR	8.857
TUBE KIT, AIR CONDITIONER EVAPORATOR BLEED	9.220
TUBE KIT, COMPRESSOR	9.172
TUBE KIT, TURBO CARBURETOR BOOST PRESSURE OR LIMIT	3.374
TUBE KIT, TURBO FLUID & WATER	3.372
TUBE, OUTSIDE AIR VENTILATING	9.787
TUBE PKG., STEERING TIE ROD	6.232
TUBE, POWER ANTENNA	9.647
TUBE, POWER BRAKE VACUUM LINE	4.931
TUBE, REAR AXLE	5.387
TUBE, STEERING COLUMN	6.518
TUBE, STEERING TIE ROD	6.232
TUBE, THROTTLE RETURN CHECK OR DASHPOT	3.440
TUBE, TOUCH-UP PAINT (ONE HALF OUNCE)	8.800
TUBE, TRANSMISSION HAND SHIFT LEVER	4.006
TUBING, HYDRAULIC BRAKE	4.685
TUBING	8.964
TUBING, SUPERLIFT SHOCK ABSORBER (AUTOMATIC FILL)	7.346
TUBING, SUPERLIFT SHOCK ABSORBER (MANUAL FILL)	7.346

U

U BOLT, EXHAUST SYSTEM ATTACHING	3.708
U BOLT, PROPELLER SHAFT REAR FLANGE	5.545
U BOLT, REAR SUSPENSION ARM	5.383
U BOLT, REAR SUSPENSION LEAF SPRING TO AXLE HOUSING	7.516
UNDER COATING, BODY MAINTENANCE	8.800
UNION, FUEL LINE	8.963
UNION, STEERING OIL HOSE COUPLING	6.673
UNION, TRANSMISSION AUXILIARY COOLER	4.128
UNION, WHEEL LOCK CONTROL	4.740

V

VACUUM KIT, ENGINE EXHAUST EMISSION CONTROL	2.408
VACUUM SOURCE PKG., TRANSMISSION VACUUM MODULATOR	4.205
VACUUM UNIT, CARBURETOR DISTRIBUTOR VACUUM HOSE FITTING	3.764
VALVE, AIR CONDITIONING CONTROL	9.275
VALVE ASSY., AIR INJECTION REACTOR BLEED INJECTION & RELIEF	3.670
VALVE ASSY., CARBURETOR IDLE COMPENSATOR	3.820
VALVE ASSY., HEADLAMP ACTUATOR VACUUM	2.755
VALVE ASSY., POWER BRAKE AIR VALVE	4.918
VALVE ASSY., STEERING GEAR HYDRAULIC	6.550
VALVE ASSY., STEERING OIL PUMP FLOW CONTROL	6.624
VALVE ASSY., SUPERLIFT SHOCK ABSORBER HEIGHT CONTROL (AUTOMATIC FILL)	7.475
VALVE ASSY., TRANSMISSION COAST DOWNSHIFT TIMING	4.234
VALVE BODY ASSY., TRANSMISSION OIL CONTROL	4.265
VALVE BODY, CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
VALVE, BRAKE BALANCING & METERING VALVE	4.690
VALVE, BRAKE LINE (FRONT)	4.874
VALVE, CARBURETOR CHOKE	3.752
VALVE, CARBURETOR CHOKE	3.751
VALVE, CARBURETOR DEPRESSURE	3.372
VALVE, CARBURETOR IDLE VENT	3.852
VALVE, CARBURETOR POWER	3.858
VALVE, CARBURETOR THROTTLE	3.758
VALVE, COLD AIR DISTRIBUTION	9.257
VALVE, COLD AIR	9.264
VALVE, COMPRESSOR	9.172
VALVE, COMPRESSOR PRESSURE RELIEF	9.178
VALVE, COMPRESSOR	9.177
VALVE, CRANKCASE VENTILATION	1.745
VALVE, CRUISE CONTROL SELECTOR	3.883
VALVE, ENGINE OIL FILTER	1.837
VALVE, ENGINE OIL PUMP PRESSURE	1.609
VALVE, FRONT DRIVE	6.055
VALVE, FUEL INTAKE MANIFOLD	3.265
VALVE, HEADLAMP OR GRILLE	2.760
VALVE, HEATER BLOWER MOTOR	8.857
VALVE, HEATER CONTROL	8.852
VALVE, HEATER HOSE TO ENGINE	8.866
VALVE, HEATER	9.786
VALVE, HEATER	8.858
VALVE, HEATER TEMPERATURE	9.795
VALVE, HEATER VACUUM	8.850
VALVE, HEATER WATER TEMP. CONTROL	8.848
VALVE KIT, POWER BRAKE FLOATING CONTROL VALVE	4.935
VALVE KIT, WHEEL LOCK CONTROL MODULATOR	4.730
VALVE, MASTER BRAKE CYL.	4.658
VALVE, MASTER BRAKE CYL.	4.657
VALVE, MASTER BRAKE CYLINDER	4.661
VALVE, OUTSIDE AIR	9.789
VALVE, OUTSIDE AIR VENTILATING	9.787
VALVE PKG., EXHAUST MANIFOLD HEAT CONTROL	3.640
VALVE PKG., SUPERLIFT SHOCK ABSORBER COMPRESSOR ASSY.	7.460
VALVE, POWER BRAKE CYLINDER POPPET	4.928
VALVE, POWER BRAKE VACUUM CHECK	4.955
VALVE, REFRIGERANT CONTROL MASTER SWITCH	9.280
VALVE, REFRIGERANT EXPANSION	9.213
VALVE, REFRIGERANT INTAKE & DISCHARGE	9.226

VALVE & SHAFT, HEATER CORE	8.854
VALVE, SUCTION THROTTLING (P.O.A.)	9.198
VALVE, SUPERLIFT SHOCK ABSORBER (MANUAL FILL)	7.346
VALVE, TRANSMISSION FRONT UNIT TORUS	4.155
VALVE, TRANSMISSION MAIN	4.121
VALVE, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216
VALVE, TRANSMISSION OIL PUMP PRIMING	4.203
VALVE, TRANSMISSION OIL CONTROL VALVE BODY	4.265
VALVE, TRANSMISSION OIL PUMP	4.226
VALVE, TRANSMISSION SERVO TRIMMER & ACCUMULATOR	4.230
VALVE, TRANSMISSION STATOR CONTROL	4.122
VALVE, TRANSMISSION VACUUM MODULATOR	4.205
VALVE, TURBO COMPRESSOR	3.344
VALVE, TURBO EXHAUST BY-PASS	3.352
VALVE, TURBO VACUUM CHECK	3.374
VALVE, V8 ENGINE EXHAUST VALVE	0.297
VALVE, V8 ENGINE INTAKE VALVE	0.296
VALVE, WHEEL BRAKE CYLINDER BLEEDER	4.666
VALVE, WINDSHIELD DEFROSTER	9.779
VALVE, 6 CYLINDER ENGINE INTAKE VALVE	0.296
VALVE, 6 CYLINDER ENGINE EXHAUST	0.297
VANE ASSY., AIR INJECTION REACTOR PUMP	3.665
VANE, HEATER	8.858
VANE KIT, STEERING OIL PUMP	6.610
VENT, REAR AXLE	5.387
VENT, REAR AXLE HOUSING OR FINAL DRIVE	5.398
VENT, TRANSMISSION	4.104
VENTURI CLUSTER, CARBURETOR	3.786

W

WASHER, ACCELERATOR PEDAL	3.454
WASHER, AIR CONDITIONING VAC. & TEMP. CONTROL	9.281
WASHER, BATTERY CABLE OR STRAP	2.343
WASHER, BATTERY HOLD-DOWN	2.334
WASHER, BATTERY	2.345
WASHER, BODY TO FRAME BOLT	9.011
WASHER, BRAKE HOSE TO WHEEL CYLINDER	4.671
WASHER, BRAKE SHOE ADJUSTING	5.110
WASHER, BRAKE SHOE HOLD-DOWN	5.043
WASHER, CARBURETOR ACTUATING	3.762
WASHER, CARBURETOR CHOKE	3.752
WASHER, CARBURETOR FAST IDLE	3.768
WASHER, CARBURETOR FAST IDLE	3.766
WASHER, CARBURETOR PUMP	3.842
WASHER, CARBURETOR SLOW-IDLE DASHPOT OR RETURN CHECK	3.444
WASHER, CARBURETOR THROTTLE LEVER, VALVE OR SLOW IDLE STOP	3.761
WASHER, CLUTCH PEDAL ATTACHING	0.837
WASHER, CLUTCH PEDAL RETURN SPRING	0.846
WASHER, CLUTCH RELEASE	0.852
WASHER, CLUTCH RELEASE EQUALIZER	0.851
WASHER, CLUTCH RELEASE UPPER ROD	0.854
WASHER, CLUTCH RELEASE UPPER	5.158
WASHER, COLD AIR	9.264
WASHER, COMPRESSOR MOUNTING	9.171
WASHER, COMPRESSOR PULLEY	9.181
WASHER, CRUISE CONTROL ACTUATING	3.885
WASHER, CRUISE CONTROL REGULATOR	3.885
WASHER, CRUISE CONTROL SELECTOR	3.883
WASHER, CYLINDER HEAD ATTACH.	0.293
WASHER, DELCOTRON ADJUSTING	2.317
WASHER, DELCOTRON BRUSH HOLDER	2.291
WASHER, DELCOTRON DRIVE END BEARING	2.307
WASHER, DELCOTRON MOUNTING	2.277
WASHER, DELCOTRON ROTOR SHAFT	2.280

WASHER, DIFFERENTIAL OR FINAL DRIVE SIDE GEAR THRUST	5.543
WASHER, DIFFERENTIAL OR FINAL DRIVE PINION THRUST	5.542
WASHER, DIFFERENTIAL OR FINAL DRIVE PINION SHAFT LOCK	5.518
WASHER, DIFFERENTIAL OR FINAL DRIVE SIDE	5.528
WASHER, ENGINE CRANKSHAFT BALANCER OR PULLEY	0.662
WASHER, ENGINE MOUNT ATTACHING	0.002
WASHER, ENGINE MOUNT ATTACHING	0.029
WASHER, ENGINE R.P.M. (INST. PANEL CLUSTER)	9.750
WASHER, ENGINE VALVE PUSH ROD COVER TO BLOCK	0.446
WASHER, ENGINE VALVE ROCKER SHAFT	0.373
WASHER, ENGINE WATER (ON ENGINE)	1.153
WASHER, EXHAUST MUFFLER	3.704
WASHER, EXHAUST PIPE TO MANIFOLD	3.613
WASHER, FINAL DRIVE MOUNTING	5.500
WASHER, FINAL DRIVE PINION GEAR OR SHAFT	5.513
WASHER, FINISHING	8.930
WASHER, FRONT AXLE SHAFT HUB	6.063
WASHER, FRONT BRAKE BACKING PLATE TO STRG. KNUCKLE	5.002
WASHER, FRONT BUMPER BAR ATTACHING	7.836
WASHER, FRONT DRIVE AXLE SHAFT	6.056
WASHER, FRONT FENDER FILLER	8.160
WASHER, FRONT FENDER	8.143
WASHER, FRONT FENDER TRIM	8.147
WASHER, FRONT PRIMARY BUMPER BAR	7.831
WASHER, FRONT SUSPENSION MOUNTING CROSS	7.010
WASHER, FRONT WHEEL HUB	6.321
WASHER, FRONT WHEEL UPPER CONTROL ARM	6.178
WASHER, FUEL PUMP MOUNTING	3.901
WASHER, FUEL TANK MOUNTING	3.023
WASHER, HEADLAMP HOUSING OR GRILLE	2.765
WASHER, HEADLAMP MOUNTING	2.720
WASHER, HEATER	8.858
WASHER, HEATER HOSE TO ENGINE	8.866
WASHER, HEATER WATER TEMP. CONTROL	8.848
WASHER, HOOD HINGE ATTACHING	8.016
WASHER, HOOD PANEL	8.024
WASHER, HOOD RELEASE	8.080
WASHER, IGNITION COIL MOUNTING	2.183
WASHER, IGNITION DISTRIBUTOR BREAKER	2.385
WASHER, IGNITION DISTRIBUTOR DRIVE GEAR	2.379
WASHER, IGNITION DISTRIBUTOR	2.364
WASHER, IGNITION LOCK	2.188
WASHER, IGNITION SWITCH WARNING OR LOCK	2.195
WASHER, INSTRUMENT CLUSTER	9.743
WASHER, INTAKE & EXHAUST MANIFOLD	3.275
WASHER, LICENSE LAMP	2.705
WASHER, MASTER BRAKE CYL. PUSH ROD	4.659
WASHER, MASTER BRAKE CYLINDER	4.662
WASHER, MASTER BRAKE CYL.	4.657
WASHER, MASTER BRAKE PEDAL MOUNTING	4.634
WASHER PKG., TRANSMISSION HAND SHIFT LOWER (FLOOR SHIFT TYPE TRANS.)	4.004
WASHER PKG., TRANSMISSION OVERHAUL	4.005
WASHER, PLAIN	8.929
WASHER, POWER BRAKE POWER CYLINDER	4.922
WASHER, POWER BRAKE POWER PISTON	4.924
WASHER, PROPELLER SHAFT CENTER BEARING	5.601
WASHER, PROPELLER SHAFT UNIVERSAL JOINT COMPANION (AXLE END)	5.545
WASHER, RADIATOR CORE SUPPORT	1.270
WASHER, RADIO	9.649
WASHER, REAR AXLE CONTROL ARM FRAME	5.380
WASHER, REAR BUMPER ATTACHING	7.836

WASHER, REAR BUMPER BAR ATTACHING	7.865	VALVE BODY	4.265
WASHER, REAR SPRING	7.545	WASHER, TRANSMISSION OIL PUMP	4.226
WASHER, REAR SUSPENSION ARM	5.383	WASHER, TRANSMISSION OIL PUMP INLET SUCTION	4.222
WASHER, REAR UNIVERSAL JOINT FLANGE	5.595	WASHER, TRANSMISSION	4.081
WASHER, REAR WHEEL HUB GREASE	5.830	WASHER, TRANSMISSION PLANETARY CARRIER	4.176
WASHER, REAR WINDOW DEFOGGER (BLOWER TYPE)	9.778	WASHER, TRANSMISSION RANGE SELECTOR & PARKING LOCK	4.278
WASHER, SHOCK ABSORBER ATTACHING	7.347	WASHER, TRANSMISSION REAR	4.317
WASHER, SPARE WHEEL CLAMP BOLT	7.633	WASHER, TRANSMISSION REAR BEARING RETAINING	4.412
WASHER, SPECIAL	8.927	WASHER, TRANSMISSION REAR SERVO & ACCUMULATOR	4.241
WASHER, STARTING MOTOR ATTACHING	2.077	WASHER, TRANSMISSION REVERSE IDLER GEAR THRUST	4.437
WASHER, STARTING MOTOR THRUST	2.063	WASHER, TRANSMISSION REAR INTERNAL	4.187
WASHER, STEERING ARM & BACKING PLATE TO KNUCKLE	6.104	WASHER, TRANSMISSION REVERSE INTERNAL	4.193
WASHER, STEERING COLUMN ATTACHING	6.760	WASHER, TRANSMISSION REAR UNIT SUN	4.172
WASHER, STEERING GEAR MOUNTING	6.509	WASHER, TRANSMISSION REAR	4.177
WASHER, STEERING GEAR PITMAN SHAFT	6.855	WASHER, TRANSMISSION REAR UNIT CLUTCH	4.186
WASHER, STEERING IDLER ARM	6.896	WASHER, TRANSMISSION SECOND SPEED GEAR THRUST	4.398
WASHER, STEERING IDLER ARM SUPPORT	6.897	WASHER, TRANSMISSION SHIFT SELECTOR (INNER)	4.302
WASHER, STEERING OIL PUMP	6.655	WASHER, TRANSMISSION SHIFT SHAFT	4.313
WASHER, STEERING OIL PUMP MOUNTING	6.606	WASHER, TRANSMISSION SHIFT FORK TO SHAFT	4.312
WASHER, STEERING RELAY ROD BALL SEAT	6.885	WASHER, TRANSMISSION SHIFT LEVER	4.046
WASHER, STEERING SHAFT ANTI-THEFT	6.500	WASHER, TRANSMISSION SHIFT CONTROL ROD	4.037
WASHER, STEERING SHAFT CONNECTING	6.525	WASHER, TRANSMISSION SHIFT TUBE OR SHAFT	4.027
WASHER, STEERING SHAFT	6.521	WASHER, TRANSMISSION SHIFT TUBE LEVER	4.032
WASHER, STEERING WHEEL	6.515	WASHER, TRANSMISSION SHIFT CONTROL RELAY	4.042
WASHER, STEREO TAPE PLAYER	9.670	WASHER, TRANSMISSION SUN	4.159
WASHER, STOP & TAIL LAMP MOUNTING	2.664	WASHER, TRANSMISSION 1ST OR REVERSE GEAR	4.419
WASHERS, TRANSMISSION THRUST	4.129	WASHER, TRANS. PILOT BEARING	4.353
WASHER, SUCTION THROTTLING (P.O.A.)	9.198	WASHER, TURN SIGNAL	2.895
WASHER, TAIL PIPE OR RESONATOR MOUNTING	3.706	WASHER, TURN SIGNAL SWITCH ACTUATOR	2.906
WASHER, THROTTLE CONTROL	3.463	WASHER, TURN SIGNAL SWITCH LEVER	2.910
WASHER, THROTTLE ROD	3.425	WASHER, UNIVERSAL JOINT SPIDER BEARING	5.560
WASHER, TORSION BAR	7.105	WASHER, VALVE PUSH ROD ADJUSTING (ON ROCKER ARM)	0.429
WASHER, TRANSMISSION CASE	4.162	WAVE WASHER, STEERING GEAR HOUSING THRUST (STANDARD COLUMN)	6.514
WASHER, TRANSMISSION CASE FRONT	4.123	WAVE WASHER, TILT WHEEL	6.514
WASHER, TRANSMISSION CLUTCH	4.169	WEDGE, HOOD PANEL	8.024
WASHER, TRANSMISSION CLUTCH	4.164	WEDGE, STEERING COLUMN ATTACHING	6.760
WASHER, TRANSMISSION CONTROL OR BACK DRIVE (TRANS. LINKAGE LOCKING)	4.070	WEDGE, STEERING SHAFT CONNECTING	6.525
WASHER, TRANSMISSION COUNTERSHAFT GEAR THRUST	4.442	WEIGHT, FLUID METERING VALVE	3.366
WASHER, TRANSMISSION COUNTERSHAFT GEAR OR BEARING	4.423	WEIGHT, IGNITION DISTRIBUTOR ADVANCE	2.388
WASHER, TRANSMISSION COUNTERSHAFT GEAR	4.426	WEIGHT, WHEEL BALANCE	5.805
WASHER, TRANSMISSION FRONT SERVO & ACCUMULATOR	4.228	WHEEL ASSY., STEERING WHEEL (LESS EMBLEM, SHROUD OR SWITCH)	6.513
WASHER, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.229	WHEEL, CAR (STEEL-PRIMED-CHROME-PAINTED)	5.803
WASHER, TRANSMISSION FRONT SERVO & ACCUMULATOR PISTON	4.233	WHEEL, RIM BLOWER STEERING WHEEL	6.513
WASHER, TRANSMISSION FRONT UNIT TORUS	4.156	WHEEL, STEERING WHEEL (WITH SHROUD)	6.513
WASHER, TRANSMISSION GOVERNOR	4.256	WICK, IGNITION DISTRIBUTOR	2.364
WASHER, TRANSMISSION HAND SHIFT LEVER	4.008	WICK PKG., IGNITION DISTRIBUTOR	2.364
WASHER, TRANSMISSION HAND SHIFT LEVER	4.010	WINDOW, INSTRUMENT CLUSTER	9.744
WASHER, TRANSMISSION HAND SHIFT LEVER HOUSING OR BRACKET	4.012	WIRE ASSY., CRUISE CONTROL REGULATOR ELECTRICAL ACTUATING	3.887
WASHER, TRANSMISSION INPUT RING	4.158	WIRE ASSY., ENGINE OIL PRESSURE GAUGE	1.800
WASHER, TRANSMISSION INTERMEDIATE	4.168	WIRE ASSY., FUEL TANK GAUGE	2.480
WASHER, TRANSMISSION INNER CONTROL LEVER	4.282	WIRE ASSY., IGNITION COIL TO DISTRIBUTOR	2.171
WASHER, TRANSMISSION MAIN DRIVE GEAR OIL	4.374	WIRE ASSY., SPARK PLUG INDIVIDUAL	2.240
WASHER, TRANSMISSION MAIN DRIVE GEAR BEARING	4.376	WIRE ASSY., WHEEL LOCK CONTROL	4.720
WASHER, TRANSMISSION MAIN SHAFT	4.173	WIRE ASSY., WIPER & WASHER DEMAND JUMPER	2.480
WASHER, TRANSMISSION MOUNTING	4.085		
WASHER, TRANSMISSION OIL COOLER (PRESSURE REGULATOR OR MODULATOR)	4.216		
WASHER, TRANSMISSION OIL COOLING (STANDARD COOLING)	4.128		
WASHER, TRANSMISSION OIL CONTROL			

WIRE, BACK-UP LAMP	2.697
WIRE, EVAPORATOR	9.211
WIRE, FUSE BLOCK TO AMPLIFIER HARNESS	2.480
WIRE, HEATER CONTROL LIGHT SOCKET . . .	2.480
WIRE, IGNITION SWITCH	2.198
WIRE, MASTER BRAKE CYL. PISTON	4.656
WIRE, OUTSIDE AIR VENTILATING	9.787
WIRE, REAR WINDOW ELECTRIC DEFOGGER (ON GLASS)	9.778
WIRE, STARTING MOTOR SWITCH	2.102
WIRE, TRANSMISSION RANGE SELECTOR OR SHIFT	4.275
WIRE, WINDSHIELD ANTENNA	9.647
WIRING, FUEL TANK GAUGE	3.115
WIRING SET, SPARK PLUG TO DISTRIBUTOR	2.239
WORM, STEERING SHAFT	6.524
WRENCH, JACK HANDLE & WHEEL WRENCH	8.821

Y

YOKE ASSY., PROPELLER SHAFT UNIVERSAL JOINT	5.548
YOKE ASSY., UNIVERSAL JOINT FRONT SLEEVE	5.555
YOKE, CLUTCH RELEASE FORK	0.795
YOKE, COMPRESSOR MOUNTING	9.171
YOKE KIT, PROPELLER SHAFT UNIVERSAL JOINT	5.548
YOKE, STEERING SHAFT	6.524
YOKE, TRANSMISSION FLOOR SHIFT	4.047
YOKE, TRANSMISSION SHIFTING	4.303
YOKE, TURN SIGNAL SWITCH LEVER	2.910

ACCESSORY REFERENCE PARTS LIST

Special Note-Serviceable parts of accessory units will be found in package group unless otherwise noted.

70	F85 (9.645)	983115	1	6.10	ANTENNA PKG. (Manual)
70	Tor. (9.645)	983118	1	7.50	ANTENNA PKG. (Manual)
72	3269-87, 3669-77-87 (4.898)	983297	1	51.55	BRAKE PKG., power
70-72	F85 exc. Rally Pack (9.772)	983151	1	18.90	CLOCK PKG., electric
71-72	5400, 6400, 6800 (9.772)	983202	1	19.90	CLOCK PKG., electric
73*	All X (9.772)	994125	1	16.90	CLOCK PKG., electric
73*	All A (9.772)	983362	1		CLOCK PKG., electric
73	All B (9.772)	983202	1	19.90	CLOCK PKG., electric
60-72	All (8.800)	987570	1	1.23	CLOTH, G.M. polishing (carton of 12)
60-72	All (8.800)	982993	AR		CLOTH, G.M. polishing (carton of 100)
71-73	All	983335	1	6.95	COMPASS (w/shield)
72	F85 (3.880)	983299	1	61.00	CRUISE CONTROL PKG., also order 983330 pkg. ..
72	5400, 6400, 6800, 98 exc. T & T/wh. (3.880) ..	983326	1	66.10	CRUISE CONTROL PKG., for 2 BC also order 983330 pkg.
72	98 T & T/wh. (3.880)	983327	1	66.10	CRUISE CONTROL PKG.
72	Tor. exc. T & T/wh. (3.880)	983328	1	66.10	CRUISE CONTROL PKG.
72	Tor. T & T/wh. (3.880) ..	983329	1	66.10	CRUISE CONTROL PKG.
73*	All B, C exc. Opt. N37 (3.880)	983384	1		CRUISE CONTROL PKG.
73*	All C Opt. N37 (3.880) ..	983385	1		CRUISE CONTROL PKG.
73*	All E exc. Opt. N37 (3.880)	983373	1		CRUISE CONTROL PKG.
73*	All E Opt. N37 (3.880) ...	983374	1		CRUISE CONTROL PKG.
72	F85, 5400, 6400, 6800 2 BC	983330	1	3.02	CRUISE CONTROL ADAPTER PKG.
68-72	F85 S.W., V.C. (12.180) .	983101	1	19.20	DEFLECTOR PKG., rear roof air
73	AJ35 (12.180)	983379	1		DEFLECTOR PKG., rear window air
70	Tor. exc. E.W.D. (9.778) .	983182	1	27.85	DEFOGGER PKG., rear window (blower type)
71-72	F85 exc. Conv., S.W. or V.C. (9.778)	983207	1	30.65	DEFOGGER PKG., rear window-blower type
71	5400, 6400, 6600, 98 (9.778)	983208	1	30.65	DEFOGGER PKG., rear window-blower type
72	5400, 6400, 98 exc. Conv. (9.778)	983324	1	30.65	DEFOGGER PKG., rear window (blower type)
71-72	F85 (5.871)	983193	1	63.05	DISC PKG., dlx. (14" wheel) (P02)
72	F85 (5.871)	983286	1	27.30	DISC PKG., std. (14" wheel)
72	5400, 6400, 6800, 98 (5.871)	983287	1	65.60	DISC PKG., dlx. (15" wheel)
73*	All X, A (5.871)	983360	1		DISC PKG., std.-14" wheel
73*	All B, C (5.871)	983361	1		DISC PKG., dlx.-15" wheel
50-72	All (8.891)	983191	1	6.10	DISPENSER & LITTER CONTAINER, tissue & litter carrier
71-73	Manual or Bench Seat (8.891)	981799	1	4.36	TISSUE DISPENSER, underseat
71-73	Exc. 6 Way Power Seat (8.891)	981798	1	4.05	LITTER CONTAINER, underseat
71-72	F85 (7.828)	983231	1	15.40	GUARD PKG., frt. bumper
73*	AF, AG (7.828)	983375	1		GUARD PKG., front
73*	AJ (7.828)	983376	1		GUARD PKG., front
71-72	F85 exc. Wagons (7.828)	983232	1	15.40	GUARD PKG., rear bumper
73*	AF, AG, AJ29-57 (7.828)	983377	1		GUARD PKG., rear
73*	AJ (7.828)	983378	1		GUARD PKG., rear
60-73	All (14.870)	994259	1	11.95	CARRIER, infant (seat belts required)
70-71	F85 exc. Rally Pack (2.485)	983187	1	20.50	CONTROL PKG., headlamp off-delay
72	Exc. F85 (2.485)	983298	1	20.50	CONTROL, headlamp off-delay

73	All B, C, E (2.485)	983298	1	20.50	CONTROL, headlamp off-delay
71-72	Exc. F85 (3.108)	983260	1	11.30	INDICATOR, low fuel
62-73	All (9.773)	987112	1	8.35	LAMP, portable spot
70-72	F85 (10.275)	983150	1	1.69	LAMP, glove compt.
70	F85 exc. Conv. (10.275)	983153	1	7.60	LAMP, courtesy & map
71-72	F85 exc. Conv. or Sport Coupe (10.275)	983153	1	7.60	LAMP, courtesy & map
73	BL (10.275)	983203	1	3.95	LAMP, courtesy & map
71-72	5400 (10.275)	983203	1	3.95	LAMP PKG., courtesy & map
71-72	5400, 6400, 6800 (10.275)	983205	1	2.56	LAMP PKG., glove box
73	BL, BQ, BR (10.275)	983205	1	2.56	LAMP, glove box
72	All (8.890)	983323	1	3.02	LAMP, underhood
71-72	F85 exc. S.W. or V.C. (9.988)	983279	1	3.02	LAMP, trunk compartment
71-72	5400, 6400, 6600 (9.988)	983266	1	3.02	LAMP, trunk compartment
70	Exc. V.C. or S.W. (12.243)	983181	1	14.85	LATCH PKG., trunk lid electric release
71-72	F85 exc. S.W. or V.C. (12.243)	983181	1	14.85	LATCH PKG., trunk lid electric release
72	5400, 6400, 98 (12.243)	983332	1	14.85	LATCH PKG., trunk lid electric release
71-72	Exc. Tor. (10.559)	983229	1	27.60	LOCK PKG., door guard (carton of 6)
72	F85 (8.075)	983300	1	11.00	LOCK PKG., hood control
68-72	F85 S.W. & V.C. (12.815)	982997	1	35.00	SKI RACK ADAPTER PKG., roof top (use with 983105, 983106)
71-72	6800	982997	1	35.00	SKI RACK ADAPTER PKG., roof top (use with 994158)
71-72	6800 (12.815)	983285	1	4.41	SKI RACK ADAPTER PKG. (use to mount 982997 rack on 994158)
68-72	F85 S.W. (12.815)	983105	1	54.10	LUGGAGE CARRIER PKG., roof top
68-72	4800 (12.815)	983106	1	54.10	LUGGAGE CARRIER PKG., roof top
71-72	6800 (12.815)	994158	1		LUGGAGE CARRIER, roof top
68-72	F85 S.W. exc. V.C. (12.815)	983013	1	37.35	LUGGAGE CARRIER RAK PAK (use with 983105) ..
68-72	V.C. (12.815)	983014	1	37.35	LUGGAGE CARRIER RAK PAK (use with 983106) ..
71-72	6800 (12.815)	983013	1	37.35	LUGGAGE CARRIER RAK PAK (use with 994158) ..
68-72	F85 (15.286)	982912	1	7.60	MAT PKG., front floor (pair-Black)
71	F85 (15.286)	983273	1	7.60	MAT PKG., front floor (pair-Beige)
71-72	F85 (15.286)	983243	1	7.60	MAT PKG., front floor (pair-Blue)
71-72	5400, 6400, 6600, 6800, 98 (15.286)	983209	1	8.60	MAT PKG., front floor (pair-Black)
71-72	5400, 6400, 6600, 6800, 98 (15.286)	983211	1	8.60	MAT PKG., front floor (pair-Blue)
72	F85 (15.286)	983301	1	7.60	MAT PKG., front floor (pair-Green)
72	F85 (15.286)	983302	1	7.60	MAT PKG., front floor (pair-Covert)
72	F85 (15.286)	983303	1	7.60	MAT PKG., front floor (pair-Saddle)
72	5400, 6400, 6800, 98 (15.286)	983307	1	8.60	MAT PKG., front floor (pair-Pewter)
72	5400, 6400, 6800, 98 (15.286)	983308	1	8.60	MAT PKG., front floor (pair-Green)
72	5400, 6400, 6800, 98 (15.286)	983309	1	8.60	MAT PKG., front floor (pair-Covert)
72	5400, 6400, 6800, 98 (15.286)	983310	1	8.60	MAT PKG., front floor (pair-Saddle)
73	All B, C (15.286)	983209	1	8.60	MAT PKG., front floor (pair-Black)
73*	All B, C (15.286)	983336	1		MAT PKG., front floor (pair-Dark Green)
73*	All B, C (15.286)	983337	1		MAT PKG., front floor (pair-Dark Blue)
73*	All B, C (15.286)	983338	1		MAT PKG., front floor (pair-Dark Chamois)
73*	All B, C (15.286)	983339	1		MAT PKG., front floor (pair-Dark Oxblood)
73*	All B, C (15.286)	983340	1		MAT PKG., front floor (pair-Mid Neutral)
73*	All B, C (15.286)	983341	1		MAT PKG., front floor (pair-Dark Saddle)
67-70	Exc. Tor. (15.286)	982905	1	9.60	MAT PKG., front floor (full width-Black)
71-73	Tor. (15.286)	983219	1	10.15	MAT PKG., front floor (full width-Black)
71-72	Tor. (15.286)	983220	1	10.15	MAT PKG., front floor (full width-Blue)
72	Tor. (15.286)	983315	1	10.15	MAT PKG., front floor (full width-Pewter)

72	Tor. (15.286)	983316	1	10.15	MAT PKG., front floor (full width-Green)
72	Tor. (15.286)	983317	1	10.15	MAT PKG., front floor (full width-Covert)
72	Tor. (15.286)	983318	1	10.15	MAT PKG., front floor (full width-Saddle)
73*	All E (15.286)	983348	1		MAT PKG., full front floor (Dark Green)
73*	All E (15.286)	983349	1		MAT PKG., full front floor (Dark Blue)
73*	All E (15.286)	983350	1		MAT PKG., full front floor (Dark Chamois)
73*	All E (15.286)	983351	1		MAT PKG., full front floor (Dark Dxblood)
73*	All E (15.286)	983352	1		MAT PKG., full front floor (Mid Neutral)
73*	All E (15.286)	983353	1		MAT PKG., full front floor (Dark Saddle)
72	Tor. (15.306)	983319	1	7.50	MAT PKG., rear floor (full width-Pewter)
72	Tor. (15.306)	983320	1	7.50	MAT PKG., rear floor (full width-Green)
72	Tor. (15.306)	983321	1	7.50	MAT PKG., rear floor (full width-Covert)
72	Tor. (15.306)	983322	1	7.50	MAT PKG., rear floor (full width-Saddle)
73*	All E (15.306)	983354	1		MAT PKG., full rear floor (Dark Green)
73*	All E (15.306)	983355	1		MAT PKG., full rear floor (Dark Blue)
73*	All E (15.306)	983356	1		MAT PKG., full rear floor (Dark Chamois)
73*	All E (15.306)	983357	1		MAT PKG., full rear floor (Dark Oxblood)
73*	All E (15.306)	983358	1		MAT PKG., full rear floor (Mid Neutral)
73*	All E (15.306)	983359	1		MAT PKG., full rear floor (Dark Saddle)
66-70	Exc. Tor. (15.306)	982925	1	7.60	MAT PKG., rear floor (pair-Black)
71-72	F85 (15.306)	982925	1	7.60	MAT PKG., rear floor (pair-Black)
71-72	F85 (15.306)	983246	1	7.60	MAT PKG., rear floor (pair-Blue)
71	F85 (15.306)	983274	1	7.60	MAT PKG., rear floor (pair-Beige)
71-72	5400, 6400, 6600, 6800, 98 (15.306)	983214	1	7.60	MAT PKG., rear floor (pair-Black)
71-72	5400, 6400, 6600, 6800, 98 (15.306)	983216	1	7.60	MAT PKG., rear floor (pair-Blue)
71-73	Tor. (15.306)	983224	1	7.50	MAT PKG., rear floor (pair-Black)
71-72	Tor. (15.306)	983225	1	7.50	MAT PKG., rear floor (pair-Blue)
72	F85 (15.306)	983304	1	7.60	MAT PKG., rear floor (pair-Green)
72	F85 (15.306)	983305	1	7.60	MAT PKG., rear floor (pair-Covert)
72	F85 (15.306)	983306	1	7.60	MAT PKG., rear floor (pair-Saddle)
72	5400, 6400, 6800, 98 (15.306)	983311	1	7.60	MAT PKG., rear floor (pair-Pewter)
72	5400, 6400, 6800, 98 (15.306)	983312	1	7.60	MAT PKG., rear floor (pair-Green)
72	5400, 6400, 6800, 98 (15.306)	983313	1	7.60	MAT PKG., rear floor (pair-Covert)
72	5400, 6400, 6800, 98 (15.306)	983314	1	7.60	MAT PKG., rear floor (pair-Saddle)
73	All B, C (15.306)	983214	1	7.60	MAT PKG., rear floor (pair-Black)
73*	All B, C (15.306)	983342	1		MAT PKG., rear floor (pair-Dark Green)
73*	All B, C (15.306)	983343	1		MAT PKG., rear floor (pair-Dark Blue)
73*	All B, C (15.306)	983344	1		MAT PKG., rear floor (pair-Dark Chamois)
73*	All B, C (15.306)	983345	1		MAT PKG., rear floor (pair-Dark Oxblood)
73*	All B, C (15.306)	983346	1		MAT PKG., rear floor (pair-Mid Neutral)
73*	All B, C (15.306)	983347	1		MAT PKG., rear floor (pair-Dark Saddle)
67-70	Exc. Tor. or S.W. (15.294)	982818	1	8.10	MAT PKG., trunk floor
71-72	Exc. S.W. (15.294)	982818	1	8.10	MAT PKG., trunk floor
70	Tor. (10.185)	983138	RH	7.45	MIRROR PKG., outside
70-72	F85 (10.185)	983138	RH	7.45	MIRROR, outside
71-72	5400, 6400, 6600 (10.185)	983268	RH	7.45	MIRROR, outside
70-72	F85 (10.185)	983137	LH	16.15	MIRROR PKG., remote control
71-72	Exc. F85 (10.185)	983280	RH	11.80	MIRROR PKG. (matches L.H.-983269)
71-72	5400, 6400, 6600 (10.185)	983269	LH	16.15	MIRROR PKG., remote control
71-72	F85 2 Drs. exc. Conv. (10.185)	983275	1-2	25.40	MIRROR PKG., sport remote control (LH & RH)
71-72	All (10.195)	983267	2	2.20	MIRROR PKG., visor vanity
70-72	F85 2 Dr. (10.352)	983108	1	6.10	MOLDING PKG., door edge guard
70-72	F85 4 Dr. exc. V.C. (10.352)	983109	1	9.40	MOLDING PKG., door edge guard
70-72	V.C. (10.352)	983110	1	9.40	MOLDING PKG., door edge guard
71-72	2 Drs. exc. F85 (10.352)	983262	1	6.10	MOLDING PKG., door edge guard
71-72	5400, 6400, 6600 4 Drs. (10.352)	983263	1	9.40	MOLDING PKG., door edge guard
71-72	6800, 98 4 Drs. (10.352)	983264	1	9.40	MOLDING PKG., door edge guard
71-72	Tor. (10.352)	983261	1	6.10	MOLDING PKG., door edge guard

71-72	All (8.147)	989030	1	30.00	MLDG. KIT, body side-Black
71-72	All (8.147)	989031	1	30.75	MLDG. KIT, body side-White
71-72	All (8.147)	989032	1	30.75	MLDG. KIT, body side-Light Blue
71-72	All (8.147)	989033	1	30.75	MLDG. KIT, body side-Dark Blue
71-72	All (8.147)	989034	1	30.75	MLDG. KIT, body side-Dark Green
71-72	All (8.147)	989035	1	30.75	MLDG. KIT, body side-Tan
71-72	All (8.132)	981817	AR	25.55	MLDG. KIT, body side-Black (38 ft. roll)
71-72	All (8.132)	981818	AR	25.55	MLDG. KIT, body side-Tan (38 ft. roll)
71-72	All (8.132)	981819	AR	25.55	MLDG. KIT, body side-Dark Green (38 ft. roll)
71-72	All (8.132)	981820	AR	25.55	MLDG. KIT, body side-Dark Blue (38 ft. roll)
71-72	All (8.132)	981821	AR	25.55	MLDG. KIT, body side-Pewter (38 ft. roll)
71-72	All (8.132)	989092	AR	30.75	MLDG. KIT, body side-Citron Gold (38 ft. roll)
71-72	All (8.132)	989093	AR	30.75	MLDG. KIT, body side-Red (38 ft. roll)
71-72	All (8.132)	989094	AR	30.75	MLDG. KIT, body side-Gold (38 ft. roll)
71-72	All (8.132)	989114	AR		MLDG. KIT, body side-White (38 ft. roll)
71-72	All (8.132)	989115	AR		MLDG. KIT, body side-Light Blue (38 ft. roll)
71-72	All (8.132)	989116	AR		MLDG. KIT, body side-Light Green (38 ft. roll)
71-72	All (8.132)	989117	AR		MLDG. KIT, body side-Light Tan (38 ft. roll)
71	F85 (9.650)	983289	1	225.15	RADID (AM-FM stereophonic)
71	5400, 6400, 6600, 6800, 98 (9.650) (*1)	983292	1	225.15	RADIO (AM-FM stereo)
71	5400, 6400, 6600, 6800, 98 (9.650)	983293	1	199.60	RADIO (AM dtx. & stereo. tape player)
71	Tor. (9.650) (*1)	983293	1	199.60	RADIO, dtx. (AM & stereo. tape player)
71	Tor. (9.650) (*1)	983294	1	344.80	RADIO (AM-FM stereo. & tape player)
72	F85 (9.650)	983295	1	130.20	RADIO, AM-FM mono.
72	F85 (9.650)	983288	1	70.20	RADIO, dtx. push button
72	F85 (9.650)	983289	1	225.15	RADIO, AM-FM stereo
72	Exc. F85 (9.650)	983296	1	138.40	RADIO, AM-FM mono.
72	Exc. F85 (9.650)	983291	1	79.95	RADIO, dtx.-AM push button
72	Exc. F85 (9.650)	983292	1	225.15	RADIO, AM-FM stereo
72	Exc. F85 (9.650)	983293	1	199.60	RADIO, dtx.-AM & stereo tape player
71-72	Exc. F85 (9.650)	983294	1	344.80	RADIO, AM-FM stereo & tape player
73*	All A (9.650)	983364	1		RADIO, dtx.-AM push button
73*	All A (9.650)	983365	1		RADIO, AM-FM mono.
73*	All A (9.650) (*1)	983363	1		RADIO, AM-FM stereo
73*	All A (9.650) (*1)	983366	1		RADIO, dtx.-AM & stereo tape player
73*	All A (9.650) (*1)	983367	1		RADIO, AM-FM stereo & tape player
73*	All B, C, E (9.650)	983369	1		RADIO, dtx.-AM push button
73*	All B, C, E (9.650)	983370	1		RADIO, AM-FM mono.
73*	All B, C, E (9.650) (*1)	983368	1		RADIO, AM-FM stereo
73*	All B, C, E (9.650) (*1)	983371	1		RADIO, dtx.-AM & stereo tape player
73*	All B, C, E (9.650) (*1)	983372	1		RADIO, AM-FM stereo & tape player
(*1) Cars must have dual rear seat speakers.					
71-73	Exc. Tor. (1.219)	981766	1	10.20	RESERVOIR PKG., radiator overflow
65-71	All (14.875)	983154	1	.46	RETAINER, seat belt
71-72	F85 exc. S.W. or V.C. (9.665)	983276	1	16.40	SPEAKER PKG., rear seats
71-72	F85 S.W. & V.C. (9.665)	983277	1	16.40	SPEAKER PKG., rear
71-72	Exc. F85 or 6800 (9.665)	983271	1	16.40	SPEAKER PKG., rear seat
71-72	6800 (9.665)	983270	1	16.40	SPEAKER PKG., rear seat
69-72	F85 Club & Holiday Coupes (12.181)	983190	1	71.75	SPOILER, deck lid
70	F85 V8 (6.508)	983170	1	116.85	STEERING PKG., power
71	L6 (6.508) (*1)	983196	1	122.70	STEERING PKG., power
71	F85 V8 (6.508)	983197	1	122.70	STEERING PKG., power
72	F85 (6.508)	983325	1	122.70	STEERING PKG., power
73*	All A (6.508)	983380	1		STEERING PKG., power
71	L6 C.A.C. (6.508)	983230	1	10.85	STEERING ADAPTER PKG., power
(*1) When installing on cars with C.A.C. also order 1-983230 adapter pkg.					
72	F85 (9.670)	983290	1	119.65	STEREO TAPE PLAYER PKG.
72-73	All	983331	1	14.10	THERMOMETER PKG., exterior
71-72	Exc. Tor. (9.670)	988974	1	115.30	PLAYER, cassette
62-72	F85	983282	1	12.80	ADAPTER, cassette player
62-70	Exc. F85 or Tor.	983282	1	12.80	ADAPTER, cassette player
71-72	5400, 6400, 6600, 6800, 98	983283	1	12.80	ADAPTER, cassette player

HANDICAPPED DRIVER CONTROL PACKAGES

NOTE Miscellaneous component parts of the various packages exc. the V-5 Hand Throttle and Brake Control Packages are available from the parts warehouse in Lansing. Component parts of the 1963 thru 1966 V-5 Hand Throttle and Brake Control Packages can be ordered from Gresham Driving Aids, P.O. Box 405, 3080 Wixom Road, Wixom, Michigan 48096.

When ordering any of these component parts, please specify the following information.

- (1) Complete Description of Part Required.
- (2) Type of Control being Repaired.
- (3) Year and Model of Car.
- (4) Type of Transmission and Brakes used in Car.

Information pertaining to packages for F85, Toronado, 1967 or later models can be obtained from the Gresham Company listed above.

GROUP V-1 LOSS OF LEFT ARM

41-66	J.T., T.H. exc. F85 or Tor. (6.513)	381390	1	17.95	GRIP ASSY., steering wheel
65-66	J.T., T.H. exc. F85 or Tor. (2.880)	388672	1	15.45	LEVER PKG., turn signal switch (RH)
63-64	Exc. F85 (2.880)	381398	1	11.65	LEVER PKG., turn signal switch

GROUP V-2 LOSS OF RIGHT ARM

41-66	J.T., T.H. exc. F85 or Tor. (6.513)	381390	1	17.95	GRIP ASSY., steering wheel
65-66	J.T., T.H. exc. F85 or Tor. (4.035)	388673	1	25.70	LEVER PKG., shift (LH)

GROUP V-3 LOSS OF LEFT LEG

65-66	J.T., T.H. exc. F85 or Tor. (4.591)	388340	1	47.15	LEVER PKG., hand parking brake
61-62	Exc. F85 (2.459)	583228	1	9.85	SWITCH PKG., hand dimmer
63-64	Exc. F85 (2.459)	381775	1	10.25	SWITCH PKG., hand dimmer
65-66	J.T., T.H. exc. F85 or Tor. (2.459)	388423	1	14.30	SWITCH PKG., hand dimmer

GROUP V-4 LOSS OF RIGHT LEG

61-62	Exc. F85 (3.451)	582170	1	72.90	ACCELERATOR PKG., left foot
63-64	Exc. F85 (3.451)	381774	1	46.55	ACCELERATOR PKG., left foot
65-66	J.T., T.H. exc. F85 or Tor. (3.451)	388590	1	78.15	ACCELERATOR PKG., left foot
61-62	Exc. F85 (2.459)	583228	1	9.85	SWITCH PKG., hand dimmer
63-64	Exc. F85 (2.459)	381775	1	10.25	SWITCH PKG., hand dimmer
65-66	J.T., T.H. exc. F85 or Tor. (2.459)	388423	1	14.30	SWITCH PKG., hand dimmer

GROUP V-6 ASSIST HANDLE PACKAGE

65-66	J.T., T.H. exc. F85 or Tor. (15.390)	388413	1	40.40	HANDLE PKG.
--------------	---	---------------	---	-------	--------------------------

